


**CODING**  
- 352054

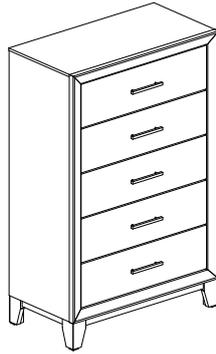


ISO 9001:2015  
Reg. No. 00905-1-2017-1-Q002

**nuhoom.com**


Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

**CAUTION**  
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

| ITEM | PHOTO   | HARDWARE NAME                 | QTY |
|------|---|-------------------------------|-----|
| (A)  |  | JCBC BOLT<br>1/4" x 1 9/16"   | 4   |
| (B)  |  | SPRING WASHER<br>1/4" x 1/2"  | 4   |
| (C)  |  | FLAT WASHER<br>1/4" x 3/4"    | 4   |
| (D)  |  | WOOD DOWEL<br>5/16" x 1 3/16" | 4   |
| (E)  |  | ALLEN KEY<br>1/4" x 2 3/8"    | 1   |
| (F)  |  | TIPPING<br>RESTRAINT KIT      | 1   |
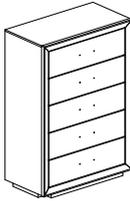
| ITEM | PHOTO  | PARTS NAME                 | QTY |
|------|--|----------------------------|-----|
| (1)  |  | Bravon<br>Tall Dresser 191 | 1   |
| (2)  |  | Leg                        | 4   |



CODING  
- 352054

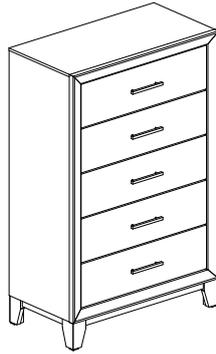




ISO 9001:2015  
Reg. No. 00900-1-107-2-Q002

nuhoom.com


1

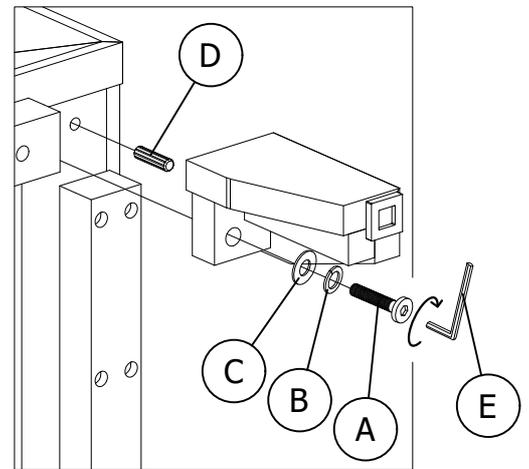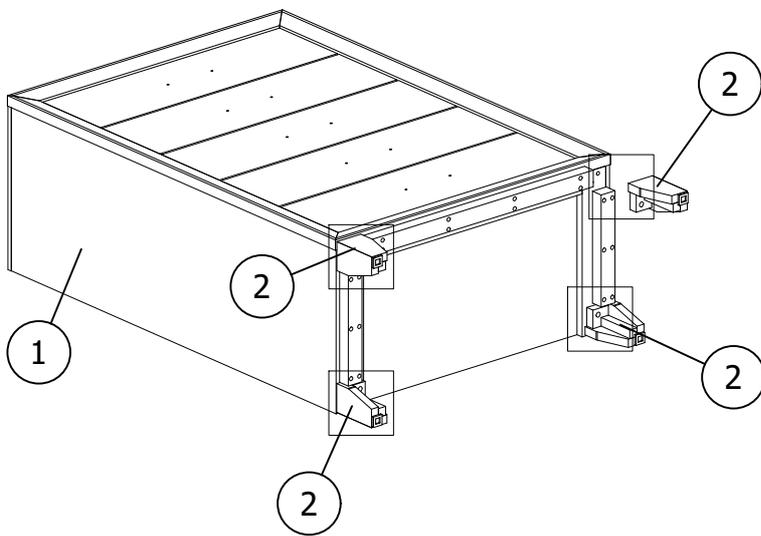

2

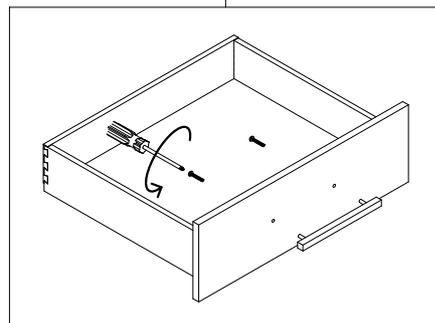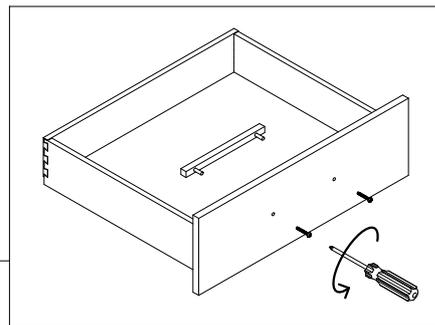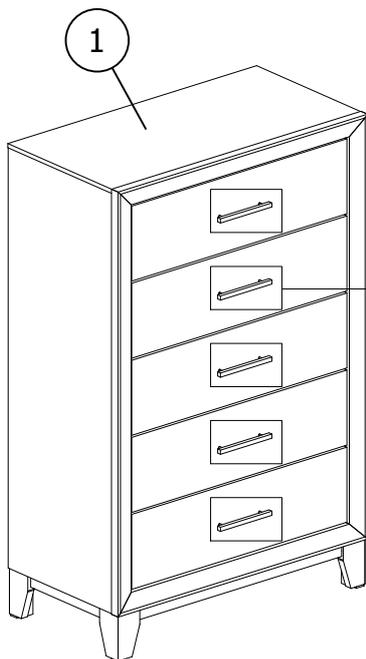

CODING  
- 352054

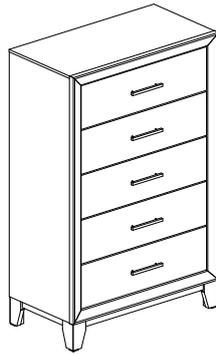

ISO 9001:2015  
Reg. No. 22012-1-1071-002

nuhoom.com

3

