


CODING
- 354038

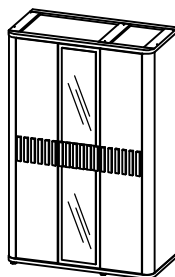

ISO 9001:2015
Reg. No. 000435-1-007-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	CENTER PANEL	1 PC
6	MIDDLE PANEL (L)	1 PC
7	MIDDLE PANEL (R)	3 PCS
8	LEG CORNER	2 PCS
9	DOOR SUPPORT	2 PCS
10	DOOR SUPPORT (L)	1 PC
11	DOOR SUPPORT (R)	1 PC
12	BACK BONE	2 PCS
13	DOOR PANEL (L&R)	2 PCS
14	DOOR PANEL (CENTER)	1 PC
15	DOOR BAR	18 PCS
16	BACK PANEL (L)	1 PC
17	BACK PANEL (R)	1 PC

HARDWARE			
A	MINI FIX	A1 A2 A3	54 SETS
B	M8 X 30MM WOOD DOWEL		44 PCS
C	M6 X 20MM WOOD DOWEL		36 PCS
D	M6 X 60MM CSK CAP WOOD SCREW		12 PCS
E	ALLEN KEY M4		1 PC
F	M4 X 38MM C.B SCREW		16 PCS
G	M4 X 30MM C.B SCREW		6 PCS
H	M4 X 25MM C.B SCREW		54 PCS
I	M3.5 X 16MM C.B SCREW		76 PCS
J	PAN HEAD SCREW M4 X 16MM		14 PCS
K	1340 DRAWER STOPPER(2 PIN)		1 PC
L	433 OVAL TUBE BRACKET		2 PCS
M	433 OVAL PAIP		1 PC
N	25MM SOFA LEG		6 PCS
O	SOFT CLOSING 7/8 HINGES		12 PCS
TIPPING PACK WITH A1 			2 SETS


SELF-PREPARED TOOLS: Tools below are NOT included in package.	
SCREWDRIVER	HAMMER

CODING
- 354038

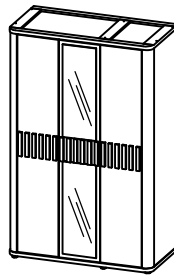


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

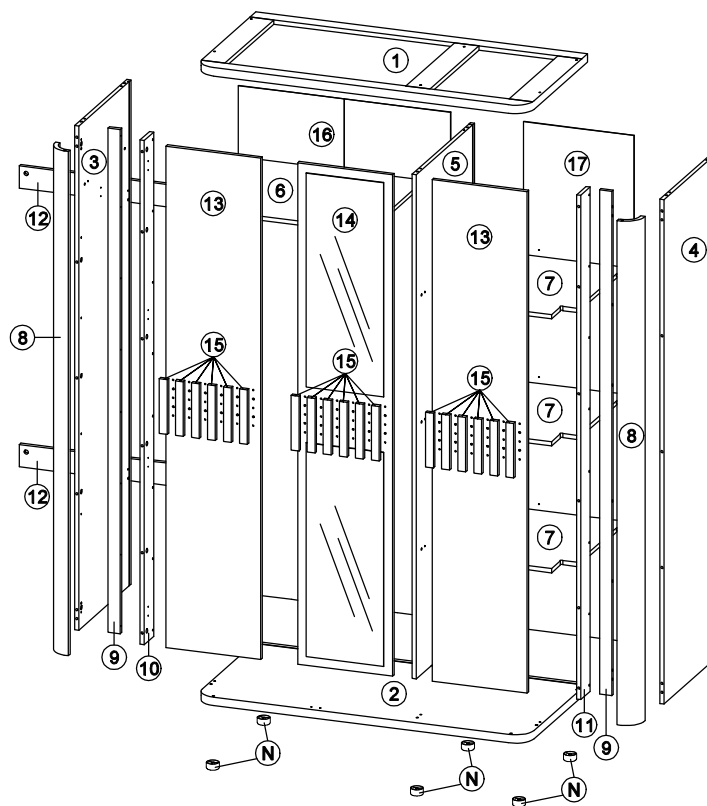


STEP 1

- Insert hardware **A2** onto panel (3), (4), (5) and (8).
(Repeat 54 times.)
- Insert hardware **B** into panel (3), (4), (5), (6), (7), (8), (9) and (12).
(Repeat 44 times.)
- Assemble the hardware **L** onto panel (3) and (5) by using hardware **I**.
(Repeat 2 times for each hardware.)

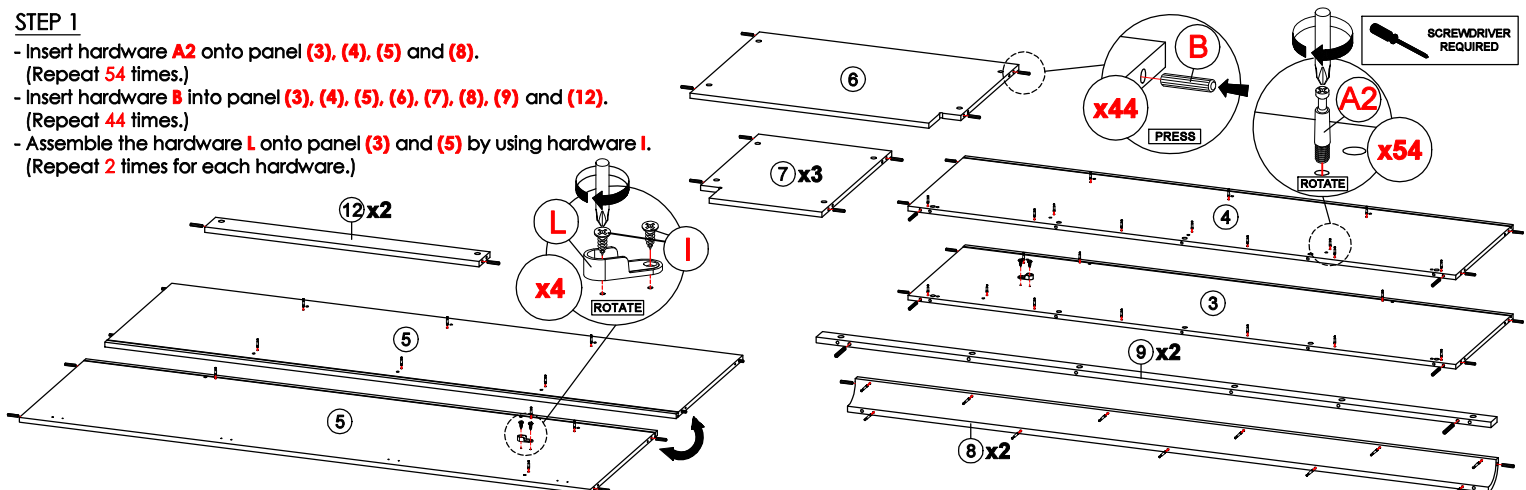

CODING
- 354038

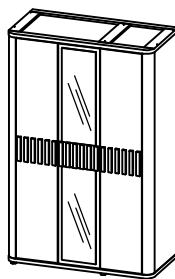


ISO 9001:2015
Reg. No. 000435-1-KTY-1-QMS

nuhoom.com


STEP 2

Hit hardware **K** onto panel **(2)**.
(Repeat 1 times.)

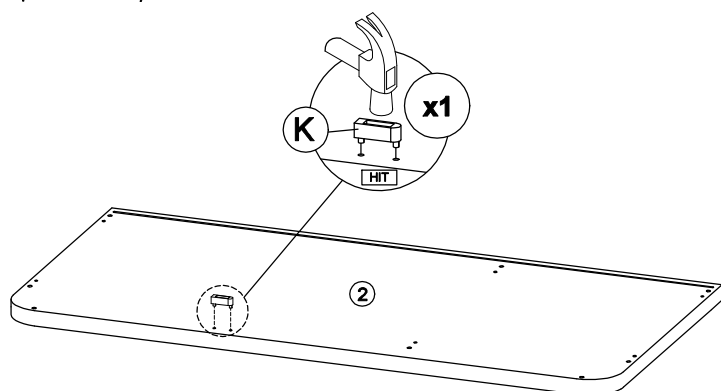


STEP 3

- Insert hardware **A1** into panel **(6), (7)** and **(12)**.
(Repeat 10 times.)
- Attach panel **(6), (7)** and **(12)** to panel **(5)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 10 times.)

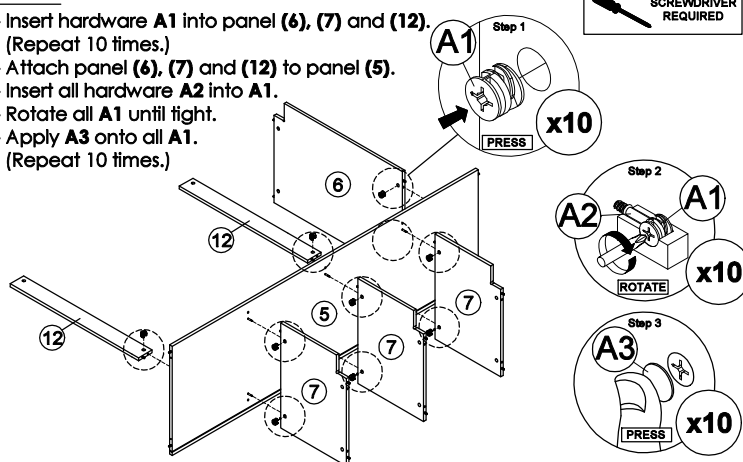


STEP 4

- Insert hardware **A1** into panel **(3)** and **(4)**.
(Repeat 10 times.)
- Attach panel **(8)** to panel **(3)** and **(4)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 10 times.)

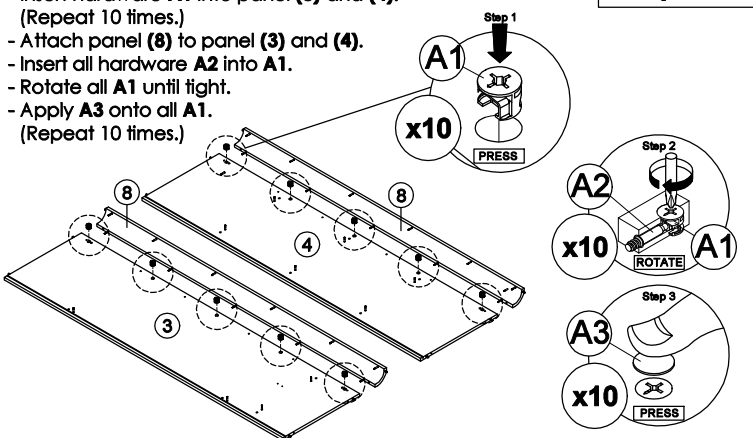


STEP 5

- Insert hardware **A1** into panel **(9)**.
(Repeat 12 times.)
- Attach panel **(9)** to panel **(3)** and **(4)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 12 times.)

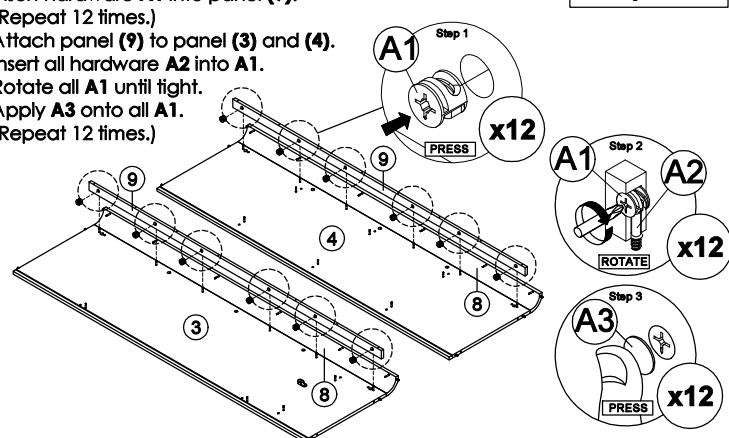


STEP 6

- Insert hardware **A1** into panel **(10)** and **(11)**.
(Repeat 12 times.)
- Attach panel **(10)** and **(11)** to panel **(8)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 12 times.)

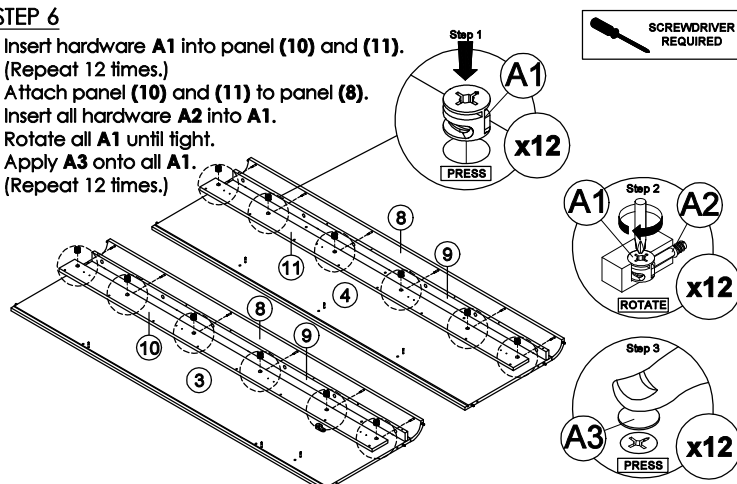


STEP 7

- Assemble panel **(10)** and **(11)** to panel **(9)** with hardware **F**.
(Repeat 16 times.)

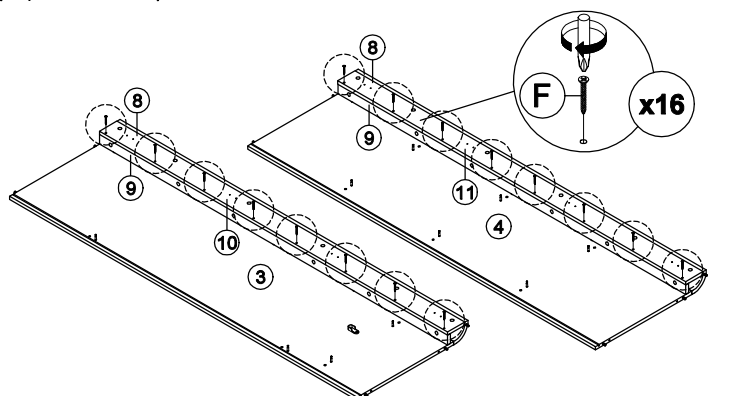

CODING
- 354038

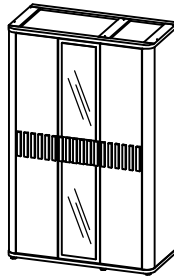


ISO 9001:2015
Reg. No. 000435-1-KIT-1-QMS

nuhoom.com


STEP 8

- Insert hardware **A1** into panel **(6), (7)** and **(12)**.
(Repeat 10 times.)
- Attach panel **(3), (4)** to panel **(6), (7)** and **(12)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 10 times.)

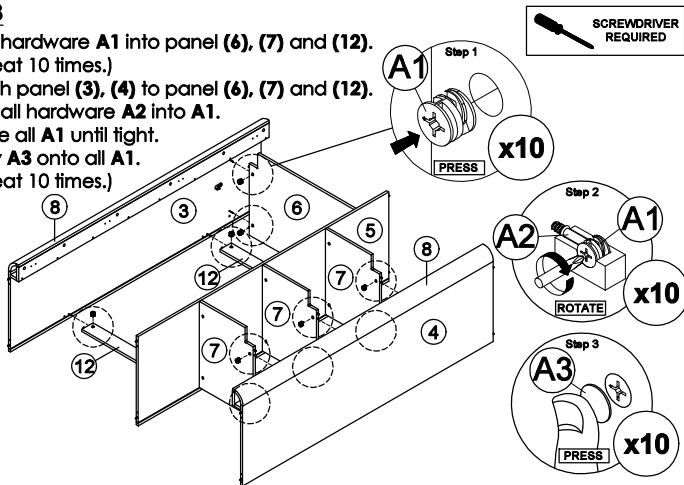


STEP 9

- Connect panel **(1)** to panel **(3), (4), (5)** and **(8)** by using hardware **D** and **E**.
(Repeat 6 times.)

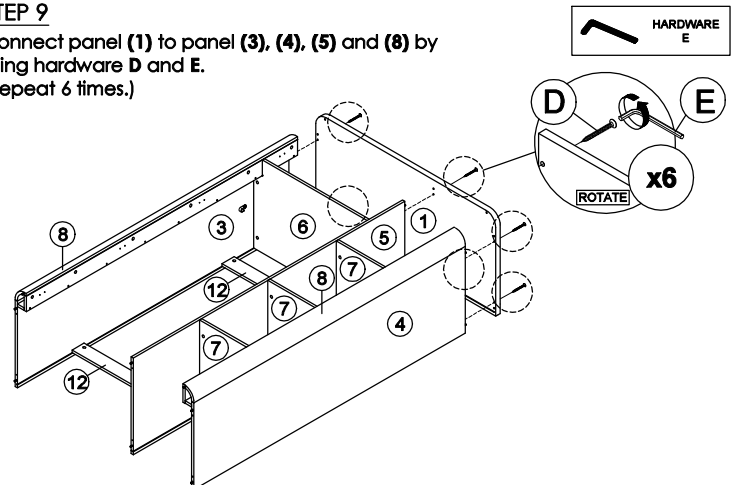


STEP 10

- Insert the panel **(16)** and **(17)** along the slot.

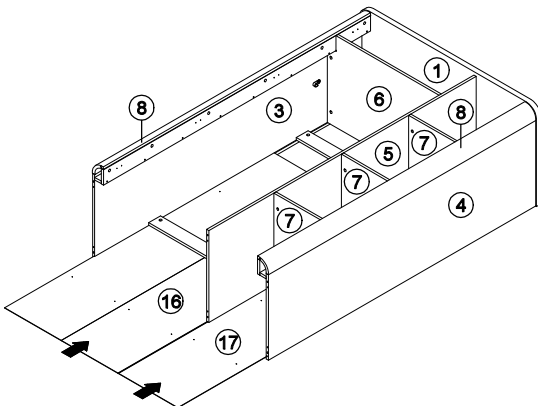


STEP 11

- Connect panel **(2)** to panel **(3), (4), (5)** and **(8)** by using hardware **D** and **E**.
(Repeat 6 times.)

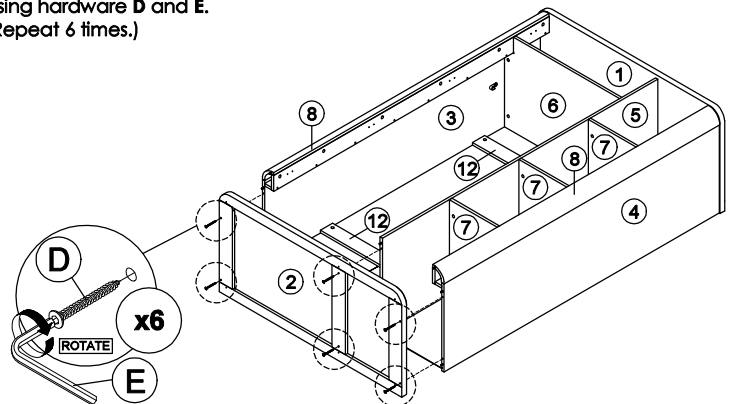


STEP 12

- Fix hardware **N** onto panel **(2)** by using hardware **G**.
(Repeat 6 times.)

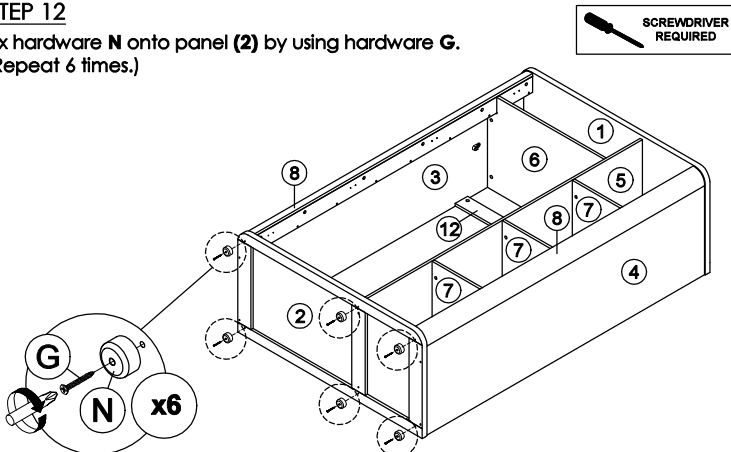


STEP 13

- Connect panel **(16)** and **(17)** to panel **(7)** and **(12)** by using hardware **J**.
(Repeat 14 times.)

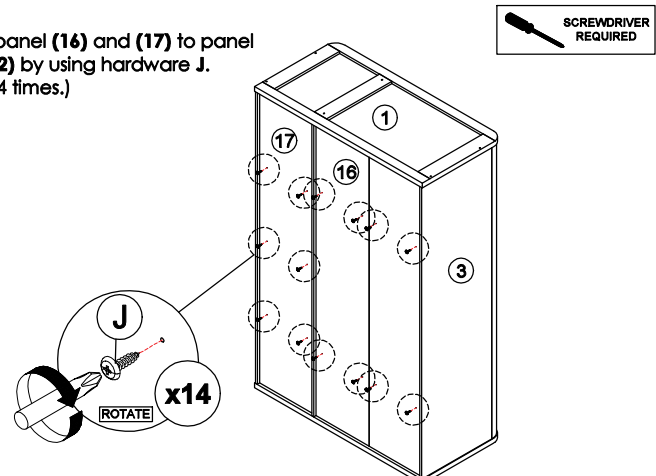

CODING
- 354038

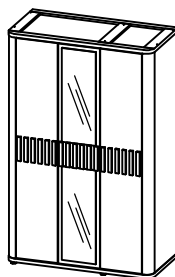


ISO 9001:2015
Reg. No. 000435-1-KTY-1-QMS

nuhoom.com

STEP 14


Attach hardware **M** to hardware **L**.
(Repeat 1 times.)

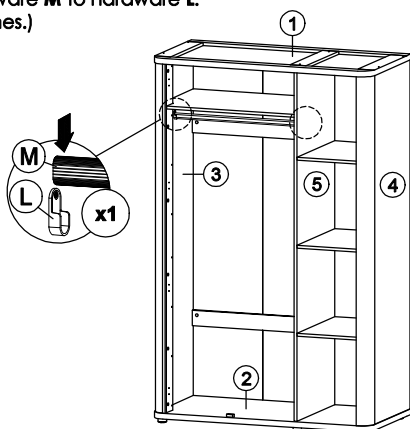

STEP 15

- Insert hardware **C** into panel **(15)**.
(Repeat 36 times.)

SCREWDRIVER
REQUIRED

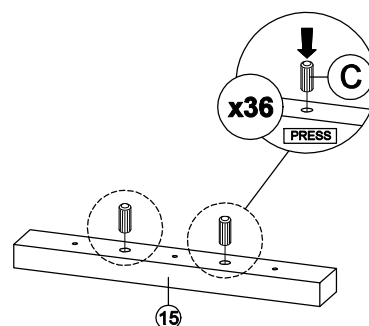


x18

STEP 16

- Assemble panel **(15)** to panel **(13)** and **(14)** with hardware **H**.
(Repeat 54 times.)


SCREWDRIVER
REQUIRED

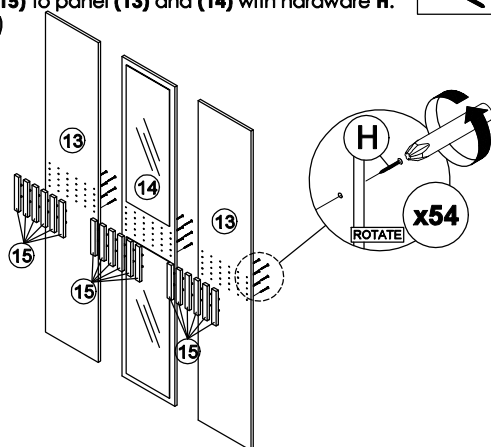

STEP 17

- Fix hardware **O** onto panel **(13)** and **(14)** by using hardware **I**.
(Repeat 24 times for each hardware.)

SCREWDRIVER
REQUIRED

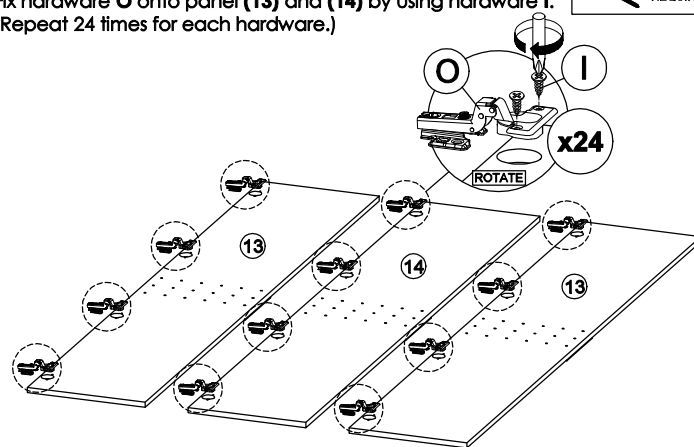

STEP 18

- Fix hardware **O** onto panel **(3)**, **(4)** and **(5)** by using hardware **I**.
(Repeat 4 times for each hardware.)
- Tighten or loosen the screw to adjust position of panel **(13)** and **(14)**.
(Do only when needed.)

SCREWDRIVER
REQUIRED

