


CODING

-371001
-371002

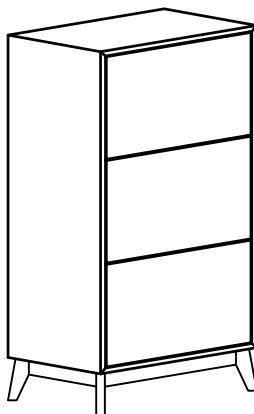

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS


nesthouz.com

Read the instruction carefully. Remove all the wrapping material , staples and straps from the carton . Refer to the hardware and furniture part list for guidance . Be sure that you have all the parts before you start assembling . Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches .

Caution


KEEP ALL PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST	QTY
Ⓐ	JCBC SCREW M6 X 60MM 	8
Ⓑ	SPRING WASHER 5/16" 	8
Ⓒ	FLAT WASHER 5/16" 	8
Ⓓ	ALLEN KEY M6 	1
Ⓔ	SCREW M3.5 X 16MM 	1
Ⓕ	SCREW M3.5 X 25MM 	1
Ⓖ	PLASTIC HOOK 	2
Ⓗ	CABLE TIE 	1
Ⓘ	FLAT WASHER (ø5 X ø9) 	2
Ⓙ	WALL PLUG 	1
Ⓚ	HANDEL 	3
Ⓛ	SCREW M3.5 X 16MM (BLACK) 	6

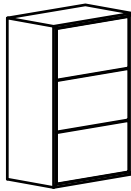ITEM	PART LIST	QTY
①	BODY 	1
②	TABLE LEG 	4

CODING

-371001
-371002

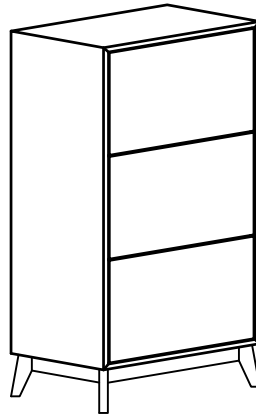

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

