

CODING
-372030






















ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

	HARDWARE LIST		QTY
A		M4 x 45mm Chipboard Screw	4
B		M3.5 x 16mm Chipboard Screw	16
C		M3 x 12mm Chipboard Screw	6
D		Minifix Pin	4
E		Minifix Carn	4
F		Wood Dowel 6 x 25mm	12
G		Nail	30
H		Black Door Spring	4
I		Shelf Holder	14
J		Plastic Leg	4
K		Magnet	2
L		Magnet Plate	2

ITEM	PART LIST		QTY
1	Top Panel		1
2	Bottom Panel		1
3	Left & Right Panel		2
4	Block Panel		1
5	Shelf Panel		3
6	Back Panel		1
7	Door Panel		2


CODING
-372030




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Step 1

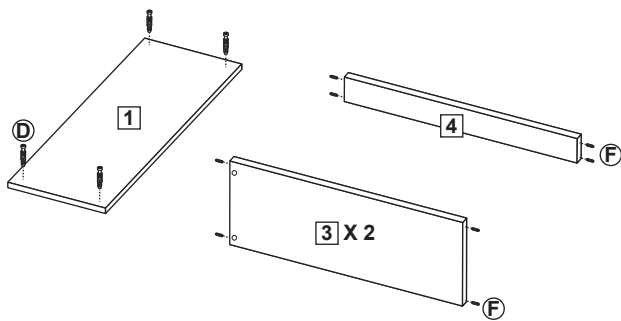


Step 2

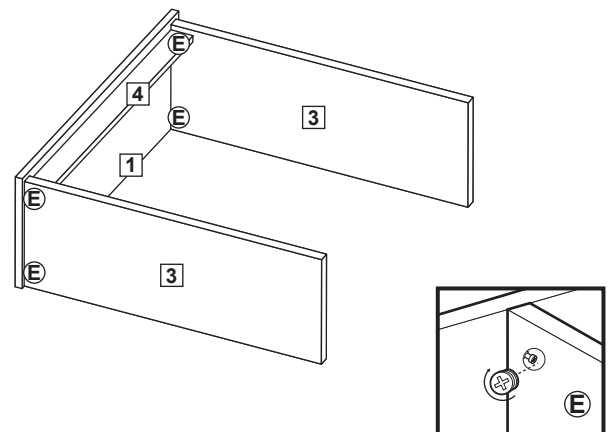

Step 3

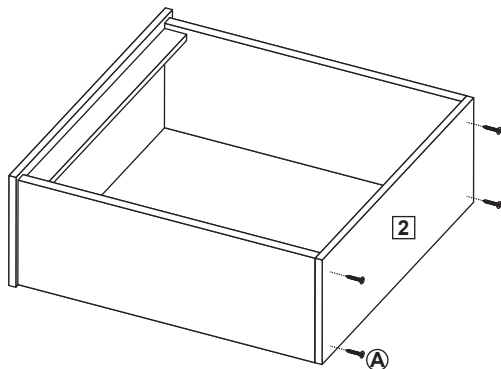

Step 4

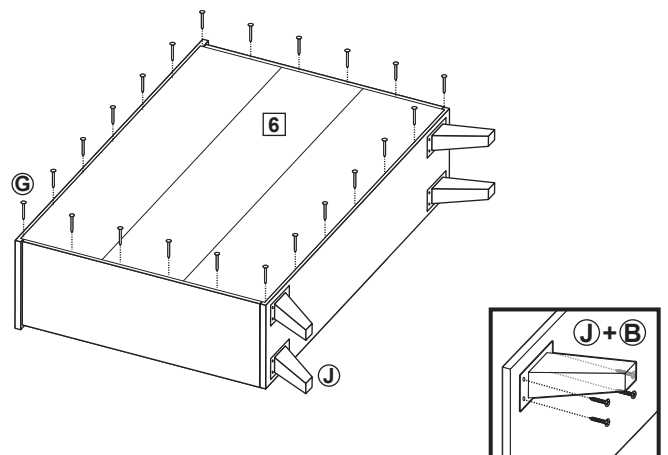

Step 5

