COLUMBUS

CODING -372031



ISO 9001:2015

nuhoom.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

	HARDWARE LIST		QTY
A	⊕ &	M4 x 65mm Chipboard Screw	4
В	(+)	M3.5 x 16mm Chipboard Screw	32
С	⊕ &	M4 x 20mm Handle Screw	4
D	A CONTRACTOR OF THE PARTY OF TH	Minifix Pin	4
Е		Minifix Carn	4
F	─	Nail	30
G		Wood Dowel 6 x 25mm	12
Н		Plastic Leg	4
ı		Handle (1008-128)	2
J		Hinges	4
K		Shelf Holder	12
L		Door Stopper	2

ITEM	PART LIST		QTY
1	Top Panel		1
2	Bottom Panel		1
3	Lelf & Right Panel		2
4	Back Panel		1
5	Shelf Panel		3
6	Backplane		1
7	Door Panel		2

COLUMBUS


CODING -372031

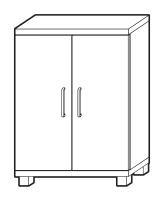


ISO 9001:2015

nuhoom.com


Step 1

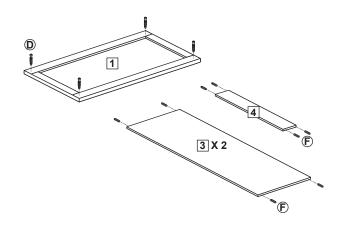


Step 2

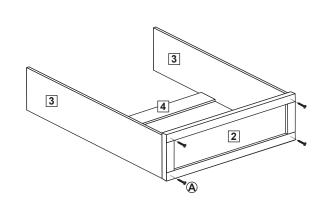

Step 3

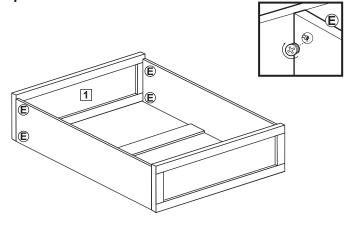

Step 4

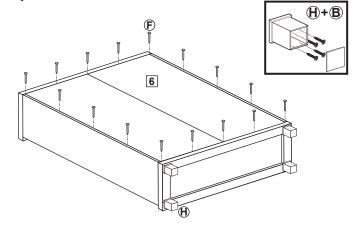

Step 5

