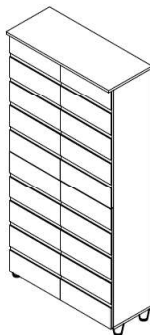


CODING

-372046

-372047


ISO 9001:2015
Reg. No. 000435-1-MEX-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION


KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HARDWARE NAME	QTY	ITEM	PHOTO	PARTS NAME	QTY
(A)		SCREW 16MM	32 PCS	(1)		TOP PANEL	1 PC
(B)		SCREW 38MM	12 PCS	(2)		LEFT SIDE PANEL	1 PC
(C)		SCREW 45MM	4 PCS	(3)		RIGHT SIDE PANEL	1 PC
(D)		SHELF SUPPORT	24 PCS	(4)		BOTTOM PANEL	1 PC
(E)		WOOD DOWEL M6X25MM	8 PCS	(5)		MIDDLE PANEL	1 PC
(F)		PVC LEG	4 PCS	(6)		SHELF PANEL	6 PCS
(G)		NAIL EXTEMAL	60 PCS	(7)		DOOR PANEL	4 PCS
(H)		HINGES	8 PCS	(8)		BACK PANEL	1 SET

CODING

-372046


-372047

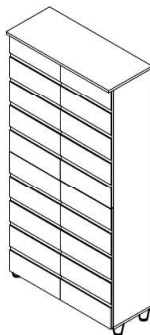


ISO 9001:2015
Reg. No. 000435-1-MET-1-QM&S

nuhoom.com


STEP 1

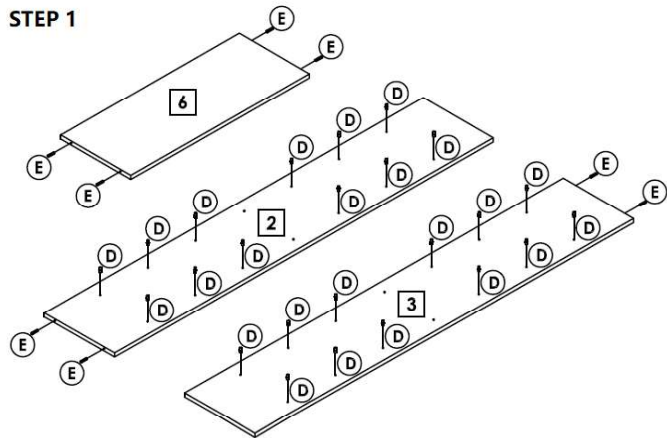


STEP 2

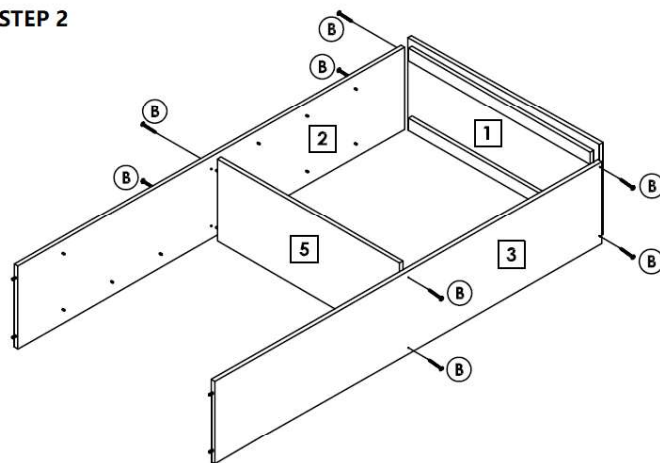


STEP 3

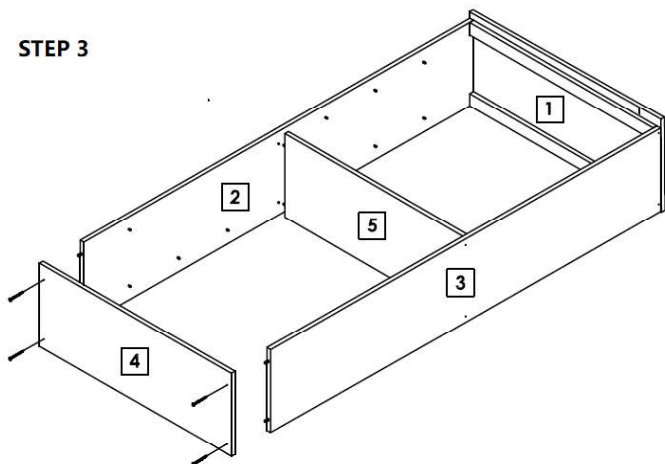

STEP 4

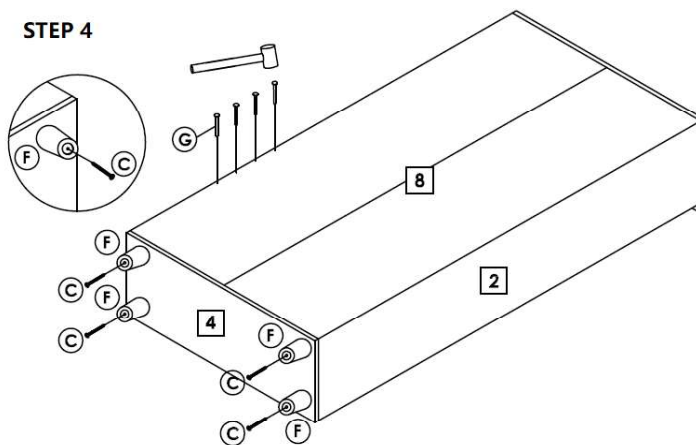

STEP 5

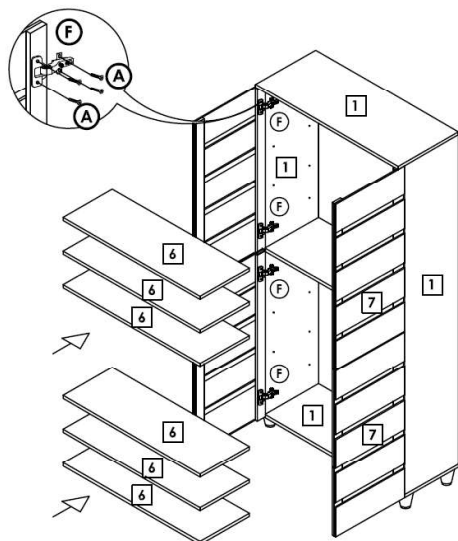

COMPLETED

