


CODING -3704087 -372052

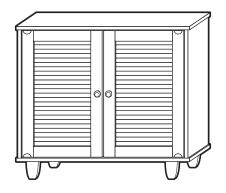

ISO 9001:2015

nuhoom.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM		HARDWARE LIST	QTY
1	(1)	M4 x 38mm Chipboard Screw	8
2	(1)	M4 x 25mm Chipboard Screw	2
3	(1)	M3.5 x 16mm Chipboard Screw	16
4	()	M3.5 x 12mm Chipboard Screw	6
(5)	○	Nail	24
6		Wood Dowel 6 x 25mm	8
7		Magnet	2
8	. <u>©</u>	Magnet Plate	2
9		15mm Door Support	4
10		Door Stop / Shelf Suppor	10
(11)	0	Handle	2
12	T	Plastic leg	4

ITEM	PART LIST	
A	Top Panel	1
B	Side Panel	2
(C)	Bottom Panel	1
(D)	Shelf Panel	2
E	Back Panel	1
F	Door Panel	2




CODING -3704087 -372052

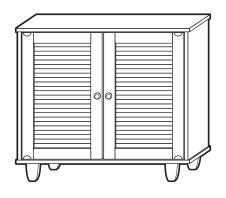


ISO 9001:2015
Reg. No. 000435-1-MY-1-OMS

nuhoom.com


Step 1

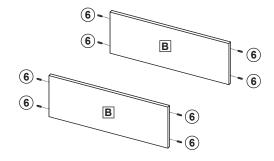

Step 2

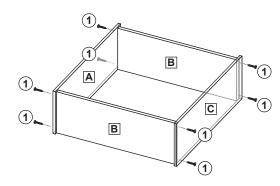

Step 3

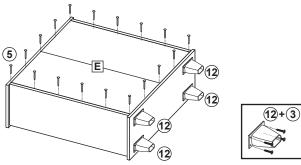

Step 4

