

CODING
- 372092



ISO 9001:2015
Reg. No. 000435-1-MET-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HARDWARE NAME	QTY
①		Minifix Bolt	14
②		Cam 12/15	10
③		Cam 9/15	4
④		Hinges 7/8" (Slow Closed)	4
⑤		Wood Dowel 6 x 30	13
⑥		Csk Screw 3.5 x 12	24
⑦		Tapping Screw 6 x 1/2"	4
⑧		Cupped Handle	2
⑨		Shelf Support (5mm)	20
⑩		Nail Pin	32
⑪		Allen Key M4	1
⑫		Door Stopper	2
⑬		Csk Screw 4 x 38	1

⑭		Nail Leg	4
⑮		Wall Plug	1
⑯		L-mounting Bracket	1
⑰		Csk Screw 3.5 x 15	1





ITEM	PHOTO	PARTS NAME	QTY
A		Side Panel Left	1
B		Side Panel Right	1
C		Top Panel	1
D		Bottom Panel	1
E		Shelf Panel	5
F		Bottom Front Panel	1
G		Support Back Panel	2
H		Door Panel Left	1
I		Door Panel Right	1
Y		Backply Panel	1

CODING
- 372092



ISO 9001:2015
Reg. No. 000435-1-MET-1-QM&S

nuhoom.com

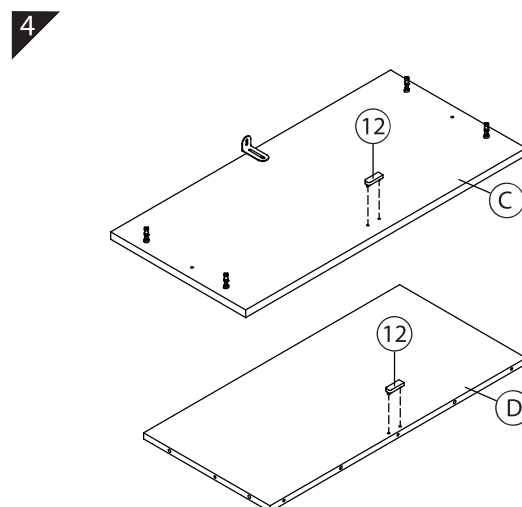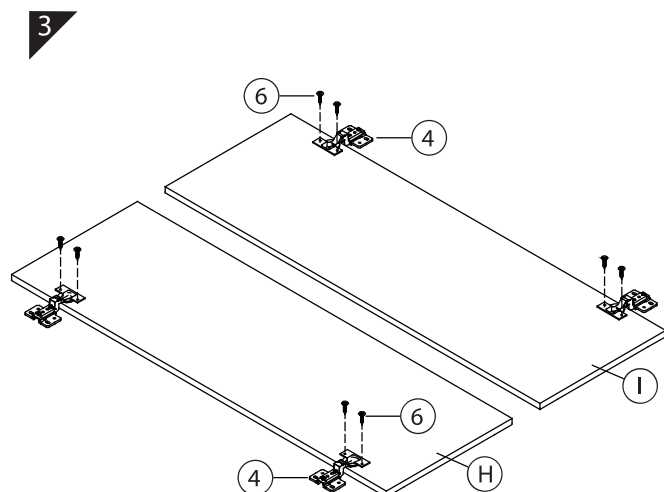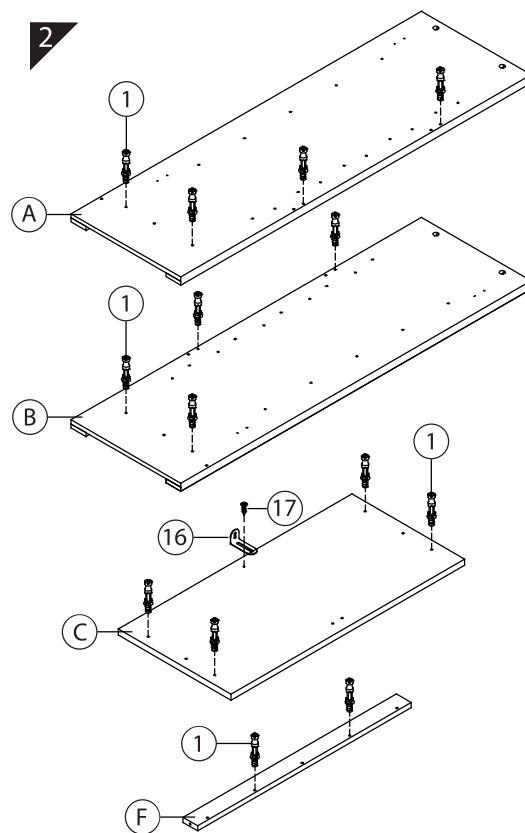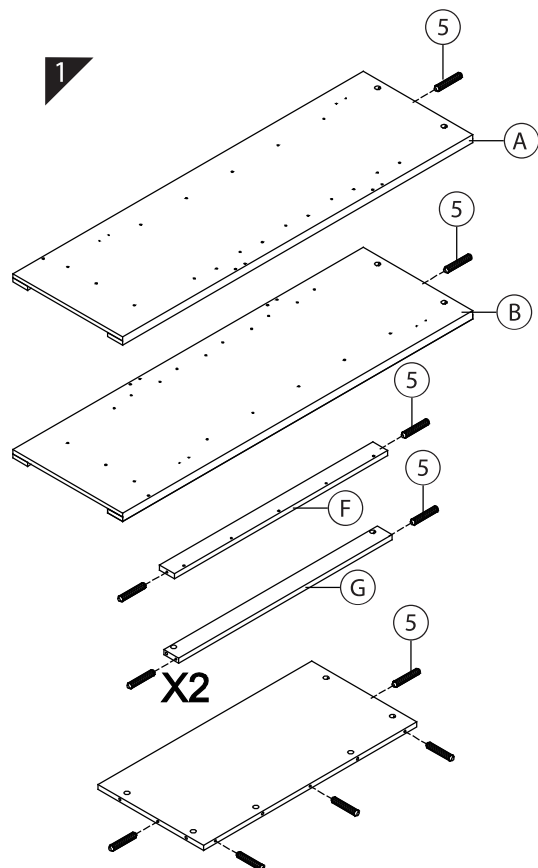


CODING
- 372092




ISO 9001:2015
Reg. No. 000435-1-MET-1-QM&S

nuhoom.com


5

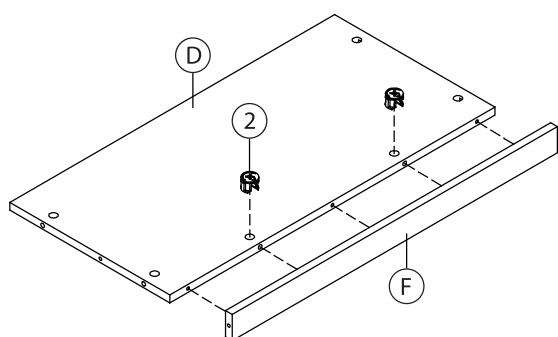


6

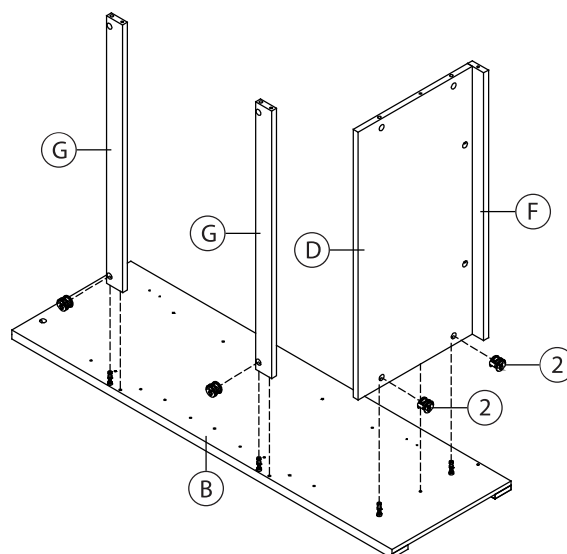

7

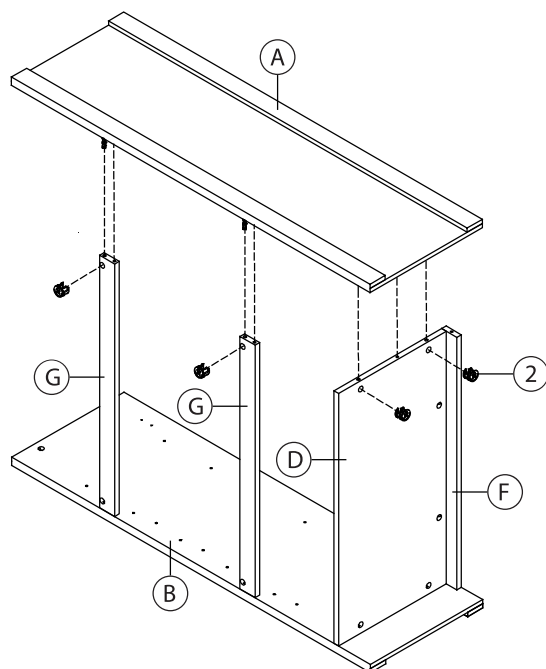

8

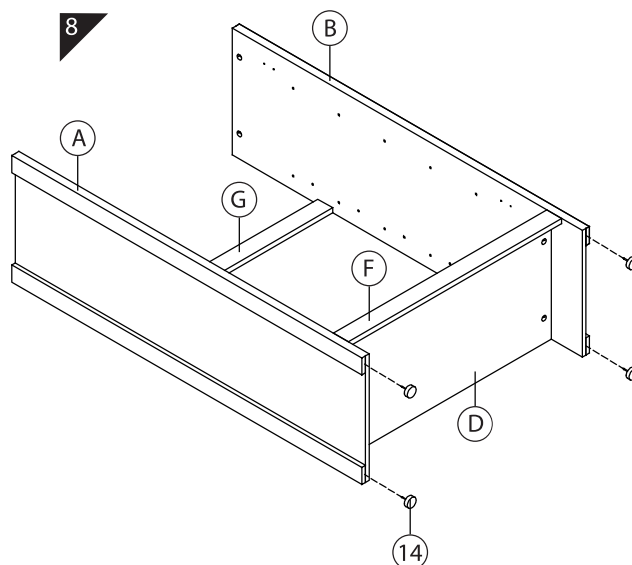


CODING
- 372092




ISO 9001:2015
Reg. No. 000435-1-MET-1-QMS

nuhoom.com


9

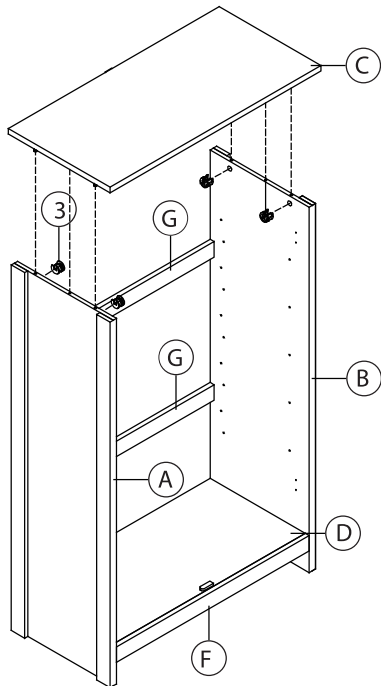


10

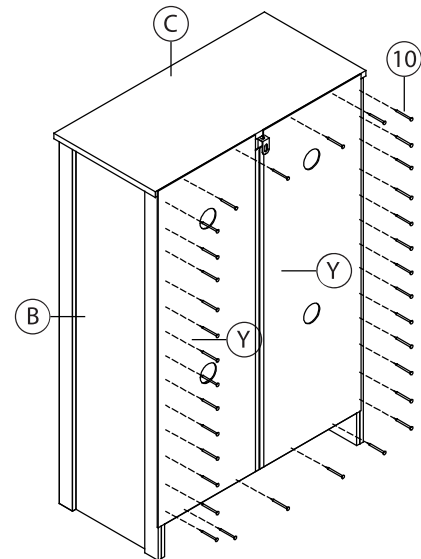

11

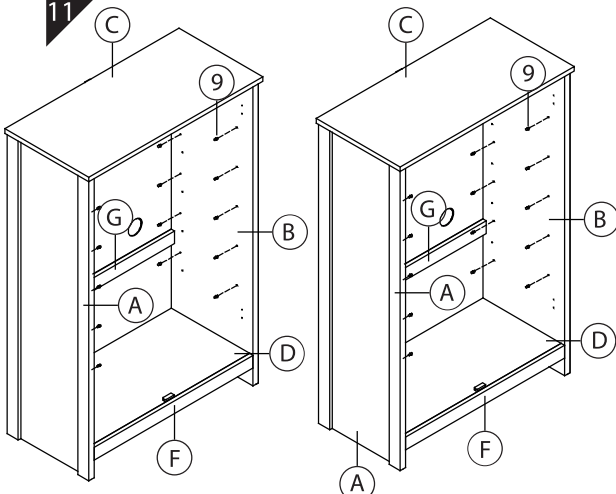

12

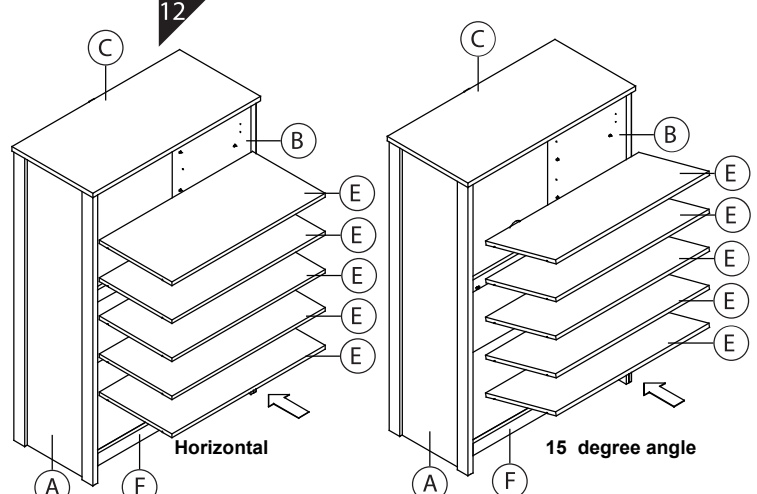

NOTE : The side panel has an extra hole to insert a shelf support, shelves can be adjust to a 15 degree angle or be fitted horizontal.

NOTE : Please insert the shelves at a 15 degree angle or horizontal before fitting the doors.


CODING
- 372092




ISO 9001:2015
Reg. No. 000435-1-MET-1-QM5

nuhoom.com


13

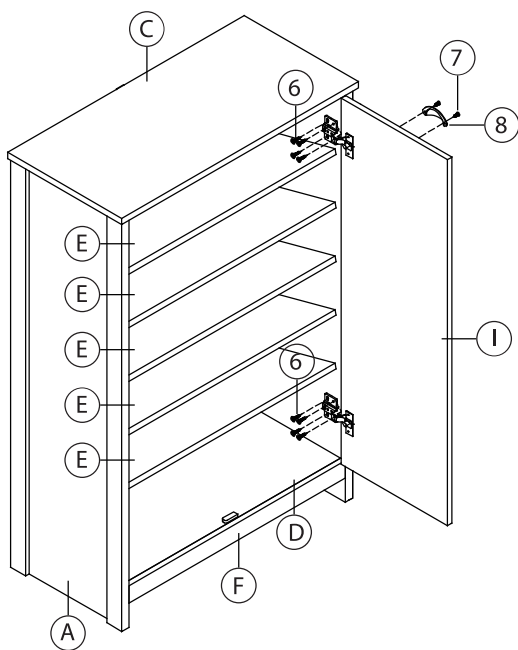

14

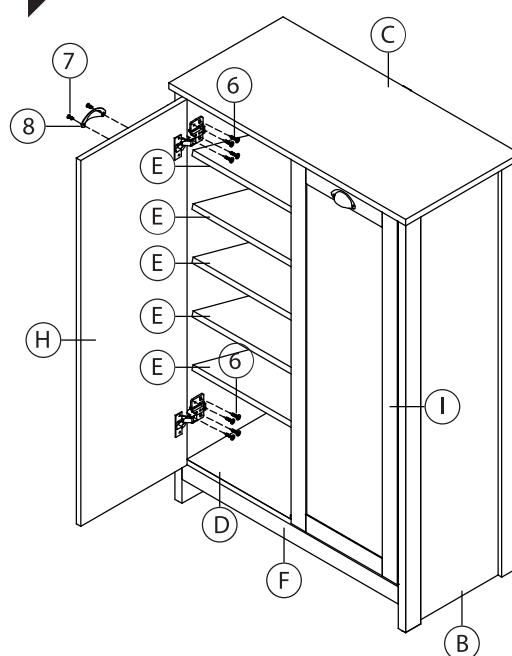

15

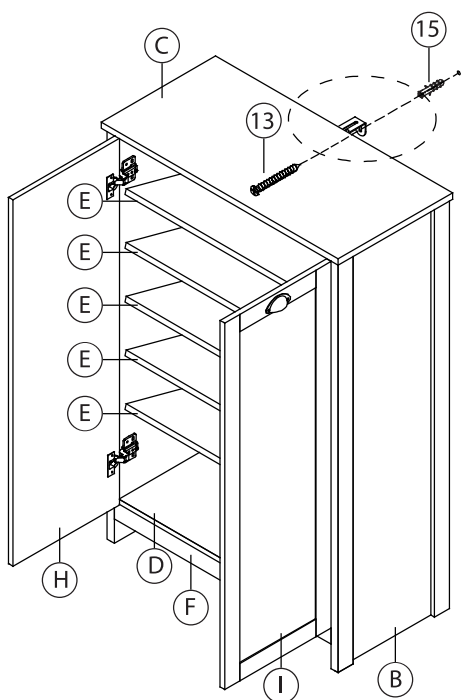

16

