


CODING
-374005

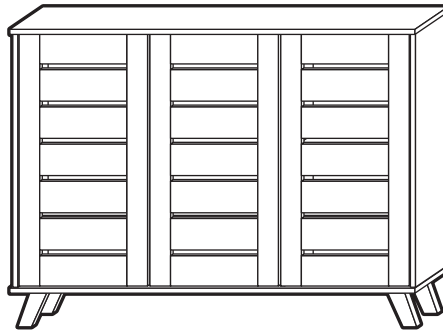

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.


		HARDWARE LIST	QTY
A		M4 x 45mm Chipboard Screw	6
B		M3.5 x 16mm Chipboard Screw	16
C		M3 x 12mm Chipboard Screw	9
D		Minifix Pin	6
E		Minifix Carn	6
F		Wood Dowel 6 x 25mm	20
G		Nail	40
H		Black Door Spring	6
I		Shelf Holder	27
J		Plastic Leg	4
K		Magnet	3
L		Magnet Plate	3

ITEM	PART LIST	QTY
1	Top Panel	1
2	Bottom Panel	1
3	Lelf & Right Panel	2
4	Lelf & Right Panel	2
5	Block Panel	1
6	Small Block Panel	1
7	Shelf Panel	3
8	Small Shelf Panel	3
9	Back Panel	1
10	Door Panel	3



A line drawing of a tall, narrow wooden cabinet. It has four doors, each with a small handle. Inside the cabinet, there are several shelves. The cabinet is supported by four legs.

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS


Step 1

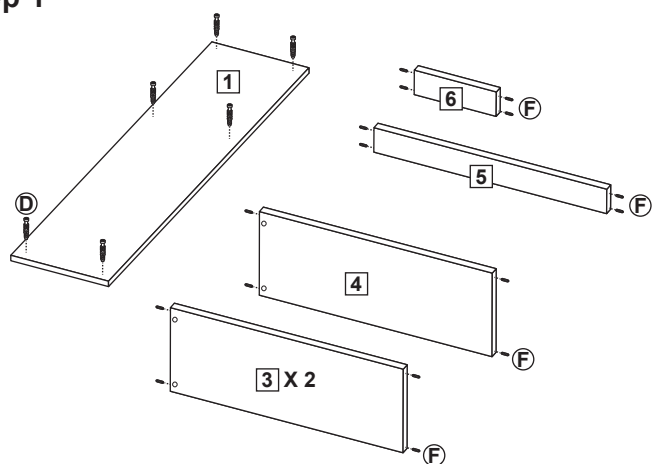



Step 2

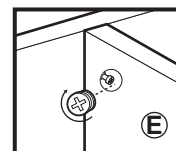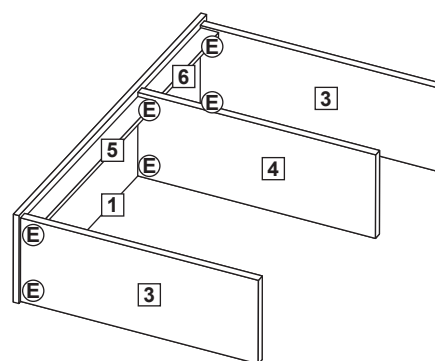

Step 3

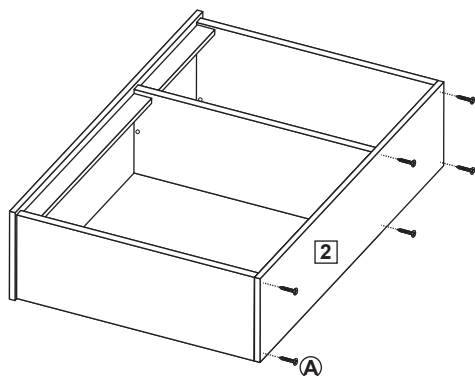

Step 4

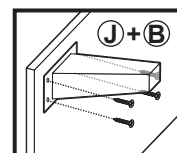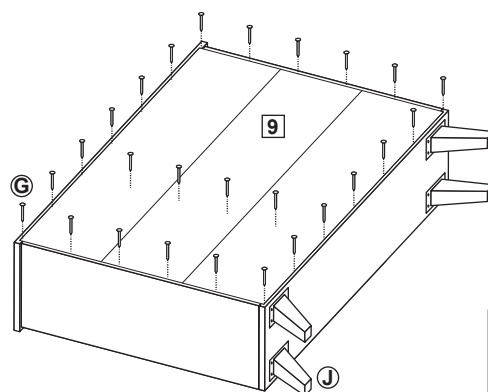

Step 5

