CHICAGO

CODING

-511021




ISO 9001:2015

nuhoom.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	РНОТО	HARDWARE NAME	QTY	ITEM	РНОТО	PARTS NAME	QTY
(A)	and Do	MINIFIX M5X24MM	10 PCS	(1)		BOTTOM PANEL	1 PC
(B)	36	MINIFIX CASING	10 PCS	(2)		SHELF PANEL LEFT	1 PC
(C)	0	WOOD DOWEL M8X30MM	8 PCS	(3)		SHELF PANEL RIGHT	2 PCS
(D)	D.	SCREW M6X50MM	4 PCS	(4)		SIDE PANEL LEFT	1 PC
(E)		ALLEN KEY	1 PC	(5)		SIDE PANEL RIGHT	1 PC
(F)	0	LEG NAIL WHITE PIN	4 PCS	(6)		BACK PANEL	1 PC

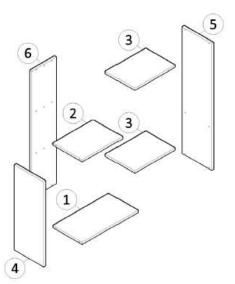

CHICAGO

CODING -511021

4 Pcs



ISO 9001:2015 nuhoom.com 1 2 2 Pcs B (C) 10 Pcs 8 Pcs 10 Pcs 3 4 5 3 E 6 8 7 E 6 3 D D F D F D 4 Pcs