

CODING

- 511023
- 511024
- 511038



511038



511023



511024

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		SCREW (M4 X 38)	16 PCS
(B)		WOOD DOWEL (6 X 25)	16 PCS
(C)		SCREW (M4 X 25)	6 PCS
(D)		SCREW (M3 X 12)	6 PCS
(E)		SCREW (M3.5 X 16)	19 PCS
(F)		DOOR STUD	6 PCS
(G)		HANDLE	3 PCS
(H)		MAGNET WITH LEG	3 PCS
(I)		MAGNET PLATE (2 HOLES)	3 PCS
(J)		STOPPER	3 PCS
(K)		DRAWER LOCK	3 PCS
(L)		PVC LEG	4 PCS

ITEM	PHOTO	PARTS NAME	QTY
(1)		LEFT SIDE PANEL	1 PC
(2)		SHELF PANEL	2 PCS
(3)		DOOR	3 PCS
(4)		BOTTOM PANEL	1 PC
(5)		BACK PANEL	3 PCS
(6)		RIGHT SIDE PANEL	1 PC
(7)		TOP PANEL	1 PC

CODING

- 511023
- 511024
- 511038



511038



511023




511024

ISO 9001:2015
Reg. No. 000435-1-MY-QMS


nuhoom.com

1. FIXING WOOD DOWEL

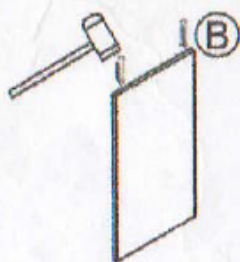


FIX WOOD DOWEL TO PANEL
1, 2, 6

2. FIXING DOOR

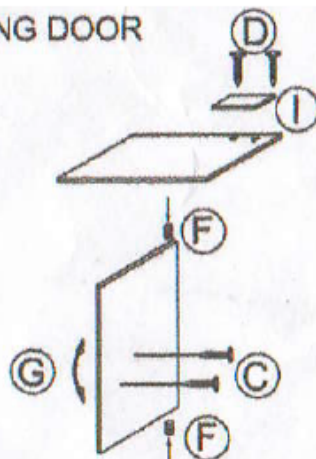


FIXING DOOR TO PANEL 3

3. FIXING MAGNET

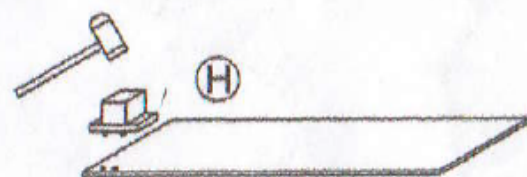


FIXING MAGNET TO PANEL 2, 7

4. FIXING LOCK

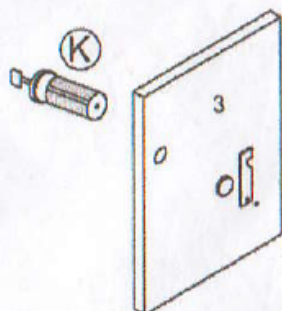


FIXING LOCK TO PANEL 3

5. FIXING STOPPER

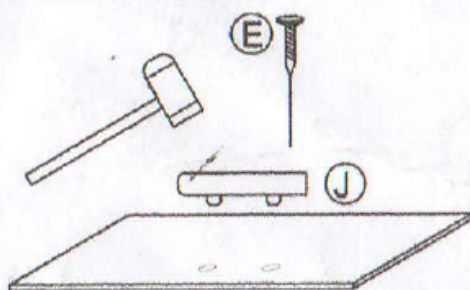


FIXING STOPPER PLATE TO PANEL
2, 7

6.

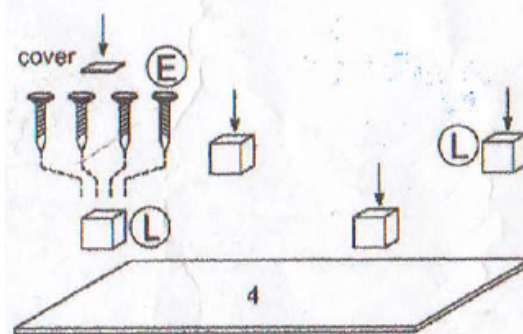

FIXING PVC LEG TO PANEL 4

7.

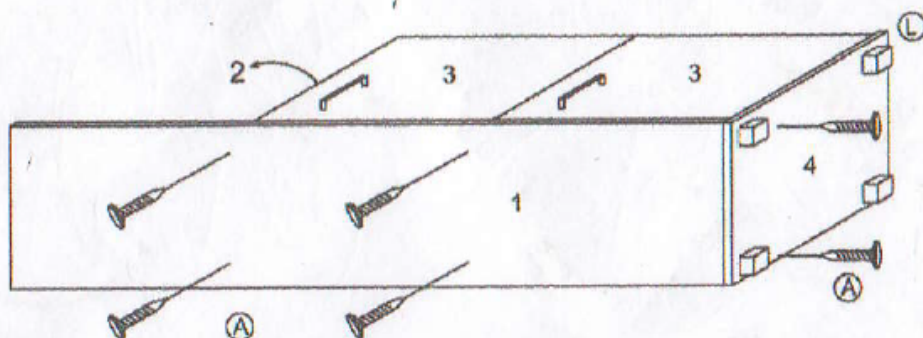

FIXING SCREW TO PANEL 1, 4
3 -- DOOR

CODING

- 511023
- 511024
- 511038



511038



511023




511024

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


8.

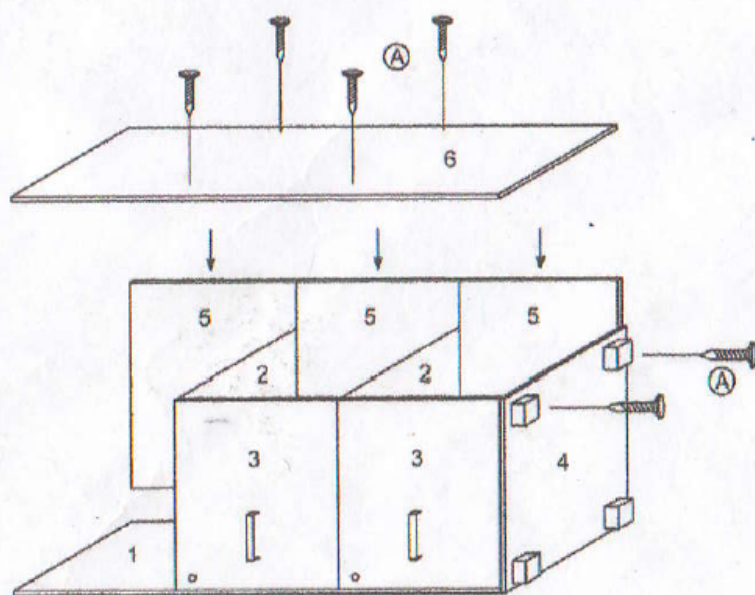

FIXING SCREW TO PANEL 6

5 -- REAR PANEL
3 -- DOOR

9.

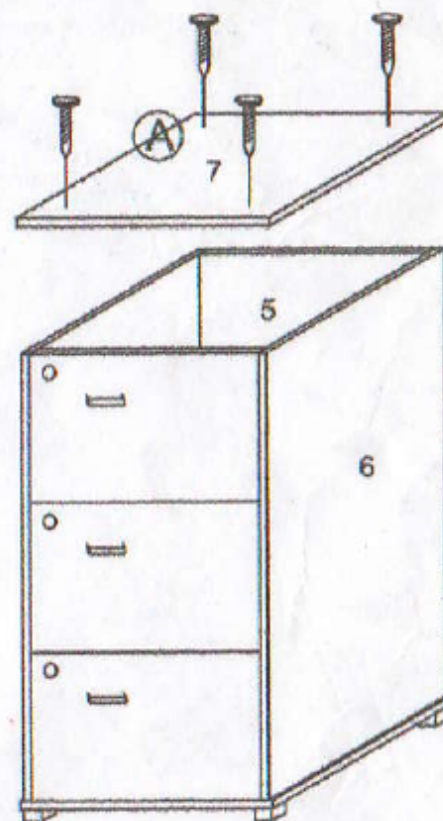

FIXING SCREW TO PANEL 7
5 -- REAR PANEL

10.

