


ASSEMBLY INSTRUCTION

MODEL: **WY-145 / WY-745 / WY-845 / WY-945**

NAOMI
(511027, 511028,
511040)

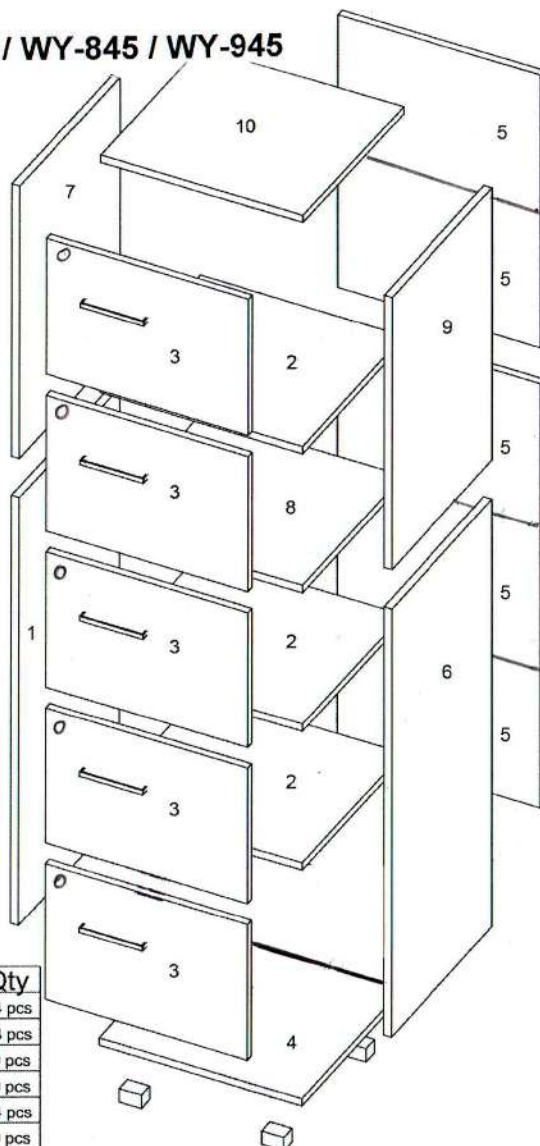


* 5 -- REAR PANEL
* 3 -- DOOR

No	Hardware	Qty
A	Screw (M4 x 38)	24 pcs
B	Wood Dowel (6 x 25)	28 pcs
C	Screw (M4 x 25)	10 pcs
D	Screw (M3 x 12)	10 pcs
E	Screw (M3.5 x 16)	24 pcs
F	Door Stud	10 pcs
G	Handle	5 pcs
H	Magnet with Leg	5 pcs
I	Magnet Plate (2 Holes)	5 pcs
J	Stopper	5 pcs
K	Drawer Lock	5 pcs
L	PVC Leg	4 pcs
M	Cam Bolt	4 pcs
N	Cam Bolt	4 pcs
O	L-Holder	2 pcs

CAUTION


Material use chipboard. To use soft dry cloth for cleaning purpose. DO NOT use detergent or chemical. Avoid contact with water and direct sunlight. To be assembled on a soft, dry, clean and smooth surface (environment)

1. FIXING WOOD DOWEL

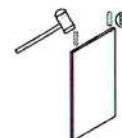


FIX WOOD DOWEL TO PANEL
1, 2, 6, 7, 9

2. FIXING DOOR

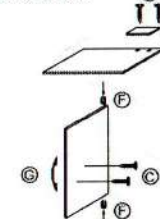


FIXING DOOR TO PANEL 3

3. FIXING MAGNET




FIXING MAGNET TO PANEL 2, 8, 10

4. FIXING LOCK

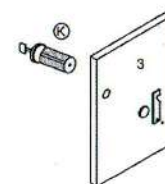


FIXING LOCK TO PANEL 3

5. FIXING STOPPER

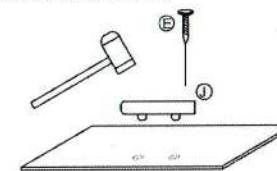


FIXING STOPPER PLATE TO PANEL
2, 8, 10

6.

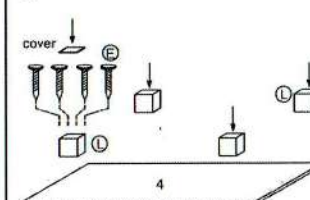


FIXING PVC LEG TO PANEL 4

7. FIXING CAM BOLT

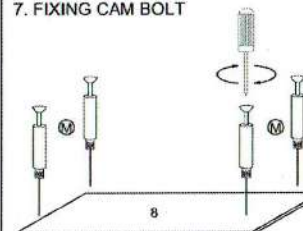


FIXING CAM BOLT TO PANEL 8

8.

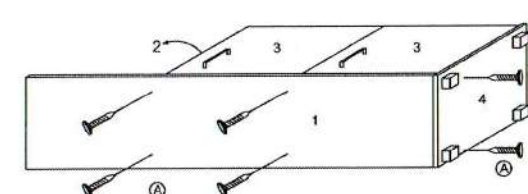


FIXING SCREW TO PANEL 1, 4

9.

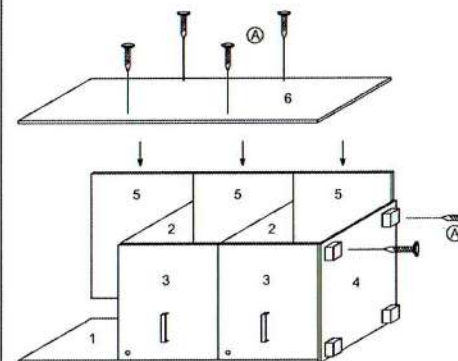


FIXING SCREW TO PANEL 4, 6
5 -- REAR PANEL
3 -- DOOR

10.

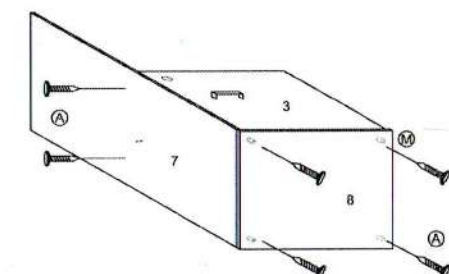


FIXING SCREW TO PANEL 7, 8

11.

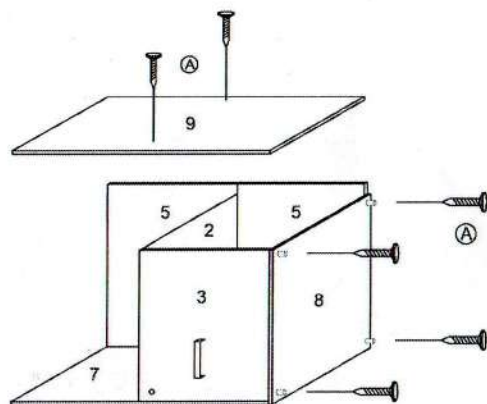


FIXING SCREW TO PANEL 8, 9
5 -- REAR PANEL
3 -- DOOR

12.

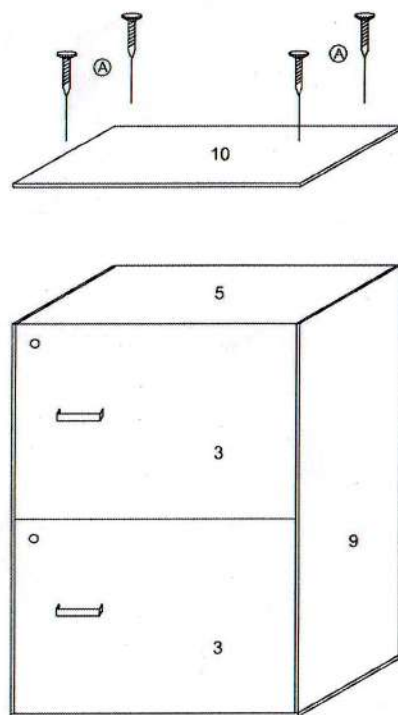


FIXING SCREW TO PANEL 10
5 -- REAR PANEL

13.

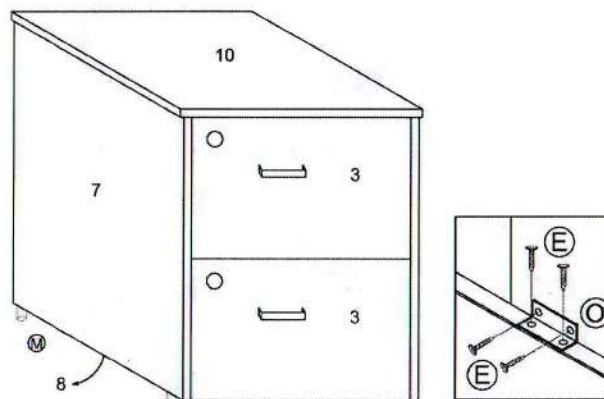

FIXING L HOLDER
TO PANEL 1, 6, 8

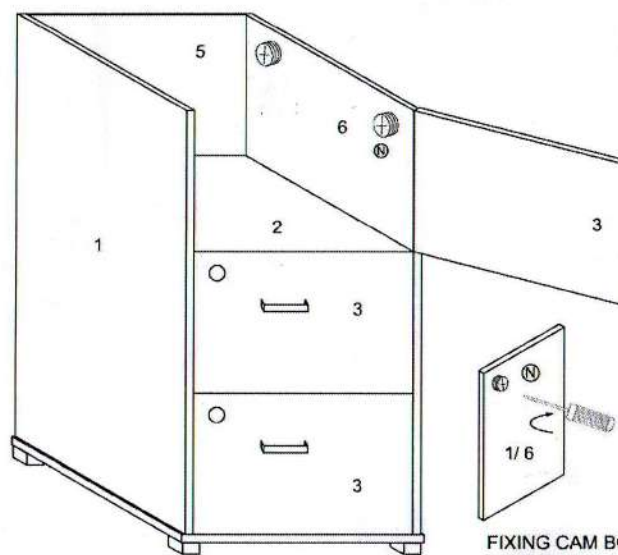

FIXING CAM BOLT
TO PANEL 1, 6

8 -- BOTTOM PANEL
5 -- REAR PANEL

14.

