


CODING
-511052
-511053

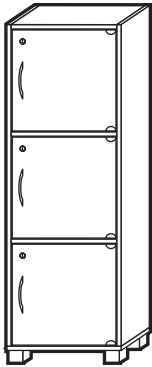

















ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.


| ITEM | HARDWARE LIST | | QTY |
|------|---|-----------------------------|-----|
| ① |  | M4 x 38mm Chipboard Screw | 16 |
| ② |  | M4 x 25mm Chipboard Screw | 6 |
| ③ |  | M3.5 x 12mm Chipboard Screw | 22 |
| ④ |  | Nail | 30 |
| ⑤ |  | Wood Dowel 6 x 25mm | 16 |
| ⑥ |  | Door Support 15mm | 6 |
| ⑦ |  | Plastic Leg | 4 |
| ⑧ |  | Handle(1009) | 3 |
| ⑨ |  | Cam Lock 40mm | 3 |
| ⑩ |  | Door Stopper | 3 |

| ITEM | PART LIST | | QTY |
|------|--------------|---|-----|
| Ⓐ | Side Panel |  | 2 |
| Ⓑ | Top Panel |  | 1 |
| Ⓒ | Shelf |  | 3 |
| Ⓓ | Bottom Panel |  | 1 |
| Ⓔ | Back Panel |  | 1 |
| Ⓕ | Door Panel |  | 3 |

CODING


-511052

-511053

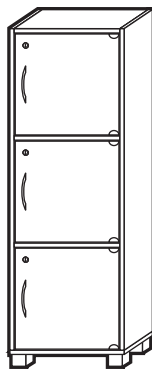
ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Step 1

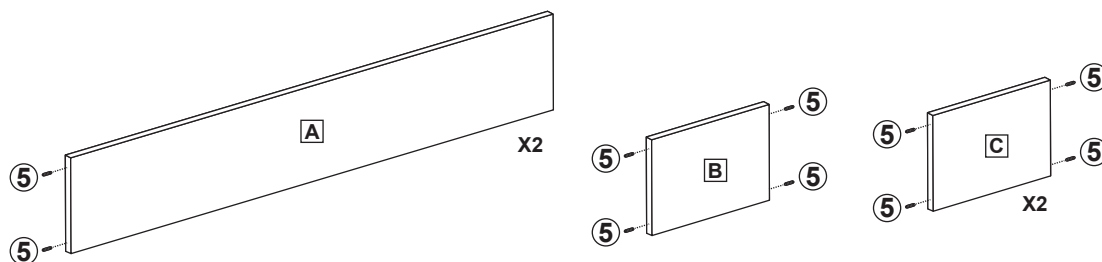

Step 2

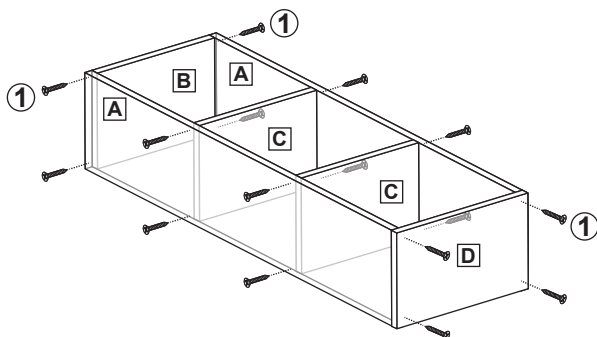

Step 3

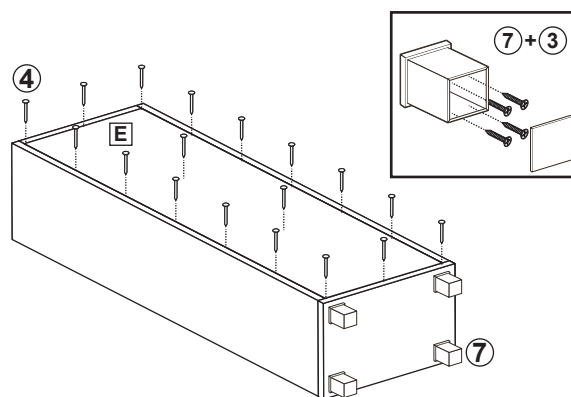

Step 4

