


CODING

-511054

-511055

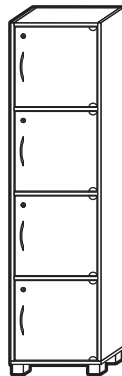









ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS







nuhoom.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.


ITEM	HARDWARE LIST		QTY
①		M4 x 38mm Chipboard Screw	20
②		M4 x 25mm Chipboard Screw	8
③		M3.5 x 12mm Chipboard Screw	24
④		Nail	40
⑤		Wood Dowel 6 x 25mm	20
⑥		Door Support 15mm	8
⑦		Plastic Leg	4
⑧		Handle(1009)	4
⑨		Cam Lock 40mm	4
⑩		Door Stopper	4

ITEM	PART LIST		QTY
Ⓐ	Side Panel		2
Ⓑ	Top Panel		1
Ⓒ	Shelf		4
Ⓓ	Bottom Panel		1
Ⓔ	Back Panel		1
Ⓕ	Door Panel		4

CODING


-511054

-511055

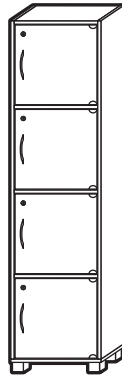
ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Step 1

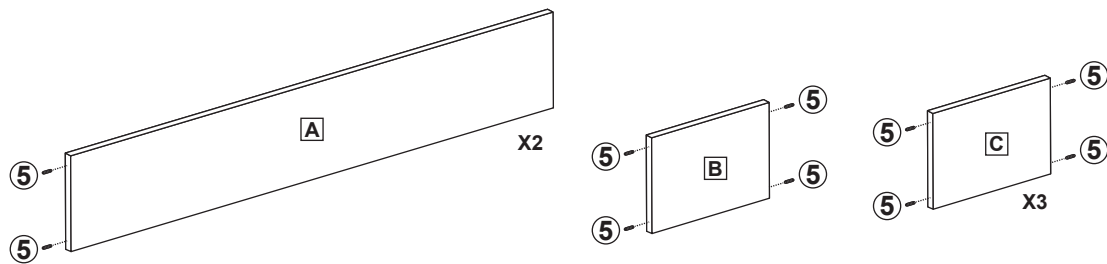

Step 2

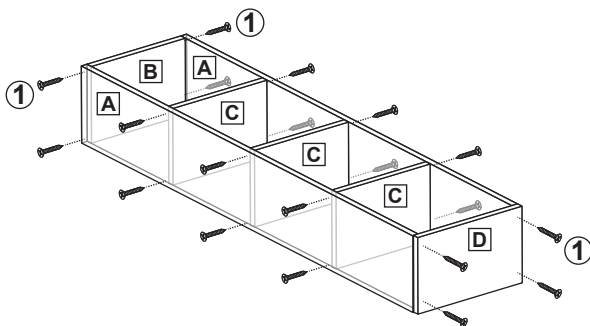

Step 3

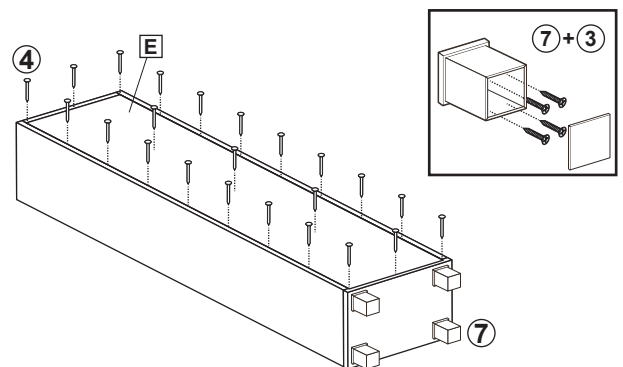

Step 4

