NAOMI

CODING

- 512030
- 512031
- 512036



ISO 9001:2015

nuhoom.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ПЕМ	РНОТО	HARDWARE NAME	QTY
(A)		SCREW (M4 X 38)	20 PCS
(B)		WOOD DOWEL (6 X 25)	20 PCS
(C)	BITTI>	SCREW (M4 X 25)	16 PCS
(D)		SCREW (M3 X 12)	20 PCS
(E)	(MILLI)	SCREW (M 3.5 X 16)	16 PCS
(F)		DOORSTUD	16 PCS
(G)		HANDLE	8 PCS
(H)	8	MAGNET WITH LEG	8 PCS
(1)	0 0	MAGNET PLATE (2 HOLES)	8 PCS
(J)	0	MAGNET PLATE (1 HOLES)	4 PCS
(K)		STOPPER	4 PCS
(L)	(M) C	DRAWERLOCK	4 PCS
(M)	8	PVCLEG	4 PCS

ITEM	РНОТО	PARTS NAME	QTY
(1)		LEFT SIDE PANEL	1 PC
(2)		SHELF PANEL	3 PCS
(3)		LEFT DOOR	4 PCS
(4)		RIGHT DOOR	4 PCS
(5)		BOTTOM PANEL	1 PC
(6)		BACK PANEL	4 PCS
(7)		RIGHT SIDE PANEL	1 PC
(8)		TOP PANEL	1 PC

NAOMI


CODING

- 512030
- 512031
- 512036




ISO 9001:2015


nuhoom.com

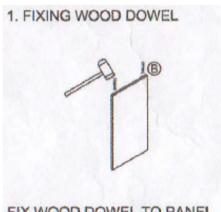


FIX WOOD DOWEL TO PANEL 1, 2, 7

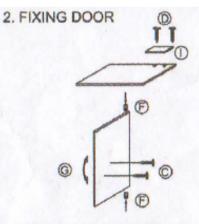

FIXING DOOR TO PANEL 3, 4

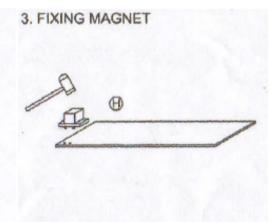


FIXING MAGNET TO PANEL 2, 8

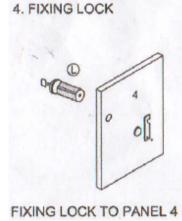



FIXING PVC LEG TO PANEL 5


5

7.

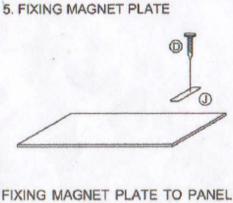

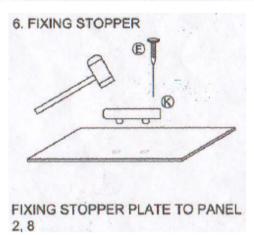



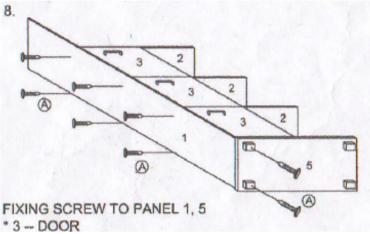

NAOMI


CODING

- 512030
- 512031
- 512036



ISO 9001:2015 Reg. No. 000435-1-MY-1-QMS

nuhoom.com

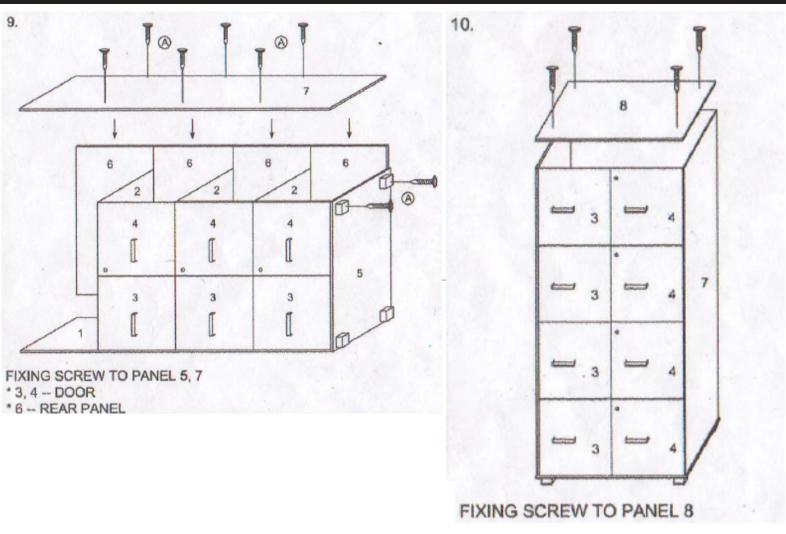

U