

CODING

- 513018

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

LUooma.com

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		Bolt (M6x80)	8
(B)		Nut (M6x9.5x12mm)	8
(C)		Bolt (M6x30)	43
(D)		Allen key 4mm	1
(E)		Screw (M3.5x16)	1
(F)		Flat washer (Φ5xΦ9)	1
(G)		Plastic Hook	2
(H)		Cable tie	1




ITEM	PHOTO	PARTS NAME	QTY
(1)		Leg frame (left)	1
(2)		Leg frame (right)	1
(3)		Shelf (1-5)	5
(4)		Support rail(1-5)	5
(5)		Upper back rail	1
(6)		Bottom back rail	1

CODING
- 513018



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

LUOMA.COM

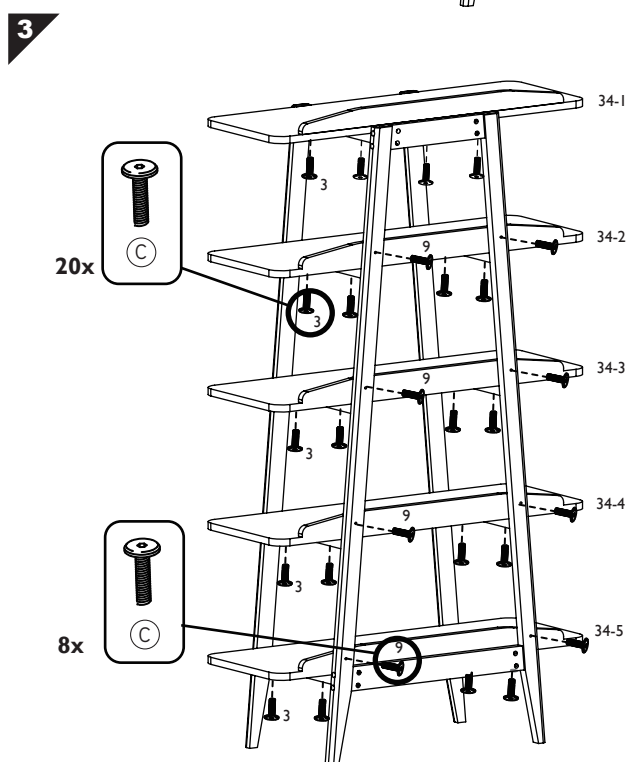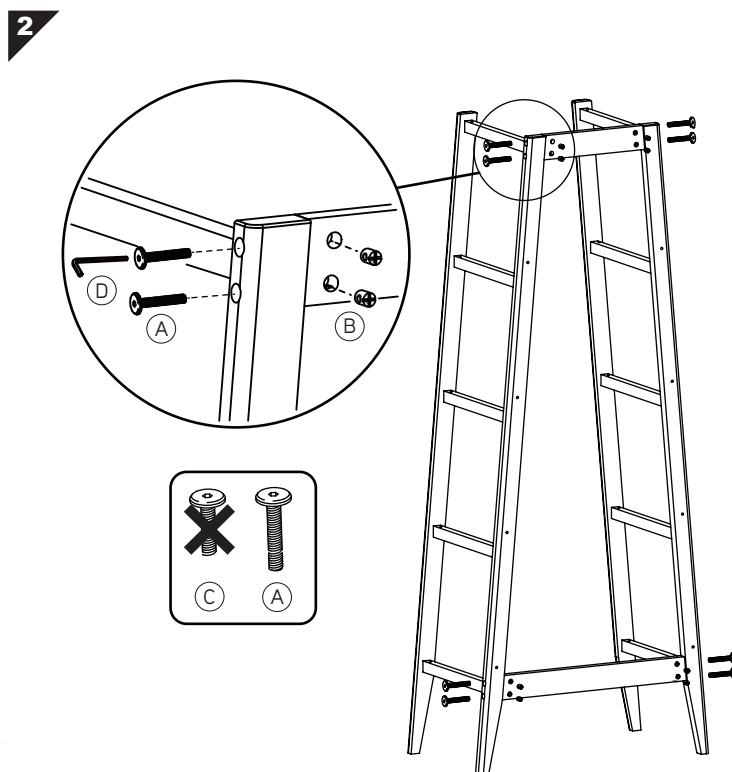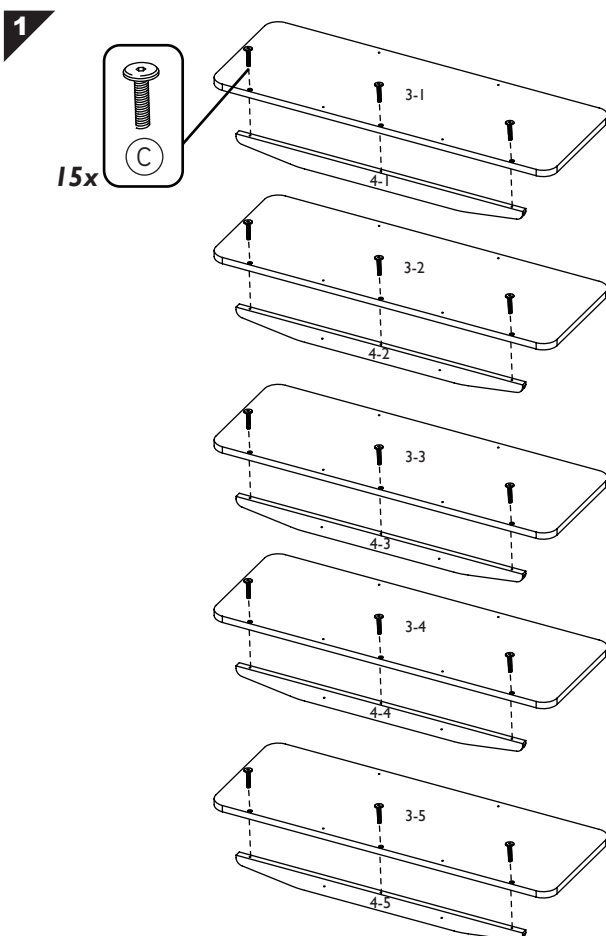

CODING
- 513018




ISO 9001:2015
Reg. No. 000435-1-MTY-1-QMS

LUOMA.COM

4


****! Fitting not enclosed!**

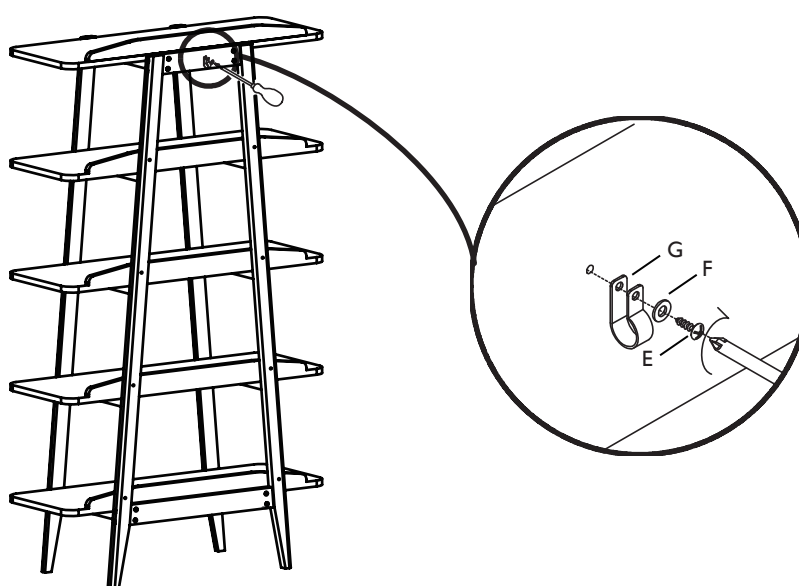

5


Wall fixing - if in doubt seek professional advice

Please ensure to use the correct size rawl plug when installing the plastic loop bracket to a wall. If your wall is cavity construction or wood you may need to seek appropriate wall fixings.

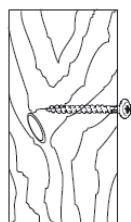


Wood

If fixing to wood make sure that it isn't chipboard as screws can easily pull away from the core structure

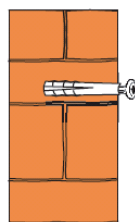

Brick or Masonry

Use an appropriate wall plug provided you are sure your wall is sound



Cavity wall

Special toggle wall plugs are needed.
Seek expert advice


CODING
- 513018



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

LUOMA.COM

6

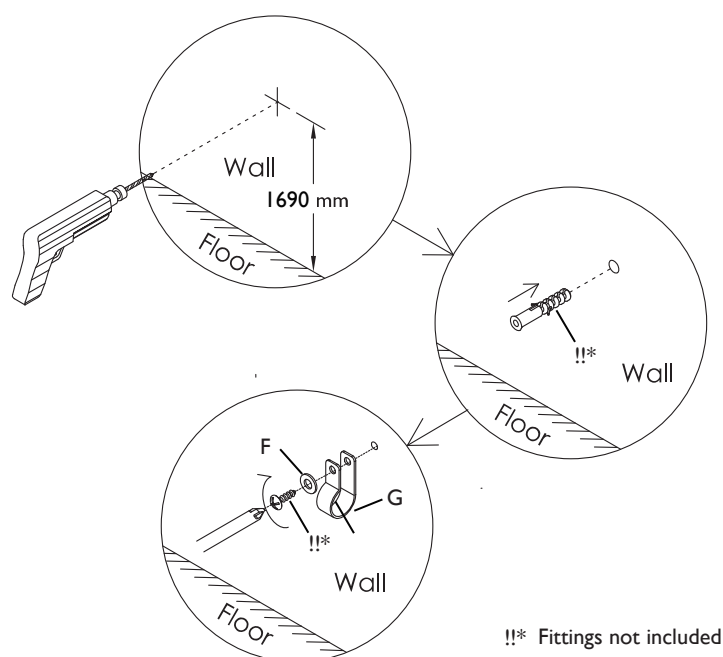

7

Locate the cable tie (part H) as shown below. Push the cabinet back towards the wall and into position. Pull the cable tie (part H) tight.

