


CODING
-514012

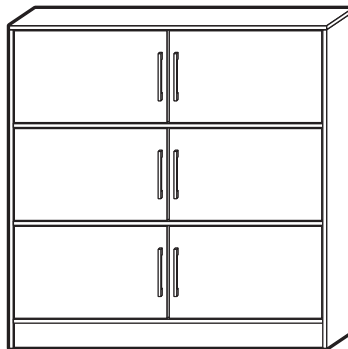


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST		QTY
①		M4 x 45mm Chipboard Screw	12
②		M4 x 25mm Chipboard Screw	12
③		M3.5 x 16mm Chipboard Screw	28
④		M3 x 12mm Chipboard Screw	18
⑤		Wood Dowel 6 x 25mm	36
⑥		Nail	18
⑦		Minifix Pin	4
⑧		Minifix Cam	4
⑨		Door Spring (AC75 L)	12
⑩		L Bracket (Bottom)	4
⑪		L Bracket (Center)	2
⑫		L Bracket	2
⑬		Magnet	6
⑭		Magnet Plate	6
⑮		Handle AC81 (160mm)	6


ITEM	PART LIST		QTY
Ⓐ	Left Side Panel		1
Ⓑ	Left Side Panel		1
Ⓒ	Top Panel		1
Ⓓ	Bottom Panel		1
Ⓔ	Shelf Panel		2
Ⓕ	Bracel Panel		3
Ⓖ	Bottom Bracel Panel		2
Ⓕ	Back Panel		1
Ⓖ	Left Door Panel		3
Ⓖ	Right Door Panel		3

CODING
-514012

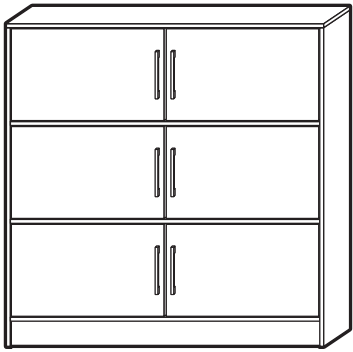


nuhoom.com


Step 1

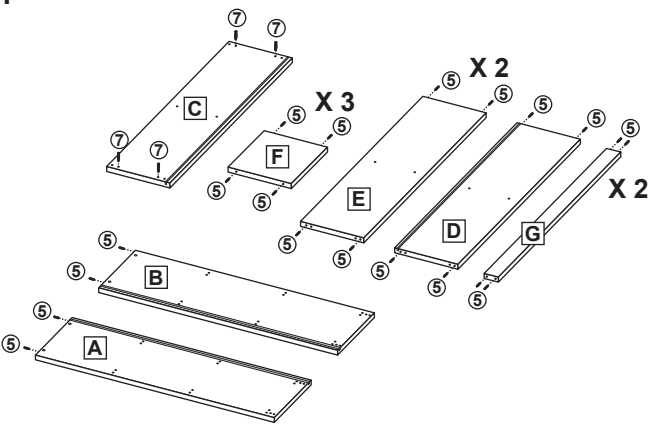


Step 2

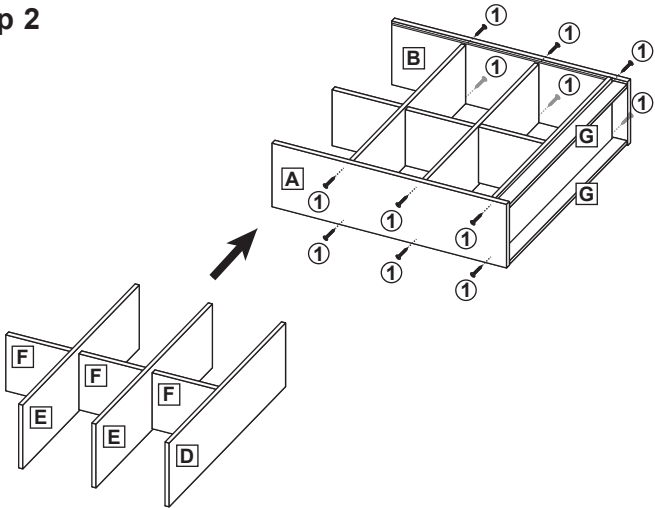


Step 3

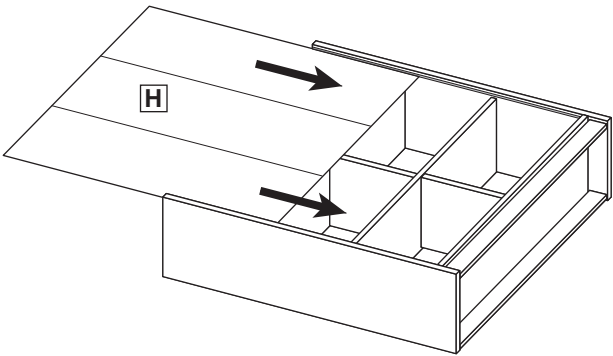

Step 4

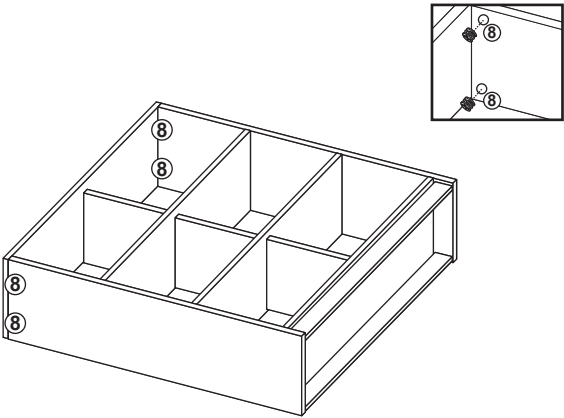

Step 5

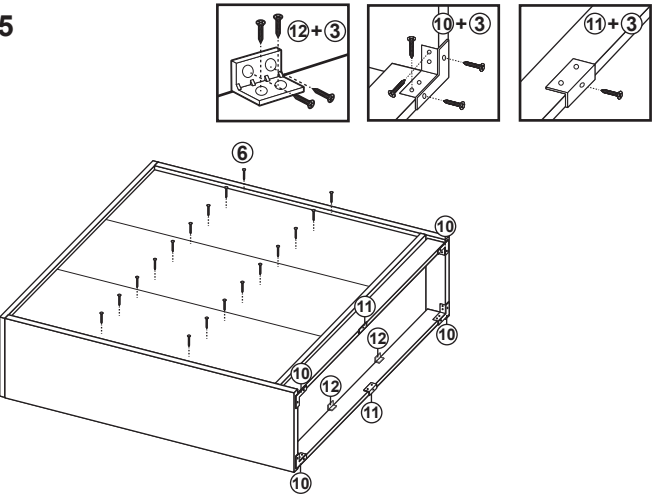

Step 6

