


CODING
-514014

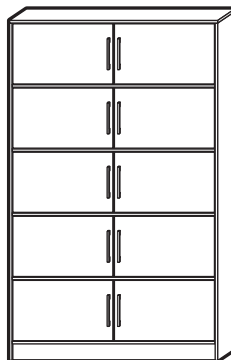

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST		QTY
①		M4 x 45mm Chipboard Screw	20
②		M4 x 25mm Chipboard Screw	20
③		M3.5 x 16mm Chipboard Screw	28
④		M3 x 12mm Chipboard Screw	30
⑤		Wood Dowel 6 x 25mm	52
⑥		Nail	36
⑦		Minifix Pin	4
⑧		Minifix Cam	4
⑨		Door Spring (AC75 L)	20
⑩		L Bracket (Bottom)	4
⑪		L Bracket (Center)	2
⑫		L Bracket	2
⑬		Magnet	10
⑭		Magnet Plate	10
⑮		Handle AC81 (160mm)	10


ITEM	PART LIST		QTY
Ⓐ	Left Side Panel		1
Ⓑ	Left Side Panel		1
Ⓒ	Top Panel		1
Ⓓ	Bottom Panel		1
Ⓔ	Shelf Panel		4
Ⓕ	Bracel Panel		5
Ⓖ	Bottom Bracel Panel		2
Ⓗ	Back Panel		1
Ⓘ	Left Door Panel		5
Ⓙ	Right Door Panel		5

CODING
-514014

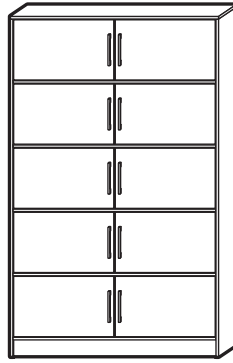


nuhoom.com


Step 1

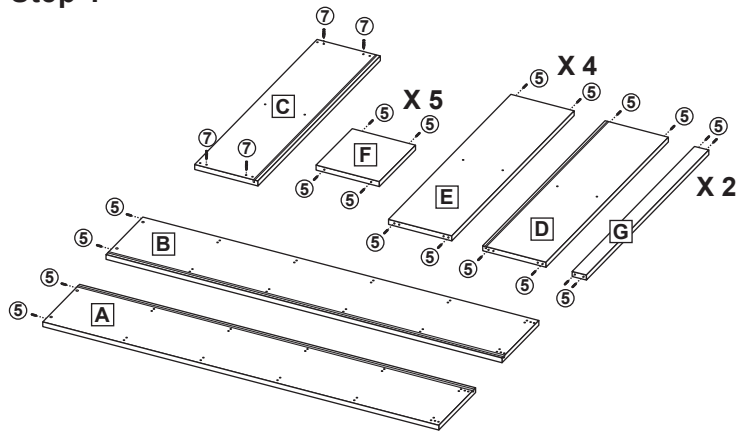


Step 2

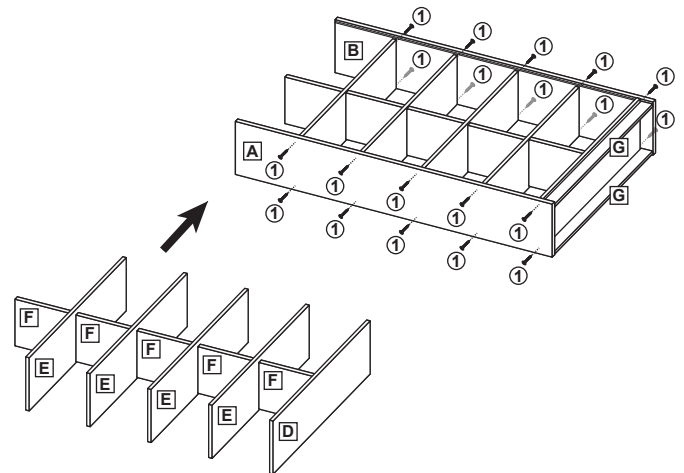



Step 3

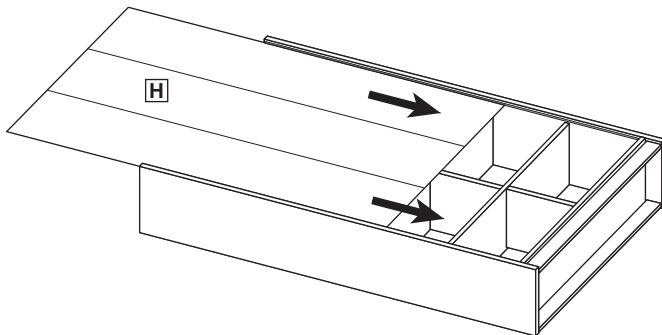

Step 4

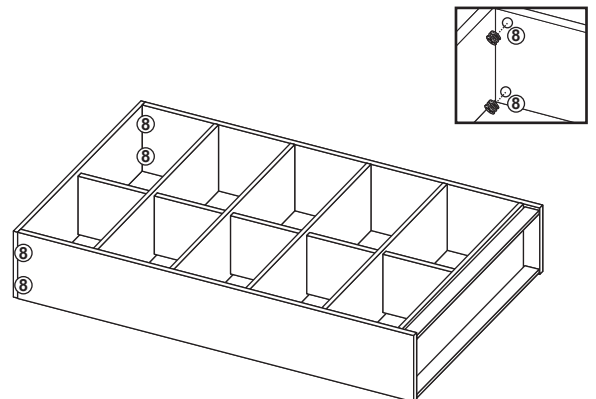

Step 5

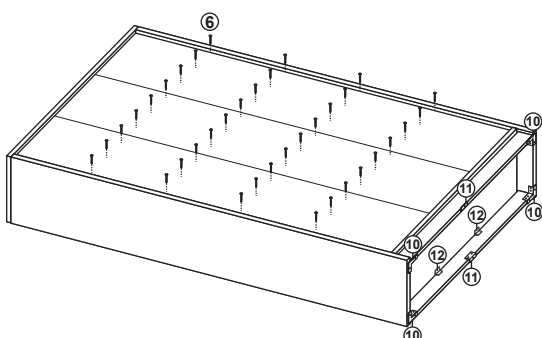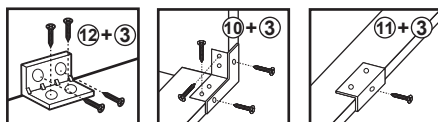

Step 6

