


CODING
-3123002
-522017

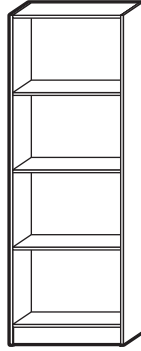








ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST		QTY
①		M5 x 40mm JCBCW Screw	20
②		M3.5 x 16mm Chipboard Screw	8
③		Nail	60
④		Wood Dowel 6 x 25mm	24
⑤		L Bracket	1
⑥		Square Leg	4
⑦		Allen Key	1

ITEM	PART LIST		QTY
Ⓐ	Side Panel		2
Ⓑ	Shelf Panel		5
Ⓒ	Bottom Brace Panel		1
Ⓓ	Back Panel		1


CODING
-3123002
-522017

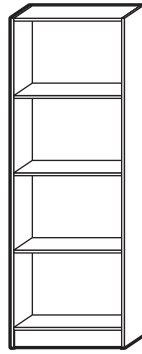


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Step 1

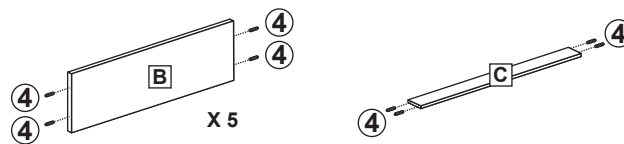


Step 2

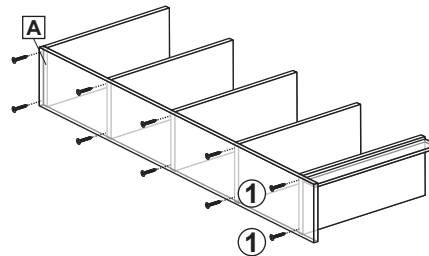

Step 3

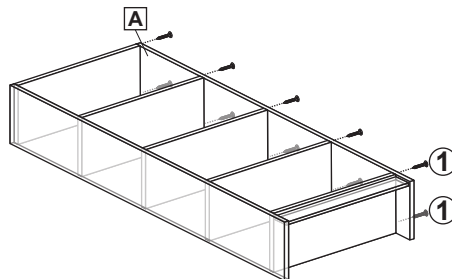

Step 4

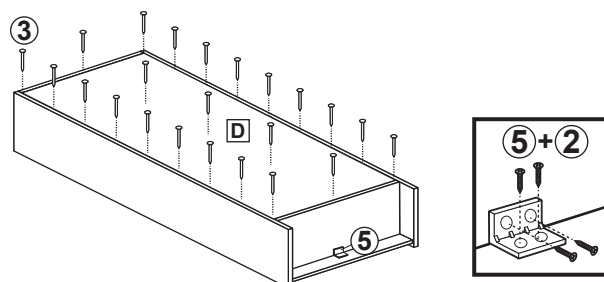

Step 5

