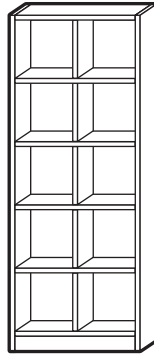


CODING

-522068

-522069

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST		QTY
(A)		M6 x 60mm JCBCW Screw	20
(B)		M3.5 x 16mm Chipboard Screw	4
(C)		Nail	110
(D)		Wood Dowel 6 x 25mm	30
(E)		Leg Nail	5
(F)		L Bracket	1
(G)		Allen Key	1

ITEM	PART LIST		QTY
(1)	Side Panel		2
(2)	Shelf Panel (Top/Bottom Screw)		2
(3)	Shelf Panel (Screw)		2
(4)	Shelf Panel		2
(5)	Brace Panel (Top)		1
(6)	Brace Panel (Bottom)		1
(7)	Brace Panel (Center)		3
(8)	Bottom Brace Panel		1
(9)	Back Panel		1


CODING
-522068
-522069

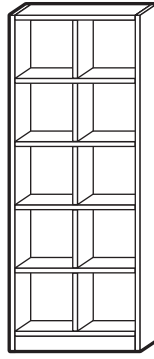


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Step 1

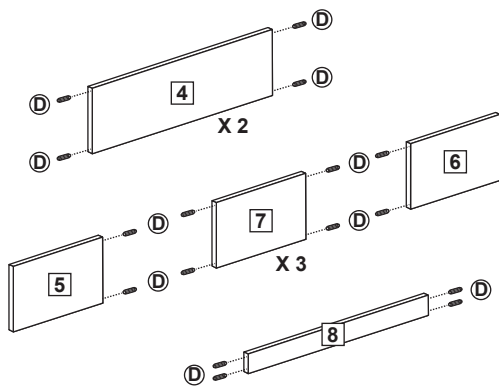


Step 2

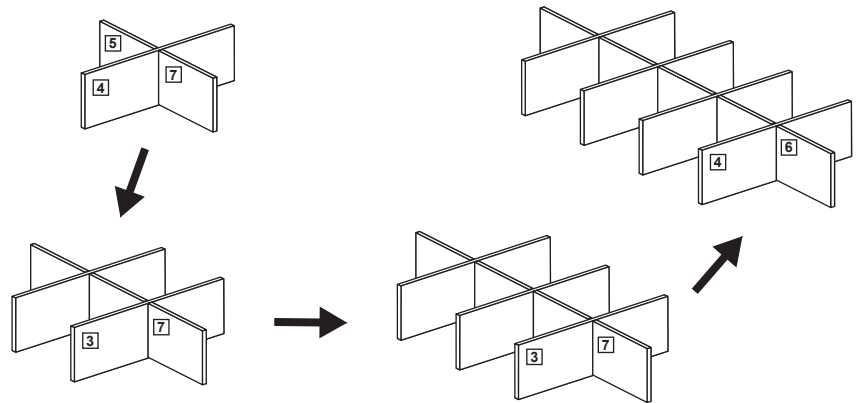


Step 3

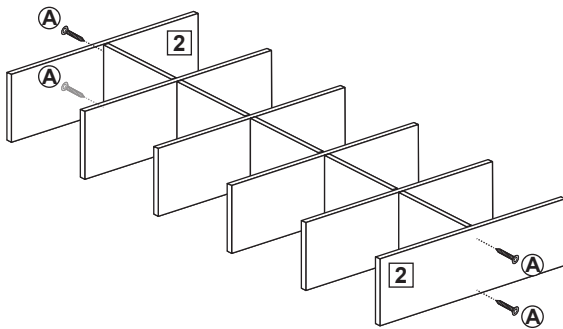

Step 4

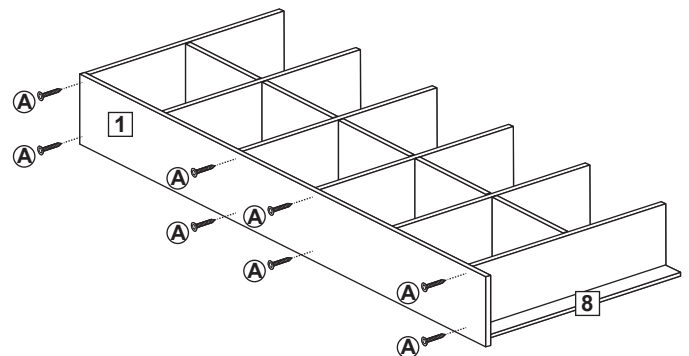

Step 5

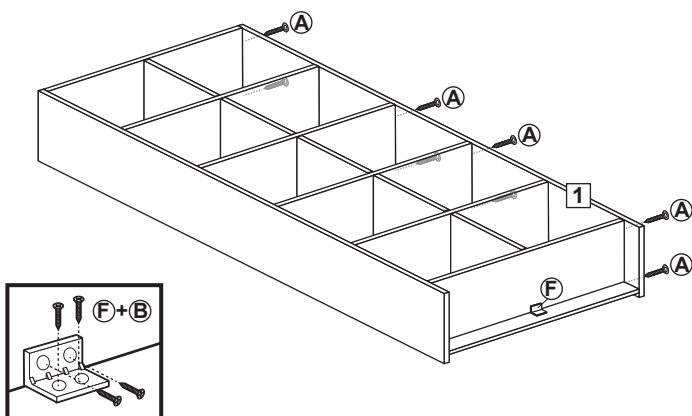

Step 6

