


**CODING**  
- 522071

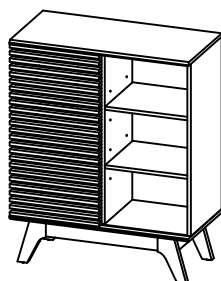















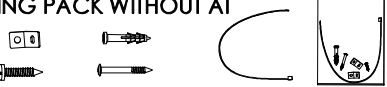
ISO 9001:2015  
Reg. No. 000435-1-RTY-1-QMS

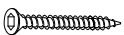**nuhoom.com**



Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

**CAUTION**  
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.


PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	CENTER PANEL	1 PC
6	SHELF PANEL	4 PCS
7	BACK PANEL	1 PC
8	BACK BONE	1 PC
9	SLIDING DOOR	1 PC
10	APRON SIDE	2 PCS
11	APRON LEG	2 PCS

HARDWARE			
A	MINI FIX	A1  A2  A3 	12 SETS
B	M8 X 30MM WOOD DOWEL		20 PCS
C	M6 X 50MM CSK CAP WOOD SCREW		8 PCS
D	ALLEN KEY M4		1 PC
E	M3 X 12MM C.B SCREW		8 PCS
F	M4 X 65MM C.B SCREW		12 PCS
G	5/8 PVC NAIL LEG		4 PCS
H	METAL SHELF SUPPORT		16 PCS
I	STUD 192 WITH SCREW	I1  I2 	8 PCS
J	U 480 ROLLER	J1  J2 	2 SETS
	TIPPING PACK WITHOUT A1		2 SETS

**SELF-PREPARED TOOLS:** Tools below are NOT included in package.


 SCREWDRIVER	 HAMMER
---	--

CODING  
- 522071

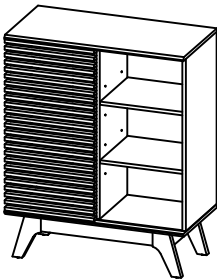


ISO 9001:2015  
Reg. No. 000435-1-001-1-QM8

nuhoom.com

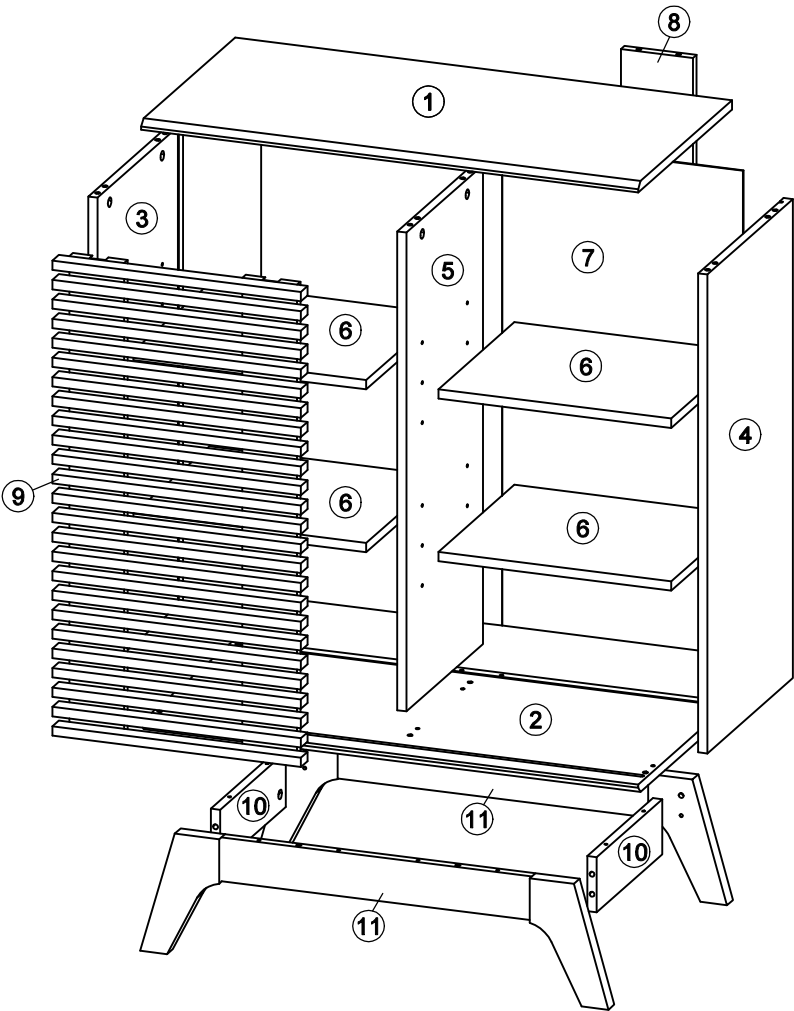

**CODING**  
- 522071

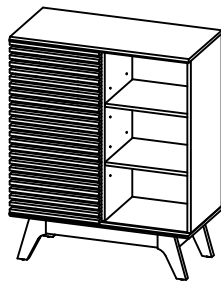


ISO 9001:2015  
Reg. No. 000435-1-007-1-QMS

**nuhoom.com**


## STEP 1

- Insert hardware **A2** onto panel (1).  
(Repeat 8 times.)

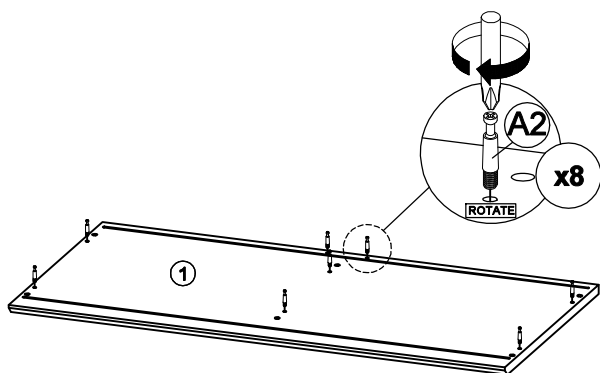

## STEP 2


- Insert hardware **A1** onto panel (3), (4) and (5).  
(Repeat 6 times.)
- Insert hardware **B** onto panel (3), (4) and (5).  
(Repeat 12 times.)

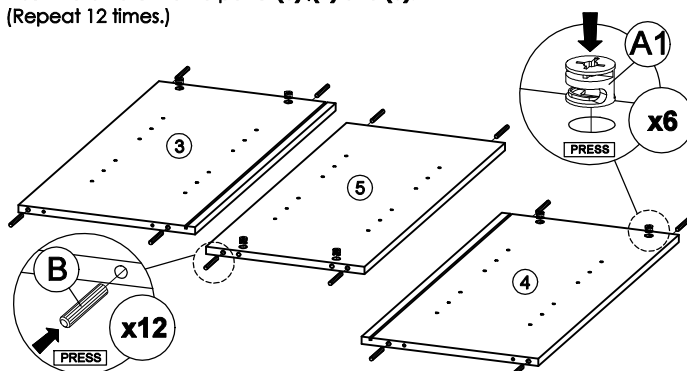

\* Ensure the arrows on hardware **A1** point towards mounting positions.

## STEP 3


- Insert hardware **A1** onto panel (8) and (10).  
(Repeat 6 times.)
- Insert hardware **B** onto panel (10).  
(Repeat 4 times.)

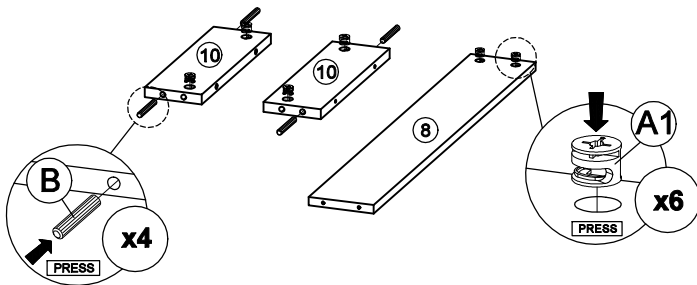

\* Ensure the arrows on hardware **A1** point towards mounting positions.

## STEP 5


- Attach panel (3), (4) and (5) to panel (1).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.  
(Repeat 6 times.)

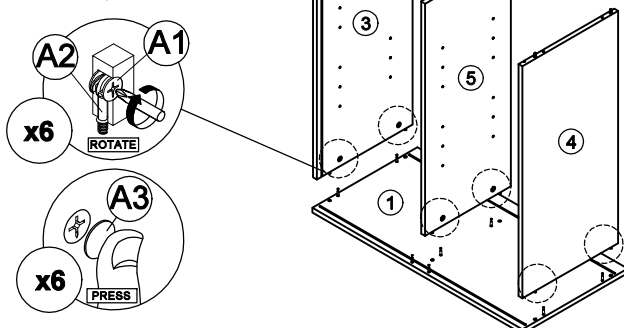

\* In this step hardware **A1**, **A2** and **B** are pre-inserted.


## STEP 4

- Insert hardware **A2** onto panel (11).  
(Repeat 4 times.)
- Insert hardware **B** onto panel (11).  
(Repeat 4 times.)

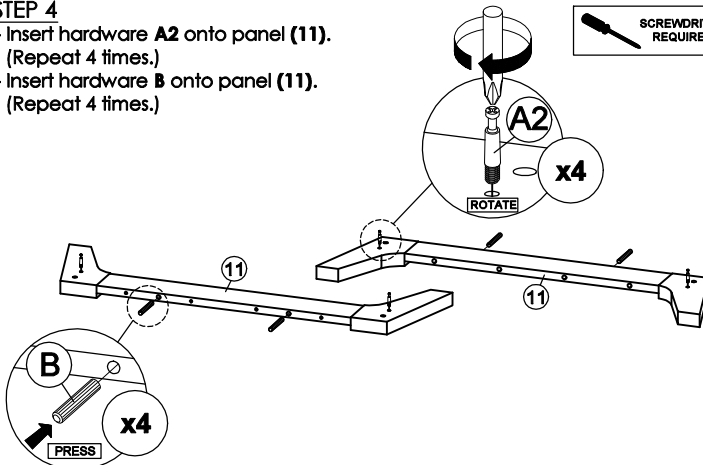


## STEP 6

- Attach panel (8) to panel (1).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.  
(Repeat 2 times.)

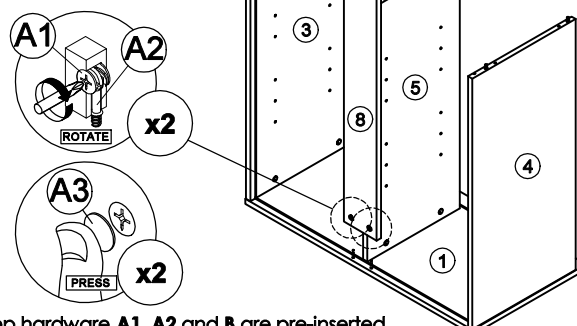

\* In this step hardware **A1**, **A2** and **B** are pre-inserted.

**CODING**  
- 522071

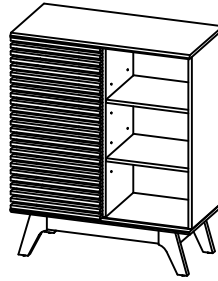


**ISO 9001:2015**  
Reg. No. 000435-1-MY-1-QMS

**nuhoom.com**


## STEP 7

- Insert the panel (7) along the slot.  
(Repeat 1 times.)

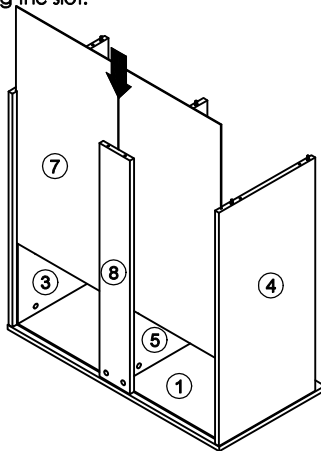


## STEP 8

- Connect panel (2) to panel (3), (4), (5) and (8) by using hardware C and D.  
(Repeat 8 times.)

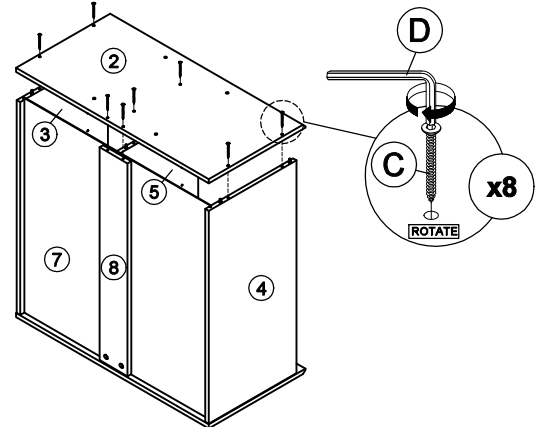


## STEP 9

- Insert hardware I1 into slot at panel (1), (2), (3) and (4).
- Assemble hardware I1 by using hardware I2.  
(Repeat 10 times.)

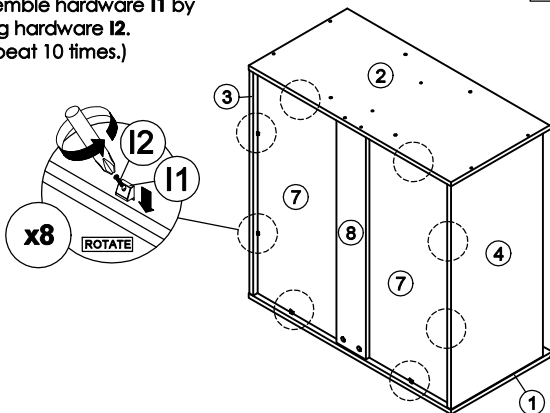


## STEP 10

- Attach panel (11) to panel (10).
- Insert all hardware A2 into A1.
- Rotate all A1 until tight.
- Apply A3 onto all A1.  
(Repeat 4 times.)

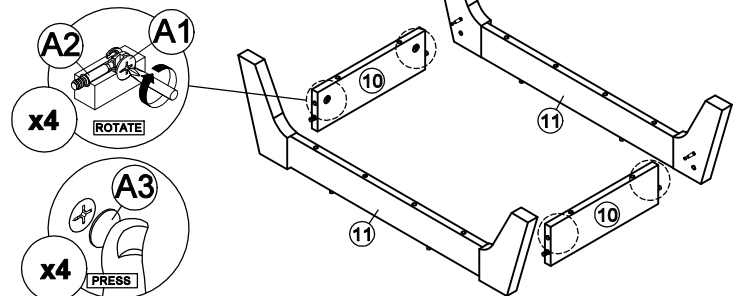


## STEP 11

- Connect leg (10) and (11) to panel (2) by using hardware F.  
(Repeat 12 times.)

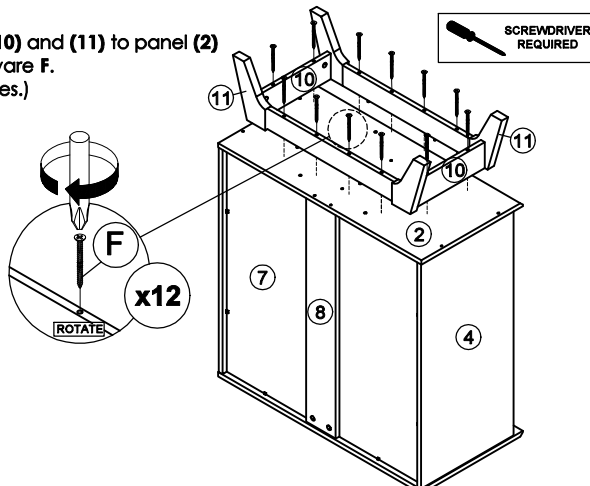


## STEP 12

- Hit hardware G into bottom of panel (11).  
(Repeat 4 times.)

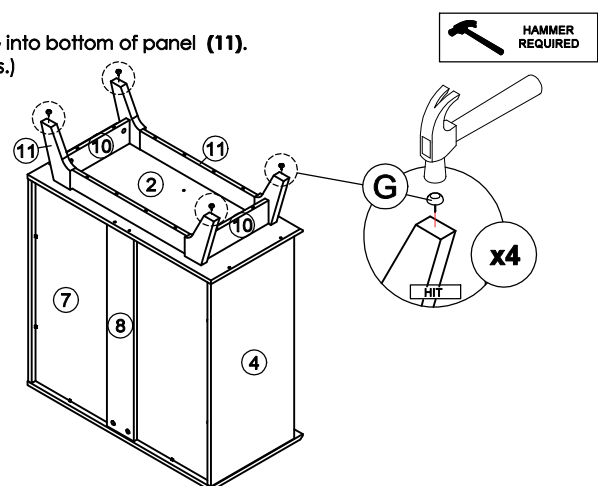

**CODING**  
- 522071

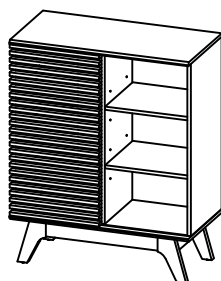


ISO 9001:2015  
Reg. No. 000435-1-001-1-QM8

**nuhoom.com**


## STEP 13

- Insert hardware **H** into mounting positions on panel **(3)**, **(4)** and **(5)** by hand.  
(Repeat 16 times.)

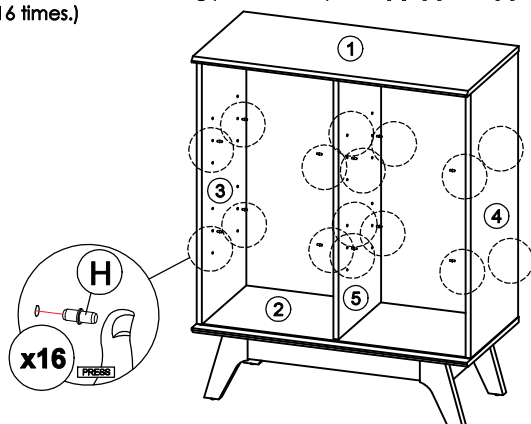

## STEP 14


- Assemble the panel **(6)** into between panel **(3)** and **(5)**.  
(Repeat 2 times.)
- Assemble the panel **(6)** into between panel **(4)** and **(5)**.  
(Repeat 2 times.)

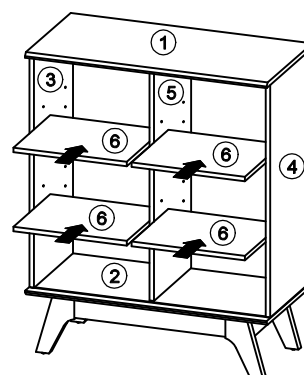

## STEP 15

- Assemble hardware **J1/J2** to two panel **(9)** with hardware **E**.  
(Repeat 2 times for each hardware.)

SCREWDRIVER  
REQUIRED

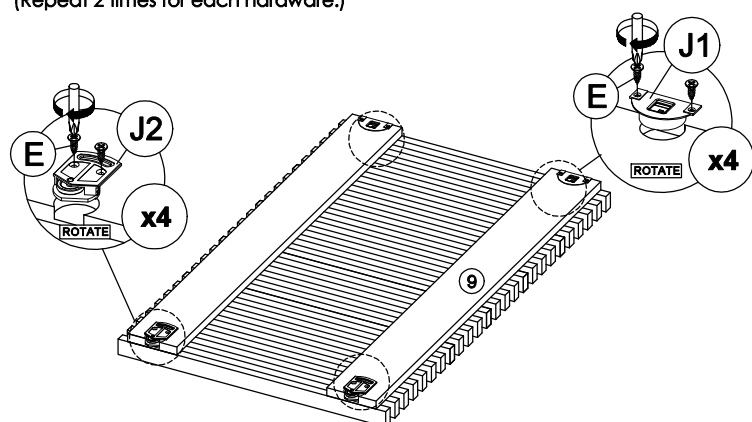

## STEP 16

- Put the panel **(9)** in place.  
(Repeat 1 times.)

