

PLEASE FOLLOW
THOSE NUMBERS AS
STATED BELOW FOR
EASY ASSEMBLE.

EXAMPLE : STEP ASM. HARDWARE PART





1

A

12


522010, 522061, 522062

MODEL: ECO

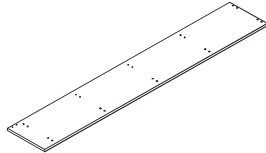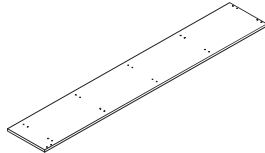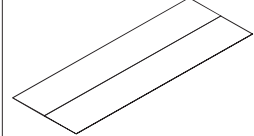
HARDWARE	PART										
	A	B	C	D	E	F	1	2	3	6	13
	 JCBC 40mm x20		 20mm x8	 25mm x24	 x4	 x45	 x1	 x1	 x1	 x5	 x1

1


INSERT THE 4 PCS DOWEL TO THE 3, 6 PANEL

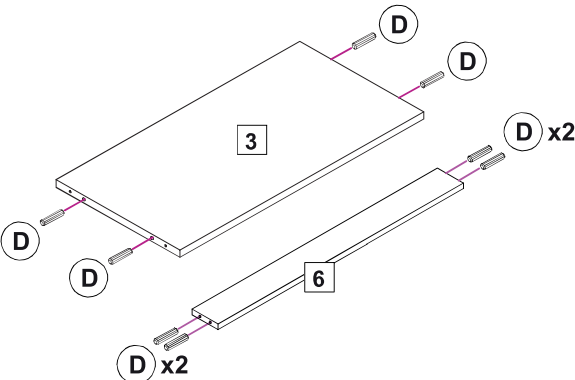


2

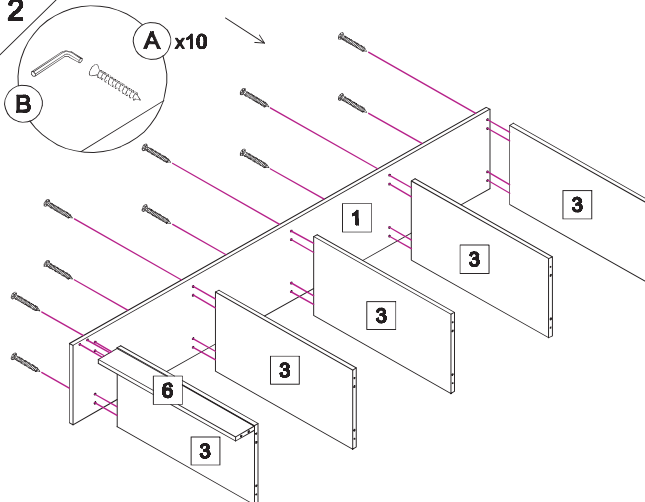


3

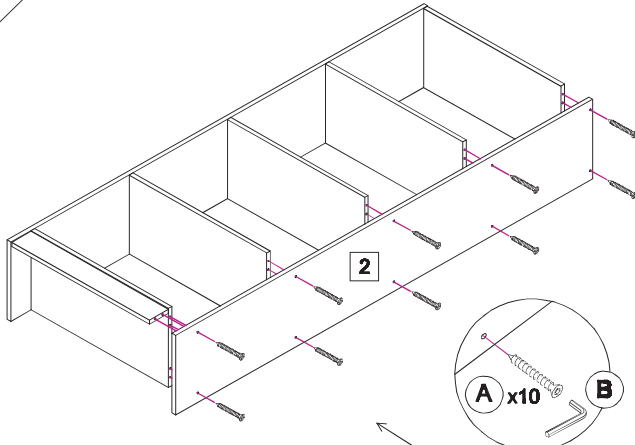

4

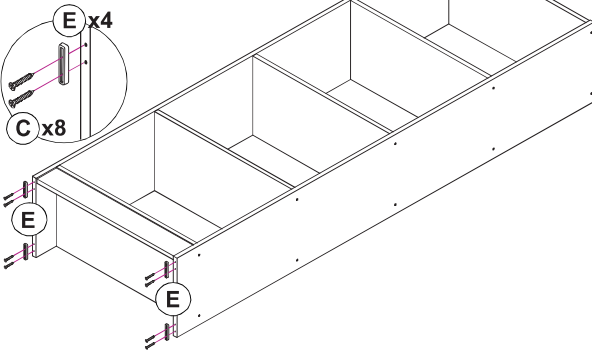

5

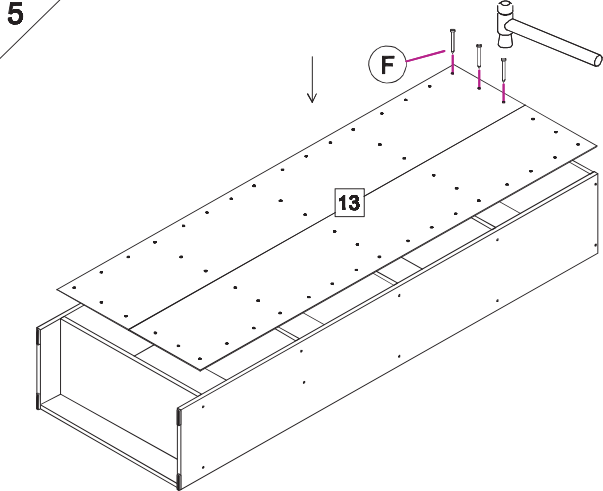

6

