

CODING  
-522084



ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

**nuhoom.com**

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

**CAUTION**

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HARDWARE NAME	QTY
①		Minifix Bolt	10
②		Cam 12/15	10
③		Wood Dowel 6 x 30	8
④		Csk Screw 3.5 x 15	25
⑤		Unitar Screw 6.3 x 40	6
⑥		Csk Screw 4 x 20	16
⑦		Csk Screw 3.1 x 20	18
⑧		Backply Stopper	18
⑨		Slow Closed Hinges (5/8)	4
⑩		L-Mounting Bracket	1
⑪		Metal Leg	4
⑫		Wall Plug	1
⑬		Shelf Stopper	4

⑭		Csk Screw 4 x 38	1
⑮		Allen Key M4	1


ITEM	PHOTO	PARTS NAME	QTY
Ⓐ		Side Panel Left	1
Ⓑ		Side Panel Right	1
Ⓒ		Top Panel	1
Ⓓ		Bottom Panel	1
Ⓔ		Fixed Shelf Panel	1
Ⓕ		Center Support Panel	1
Ⓖ		Adjustable Shelf Panel	1
Ⓗ		Door Panel Left	1
Ⓘ		Door Panel Right	1
Ⓨ		Backply Panel Bottom	1
Ⓨ₁		Backply Panel Top	1

CODING  
-522084



ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS


[nuhoom.com](http://nuhoom.com)

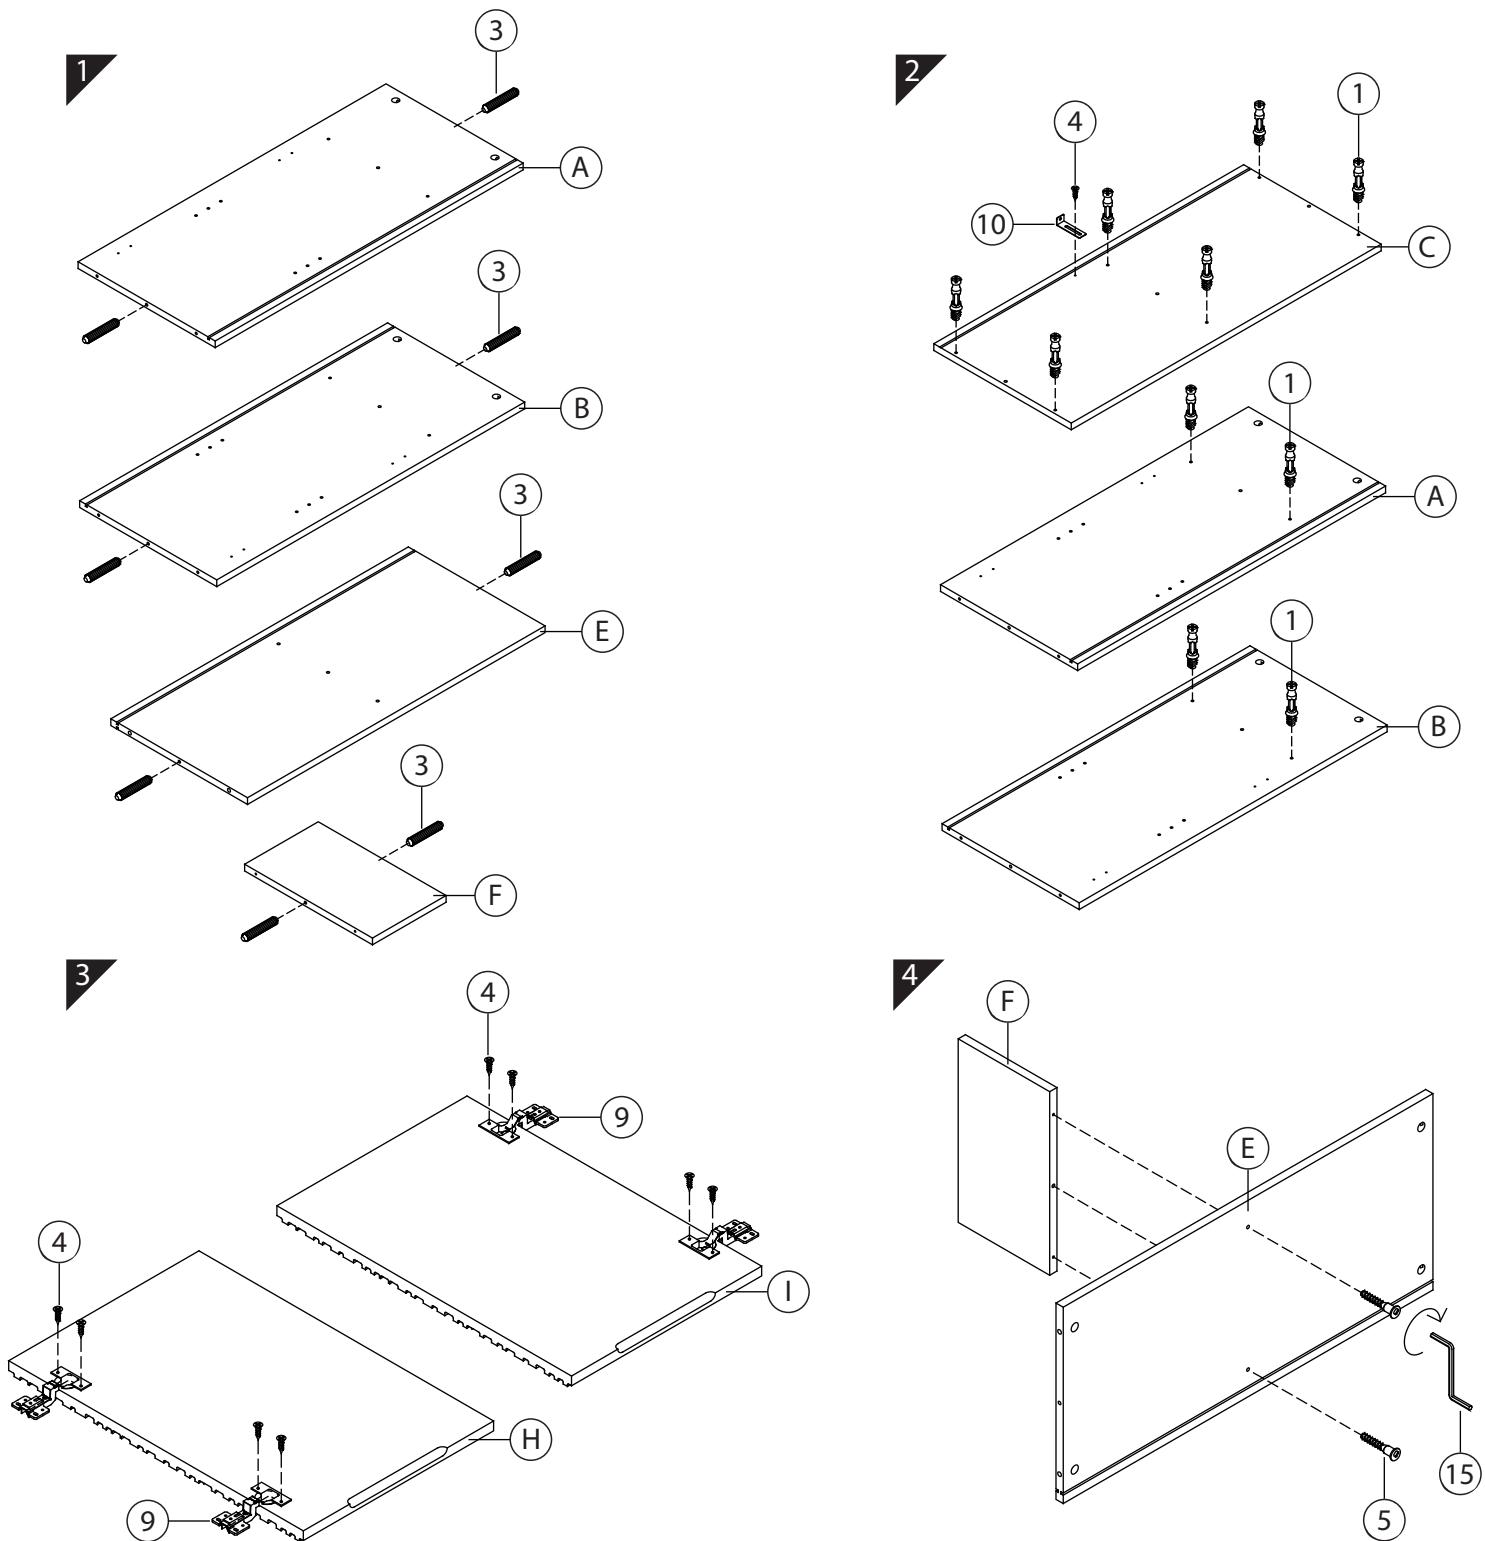

CODING  
 -522084

 ISO 9001:2015  
 Reg. No. 000435-1-MY-1-QMS

nuhoom.com

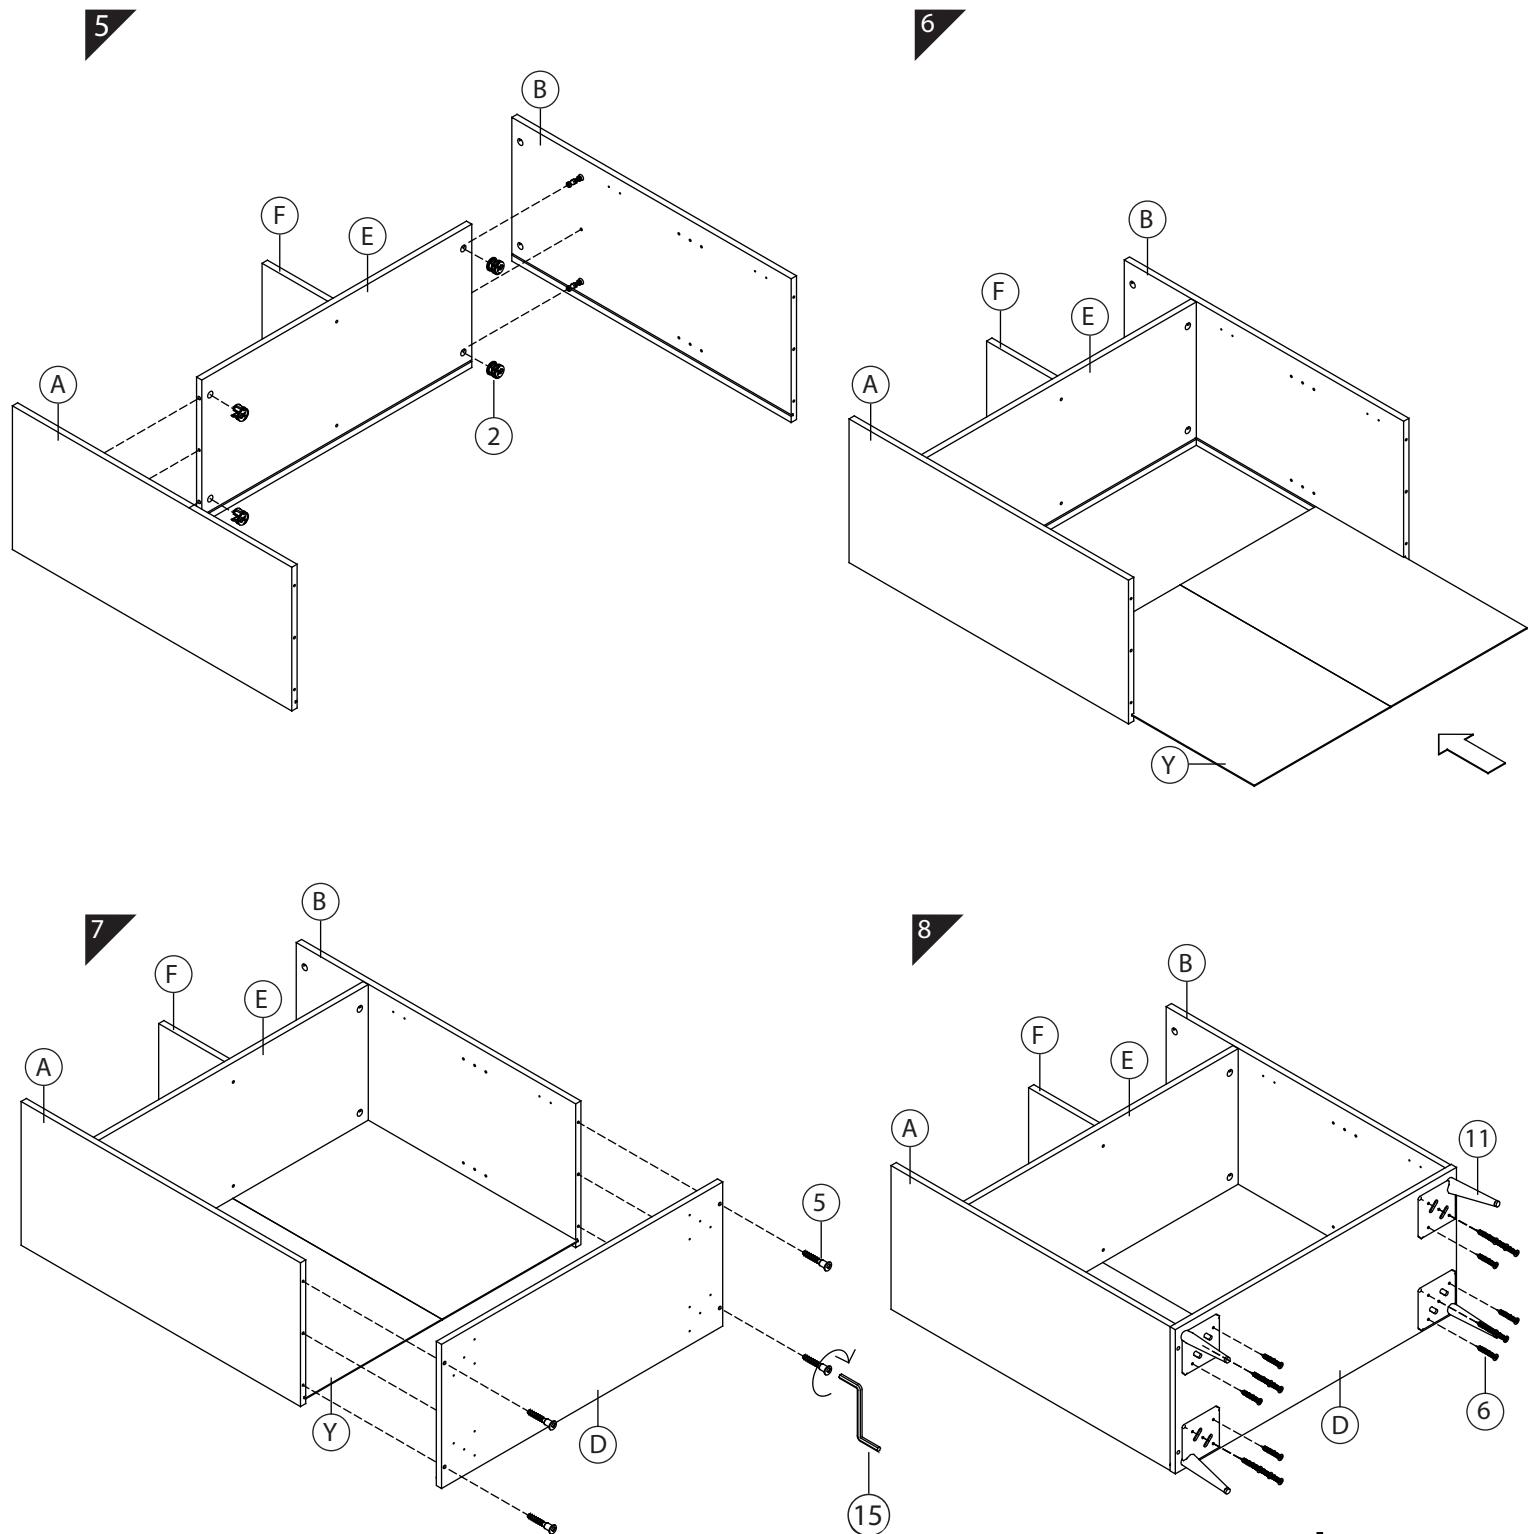


CODING  
-522084




ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

[nuhoom.com](http://nuhoom.com)


9

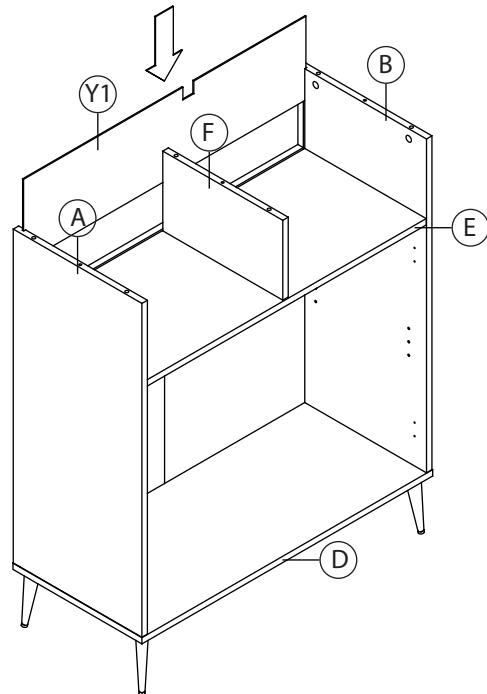


10

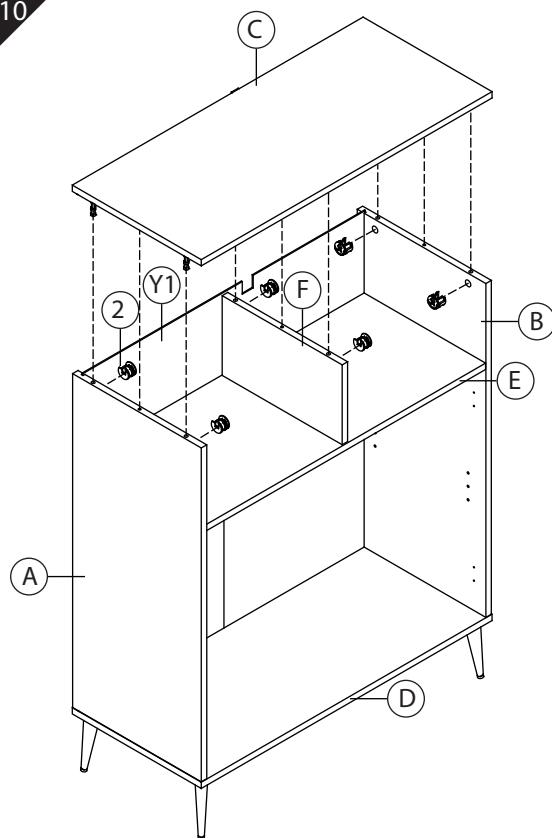

11

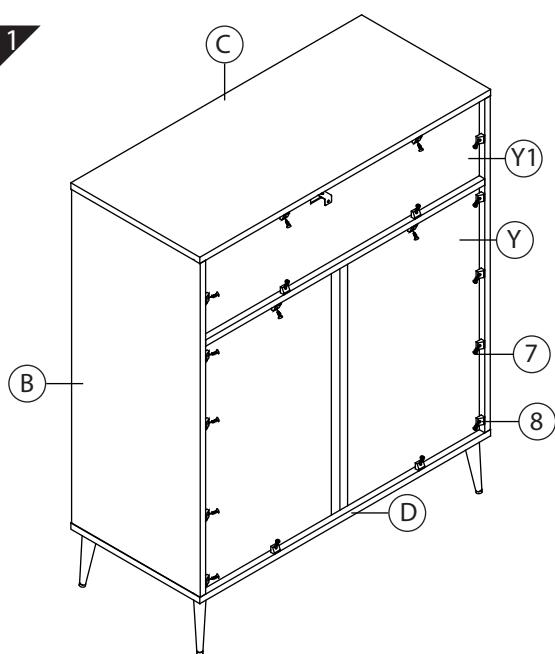

12

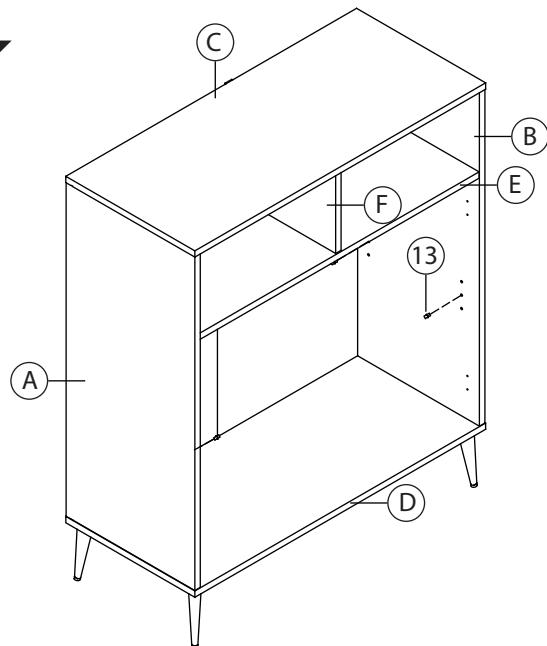


CODING  
-522084




ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

[nuhoom.com](http://nuhoom.com)


13

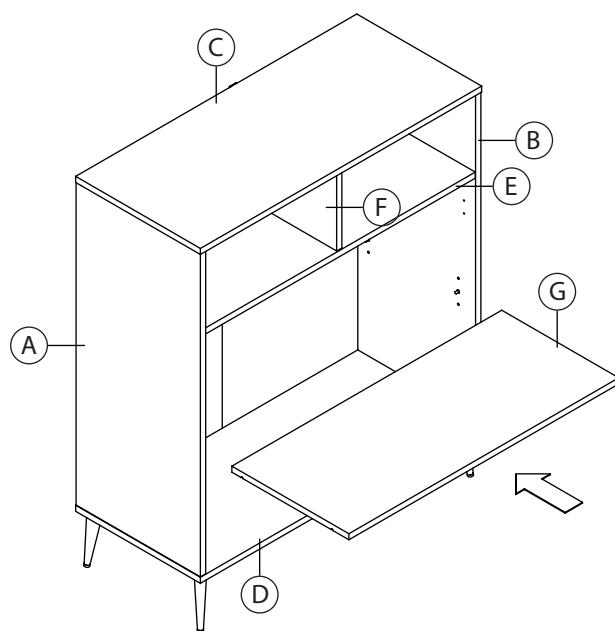

14

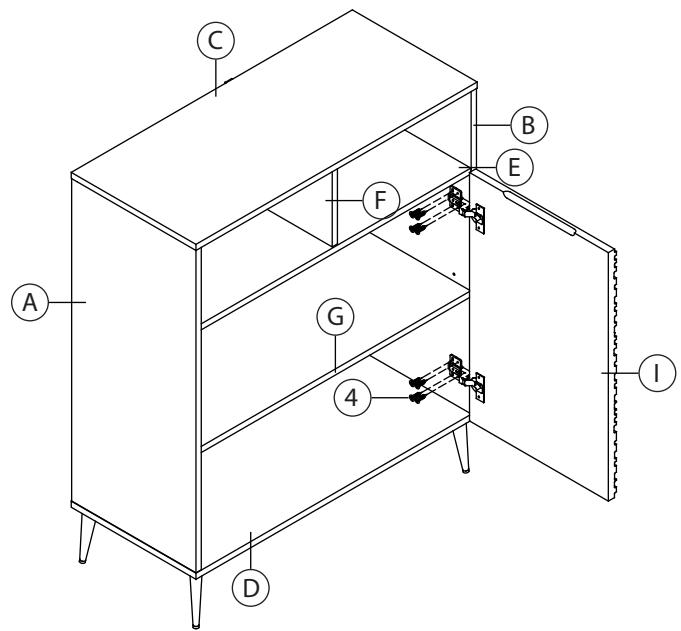

15

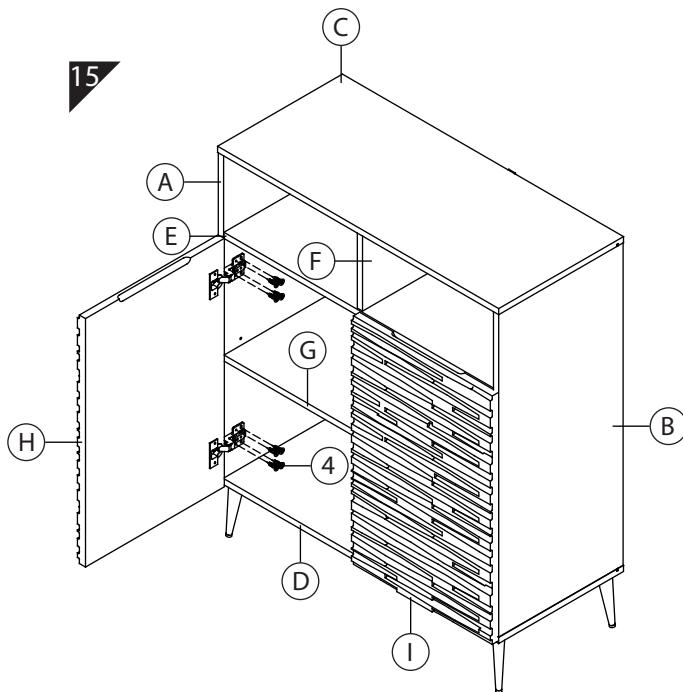

16

