KRABI

CODING
- 522088

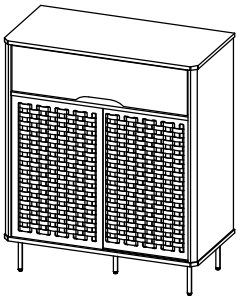

ISO 9001:2015
Reg. No. 600455-1-MY-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

HARDWARE		
A	MINI FIX A1 A2 A3	12 SETS
B	M8 X 30MM WOOD DOWEL	14 PCS
C	M6 X 50MM CSK CAP WOOD SCREW	4 PCS
D	ALLEN KEY M4	1 PC
E	M3.5 X 16MM C.B SCREW	36 PCS
F	M4 X 38MM C.B SCREW	4 PCS
G	METAL SHELF SUPPORT	8 PCS
H	(S059) L BRACKET	2 PCS
I	PAN HEAD SCREW M4 X 16MM	4 PCS
J	14" DRAWER SLIDE J1 (L/R) J2 (L/R)	1 SET
K	METAL CENTER LEG (50 x 50 x H140MM)	5 PCS

SELF-PREPARED TOOLS: Tools below are NOT included in package.	
SCREWDRIVER	HAMMER

	PART LIST	QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	SUPPORT BAR - FRONT	1 PC
6	SUPPORT BAR - BACK	1 PC
7	BACK PANEL	1 PC
8	SHELF PANEL	2 PCS
9	DRAWER FRONT	1 PC
10	DRAWER BACK	1 PC
11	DRAWER SIDE (L)	1 PC
12	DRAWER SIDE (R)	1 PC
13	DRAWER BOTTOM	1 PC
14	DRAWER BONE	1 PC
15	DOOR	2 PCS

KRABI

CODING
- 522088

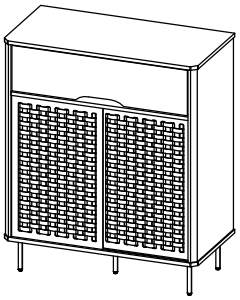

ISO 9001:2015
Reg. No. 600455-1-MT-1-QMS

nuhoom.com

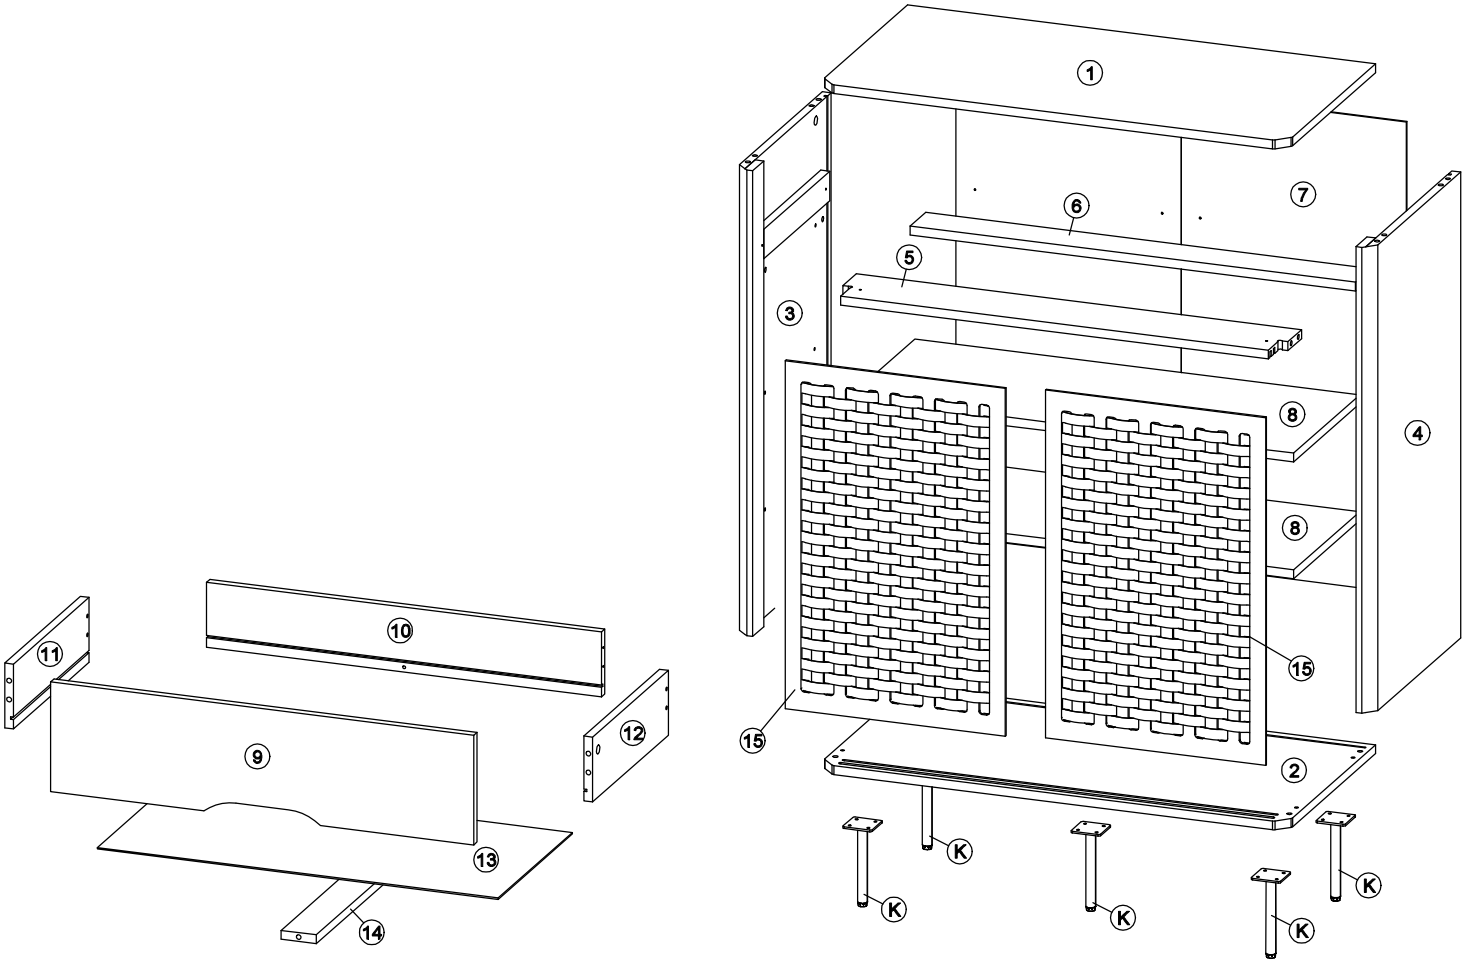

STEP 1
- Insert hardware **A2** onto panel **(1)**, **(3)** and **(4)**. (Repeat 8 times.)
- Insert hardware **B** into panel **(3)** and **(4)**. (Repeat 8 times.)

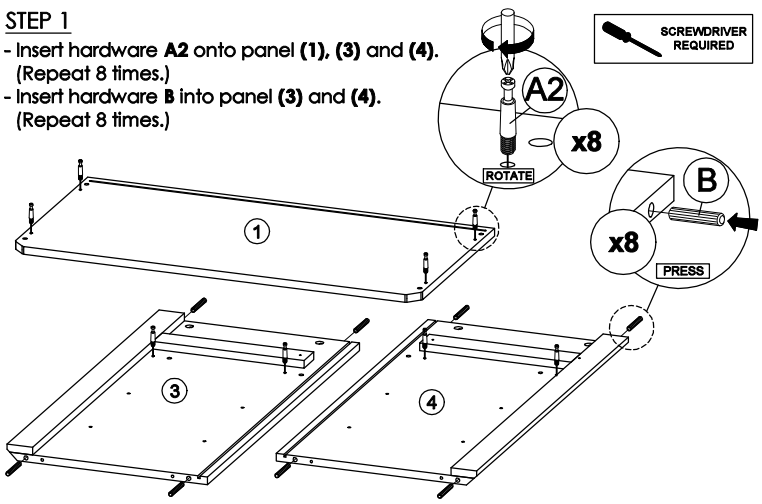

STEP 2
- Insert hardware **A2** onto panel **(9)** and **(10)**. (Repeat 4 times.)
- Insert hardware **B** into panel **(5)**, **(6)**, **(11)** and **(12)**. (Repeat 6 times.)

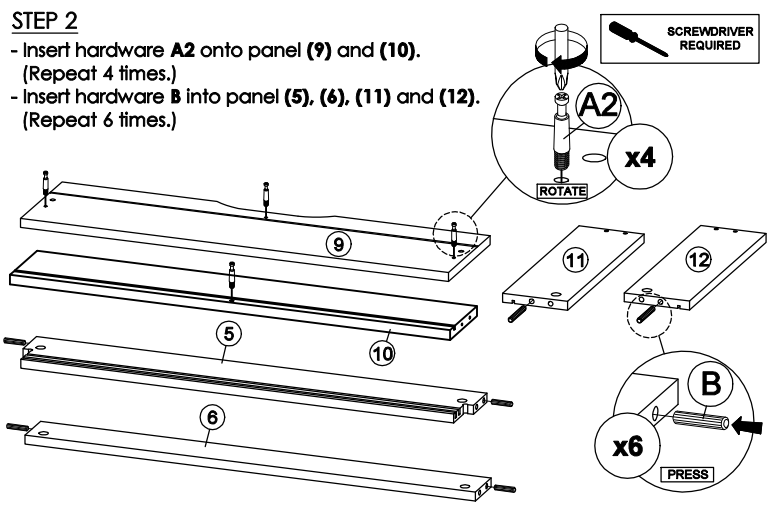

CODING
- 522088

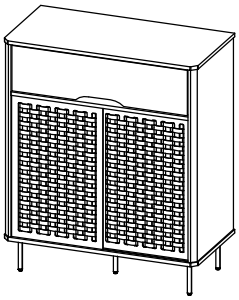

ISO 9001:2015
Reg. No. 600455-1-MT-1-QMS

nuhoom.com

STEP 3

SCREWDRIVER REQUIRED

Fix hardware **J1 (L/R)** onto panel **(3)** and **(4)** with hardware **E**.
(Repeat 3 times for each hardware.)

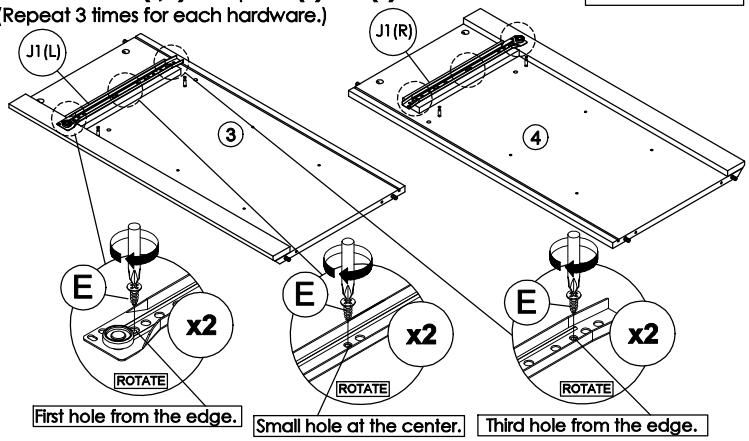

STEP 4

SCREWDRIVER REQUIRED

Connect hardware **H** to panel **(5)** with hardware **E**.
(Repeat 2 times.)

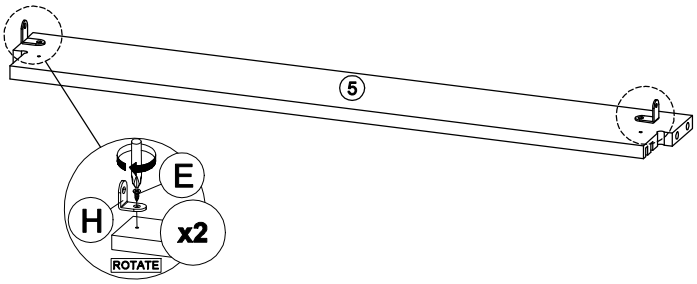

STEP 5

SCREWDRIVER REQUIRED

- Insert hardware **A1** into panel **(5)** and **(6)**.
  (Repeat 4 times.)
- Attach panel **(3)** and **(4)** to panel **(5)** and **(6)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
  (Repeat 4 times.)

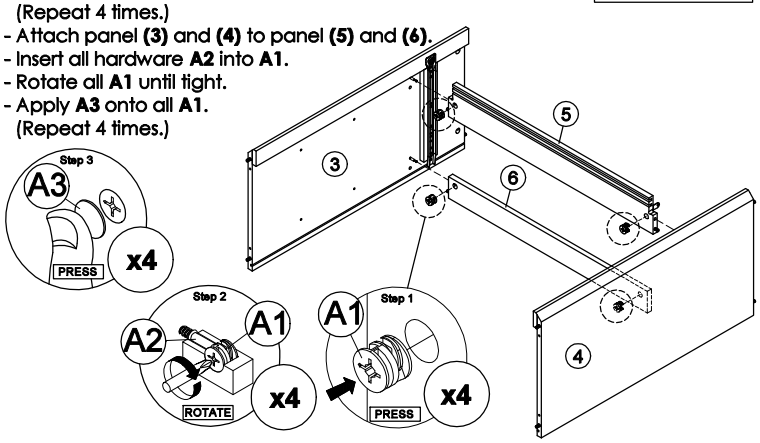

STEP 6

SCREWDRIVER REQUIRED

- Insert hardware **A1** into panel **(3)** and **(4)**.
  (Repeat 4 times.)
- Attach panel **(1)** to panel **(3)** and **(4)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
  (Repeat 4 times.)

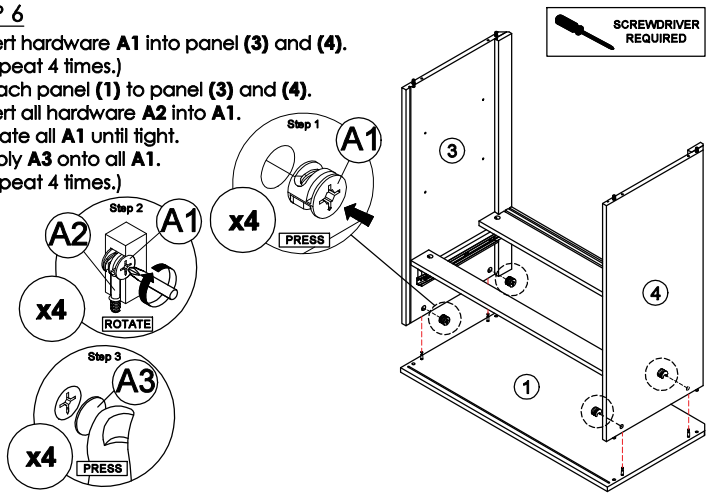

STEP 7

Insert the panel **(7)** along the slot.

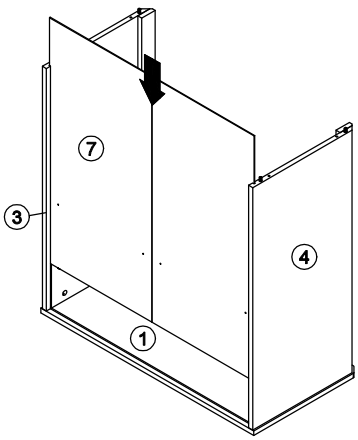

STEP 8

HARDWARE D

Connect panel **(2)** to panel **(3)** and **(4)**
by using hardware **C** and **D**.
(Repeat 4 times.)

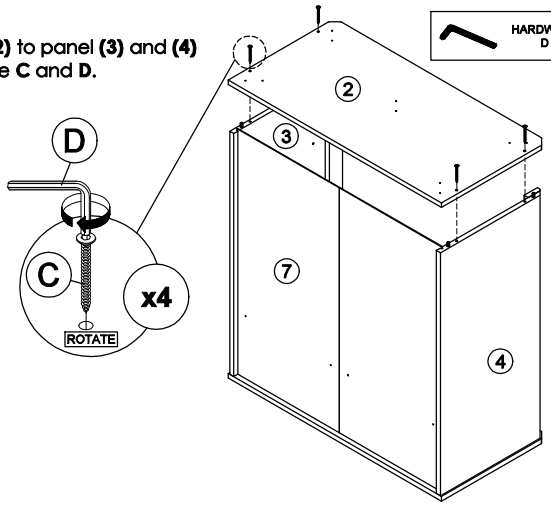

KRABI

CODING
- 522088

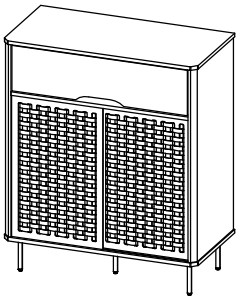

ISO 9001:2015
Reg. No. 600455-1-MT-1-QMS

nuhoom.com

STEP 9

SCREWDRIVER REQUIRED

Connect panel **(7)** to panel **(6)** by using hardware **I**.
(Repeat 4 times.)

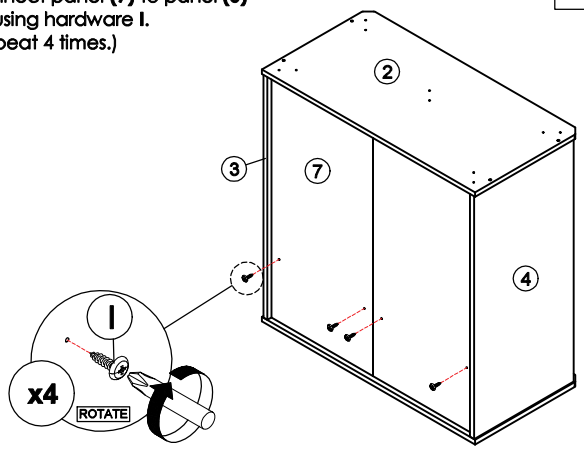

STEP 10

SCREWDRIVER REQUIRED

Assemble hardware **K** onto panel **(2)** by using hardware **E**.
(Repeat 4 times for each hardware.)

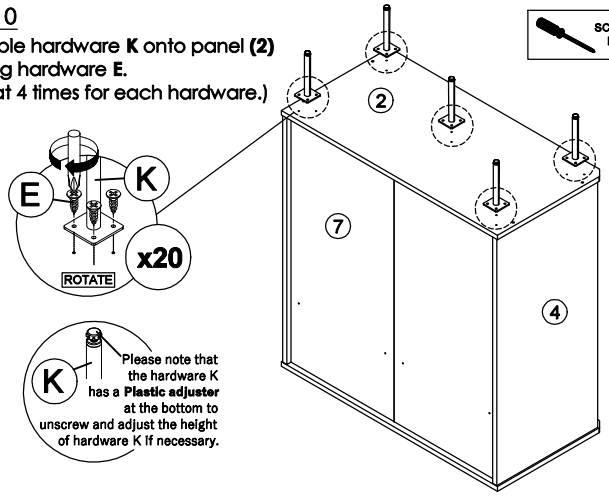

STEP 11

SCREWDRIVER REQUIRED

Connect hardware **H** to panel **(3)** and **(4)** with hardware **E**.
(Repeat 2 times.)

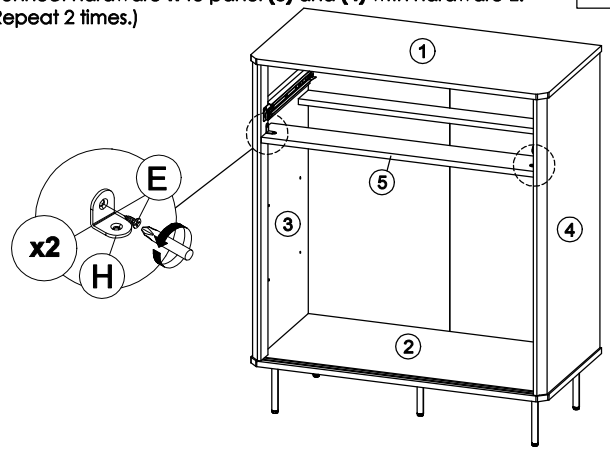

STEP 12

Insert hardware **G** into mounting positions on panel **(3)** and **(4)** by hand.
(Repeat 8 times.)

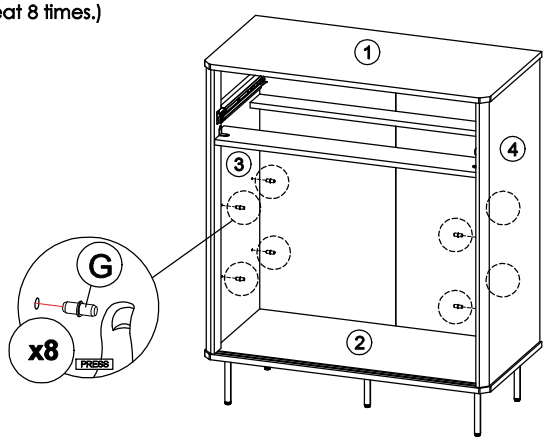

STEP 13

Assemble the panel **(8)** into between panel **(3)** and **(4)**.
(Repeat 2 times.)

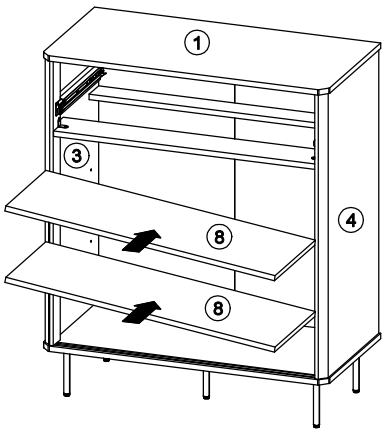

STEP 14

- Insert one door only in back groove.
- Insert the panel **(15)** in the top groove first, then enter through the bottom groove.

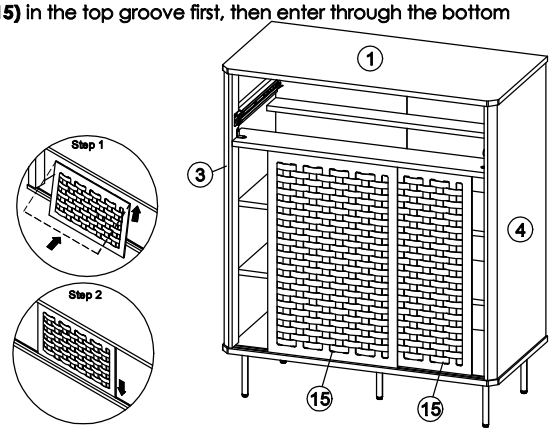

CODING
- 522088

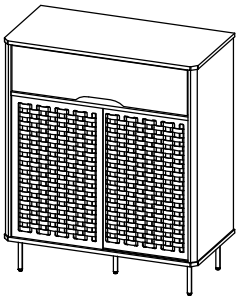

ISO 9001:2015
Reg. No. 600455-1-MT-1-QMS

nuhoom.com

STEP 15

Assemble panel **(10)** with panel **(11)** and **(12)** by using hardware **F.**
(Repeat 4 times.)

SCREWDRIVER REQUIRED

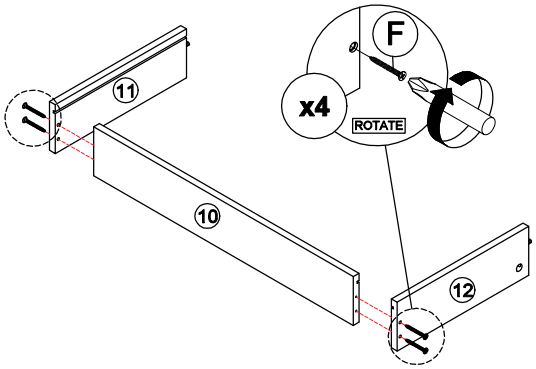

STEP 16

Insert the panel **(13)** along the slot.

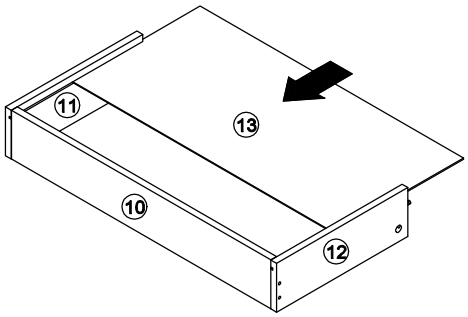

STEP 17

- Insert hardware **A1** into panel **(14).**
  (Repeat 1 times.)
- Attach panel **(14)** to panel **(10).**
- Insert all hardware **A2** into **A1.**
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1.**
  (Repeat 1 times.)

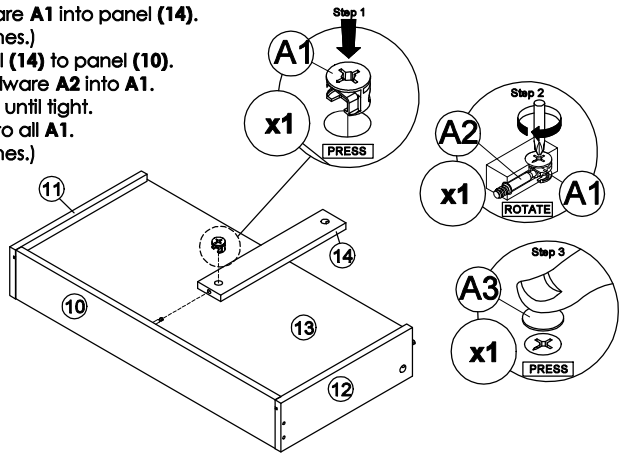

STEP 18

- Insert hardware **A1** into panel **(11), (12)** and **(14).**
  (Repeat 3 times.)
- Attach panel **(9)** to panel **(11), (12)** and **(14).**
- Insert all hardware **A2** into **A1.**
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1.**
  (Repeat 3 times.)

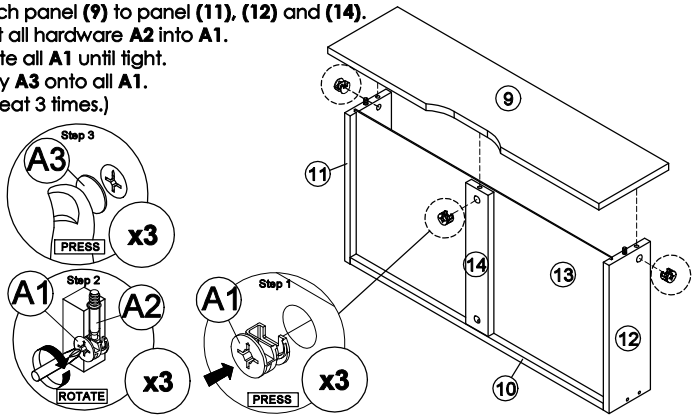

STEP 19

Assemble hardware **J2 (L/R)** to panel **(11)** and **(12)** by using hardware **E.**
(Repeat 3 times for each hardware.)

SCREWDRIVER REQUIRED

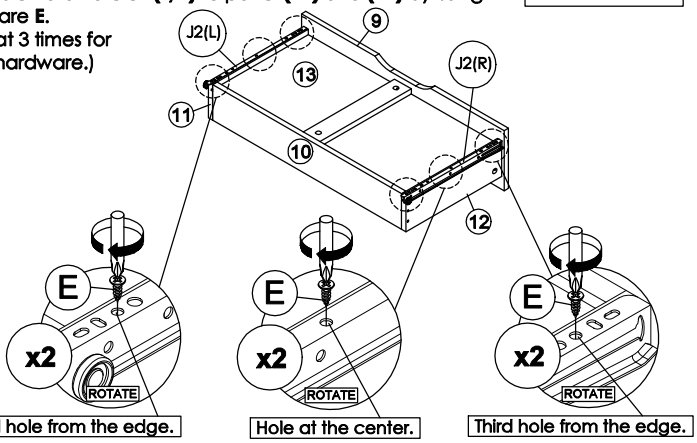

STEP 20
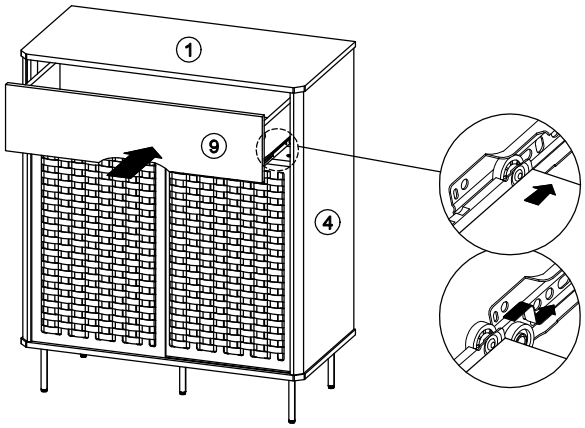
Put all the drawer in place along the drawer slides.