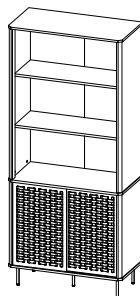


CODING
- 522089ISO 9001:2015
Reg. No. 000435-1-MT-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

HARDWARE

A	MINI FIX A1 A2 A3	24 SETS
B	M8 X 30MM WOOD DOWEL	28 PCS
C	M6 X 50MM CSK CAP WOOD SCREW	4 PCS
D	ALLEN KEY M4	1 PC
E	M3.5 X 16MM C.B SCREW	20 PCS
F	PAN HEAD SCREW M4 X 16MM	12 PCS
G	METAL CENTER LEG (50 x 50 x H140MM)	5 PCS

SELF-PREPARED TOOLS: Tools below are NOT included in package.





SCREWDRIVER



HAMMER

PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	MIDDLE PANEL	3 PCS
6	BACK PANEL	1 PC
7	UP TOP PANEL	1 PC
8	UP SIDE PANEL - L	1 PC
9	UP SIDE PANEL - R	1 PC
10	BACK PANEL - UP	1 PC
11	DOOR	2 PCS

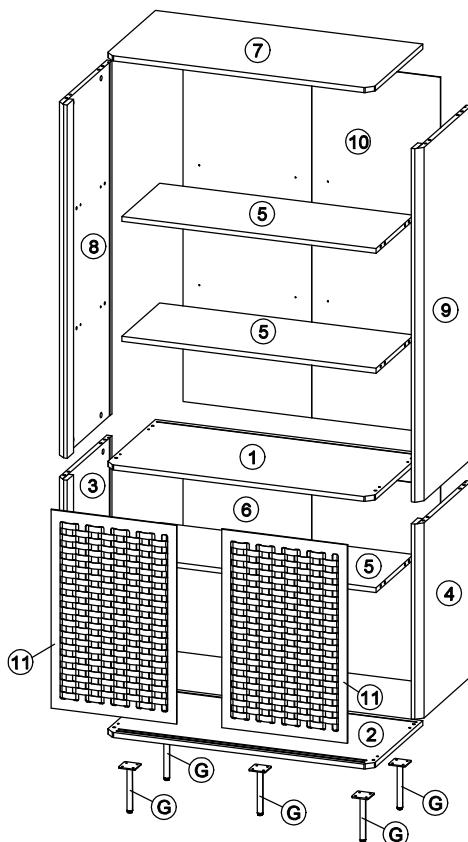


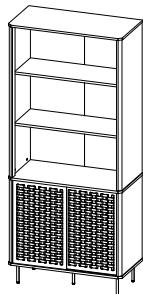CODING
- 522089ISO 9001:2015
Reg. No. 00045-1-MT-1-QMS

nuhoom.com


STEP 1

- Insert hardware A2 onto panel (1), (3), (4), (7), (8) and (9).
(Repeat 24 times.)
- Insert hardware B into panel (3), (4), (5), (8) and (9).
(Repeat 28 times.)

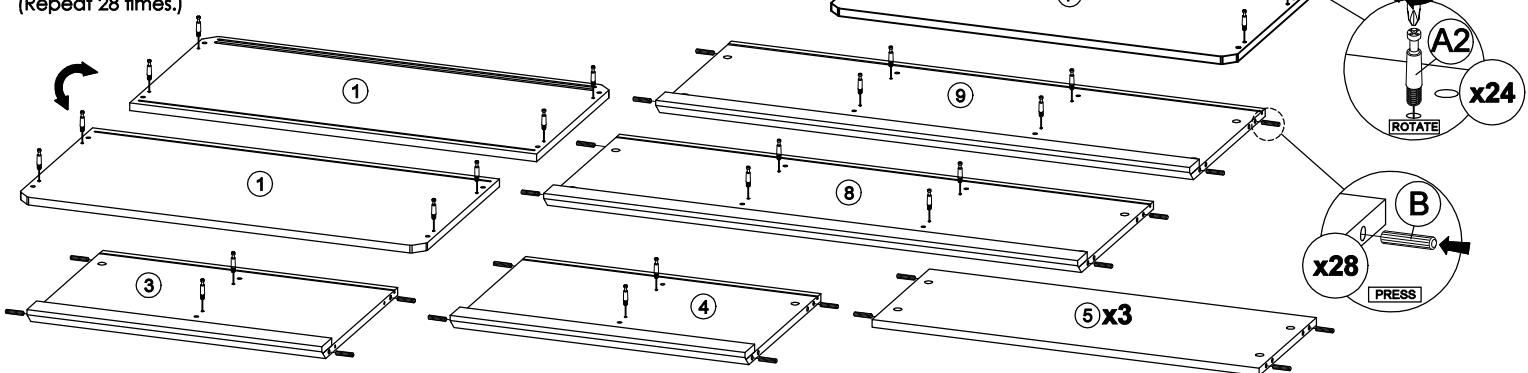


STEP 2

- Insert hardware A1 into panel (5).
(Repeat 4 times.)
- Attach panel (3) and (4) to panel (5).
- Insert all hardware A2 into A1.
- Rotate all A1 until tight.
- Apply A3 onto all A1.
(Repeat 4 times.)

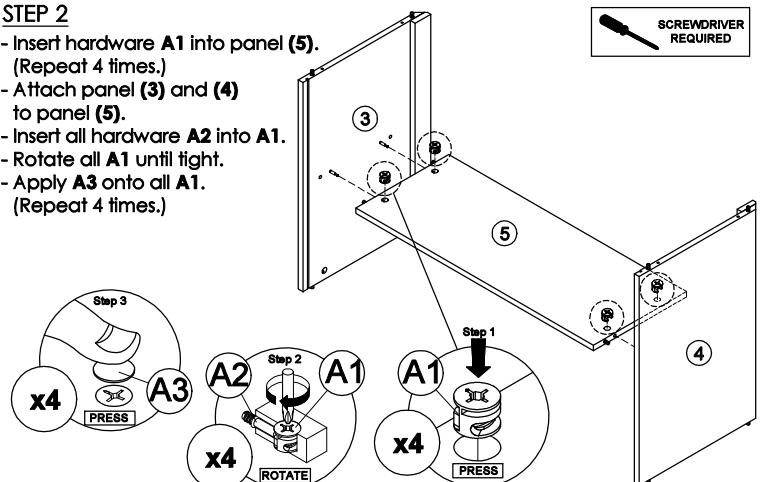


STEP 3

- Insert hardware A1 into panel (3) and (4).
(Repeat 4 times.)
- Attach panel (3) and (4) to panel (1).
- Insert all hardware A2 into A1.
- Rotate all A1 until tight.
- Apply A3 onto all A1.
(Repeat 4 times.)

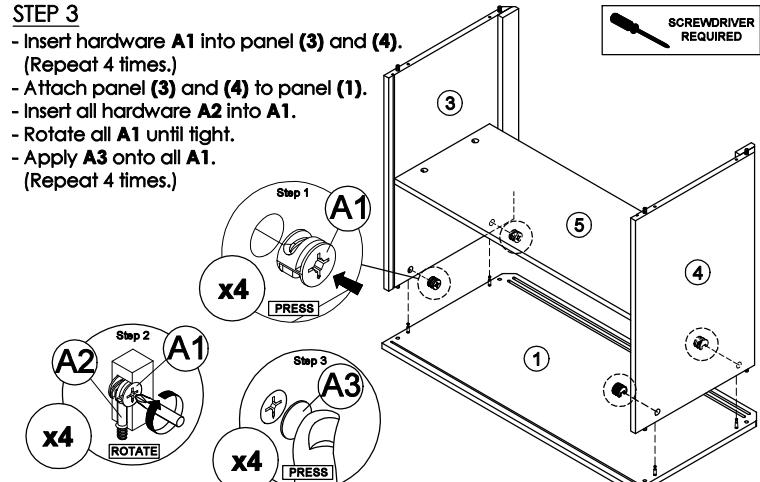


STEP 4


- Insert the panel (6) along the slot.

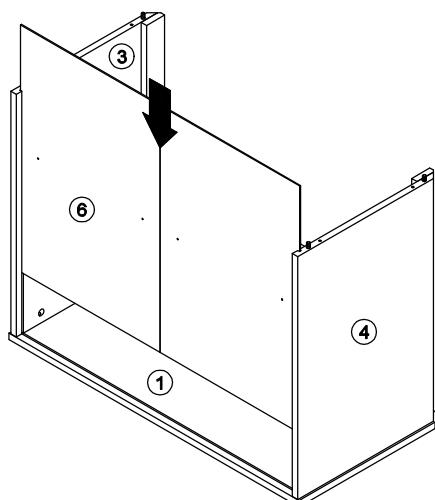

STEP 5

- Connect panel (2) to panel (3) and (4) by using hardware C and D.
(Repeat 4 times.)

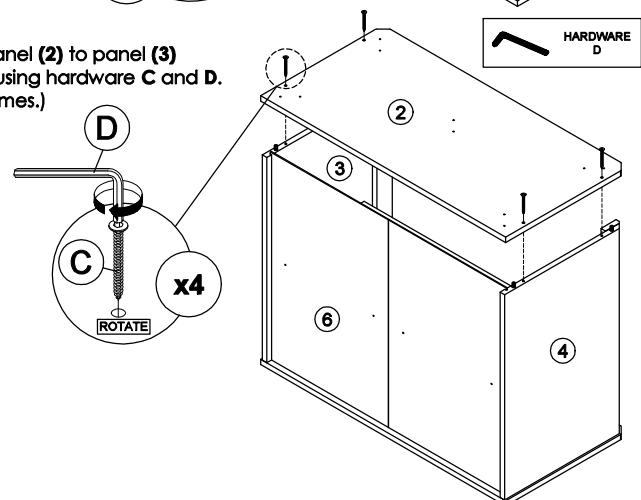


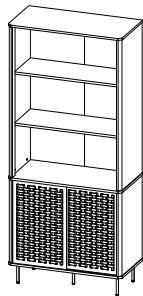CODING
- 522089ISO 9001:2015
Reg. No. 000455-1-MT-1-QMS

nuhoom.com


STEP 6

Assemble hardware **G** onto panel **(2)** by using hardware **E**.
(Repeat 4 times for each hardware.)

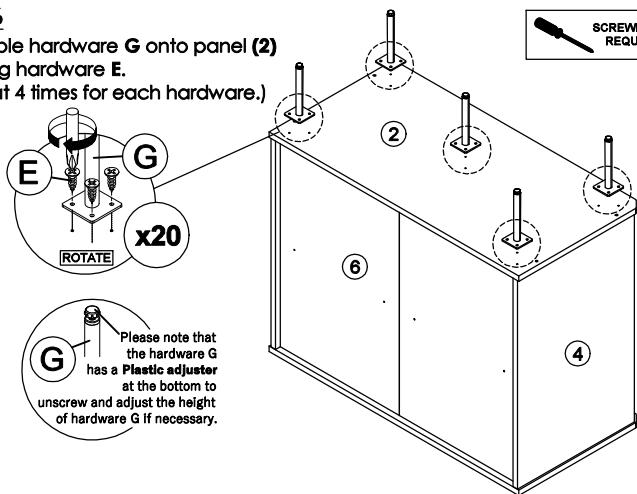


STEP 7

Insert hardware **A1** into panel **(5)**.
(Repeat 4 times.)
- Attach panel **(5)** to panel **(8)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 4 times.)

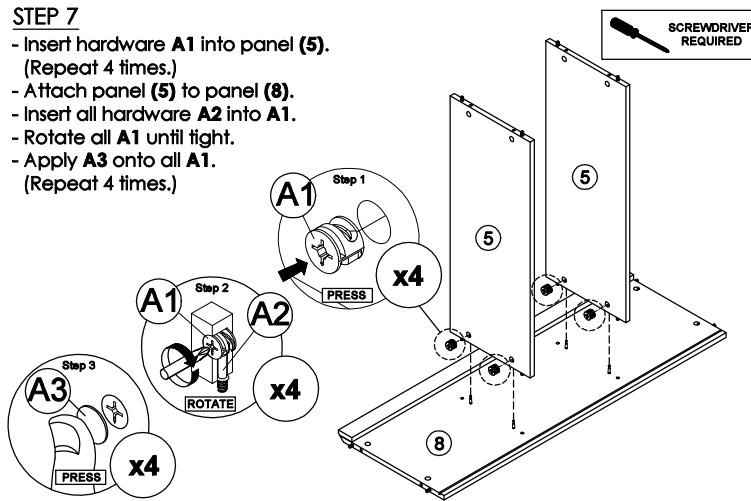


STEP 8

Insert hardware **A1** into panel **(5)**.
(Repeat 4 times.)
- Attach panel **(5)** to panel **(9)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 4 times.)

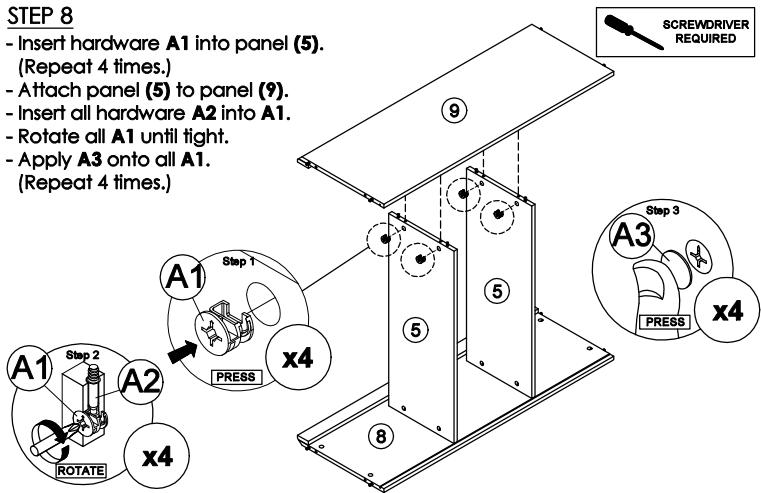


STEP 9

Insert hardware **A1** into panel **(8)** and **(9)**.
(Repeat 4 times.)
- Attach panel **(8)** and **(9)** to panel **(1)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 4 times.)

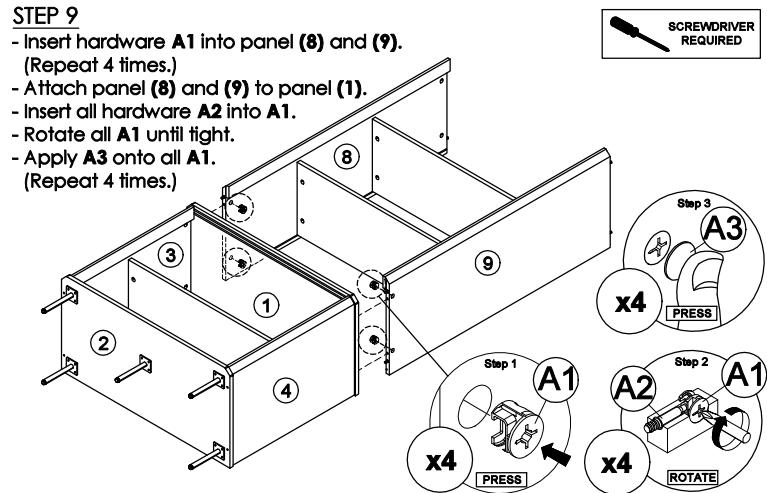


STEP 10

Insert the panel **(10)** along the slot.

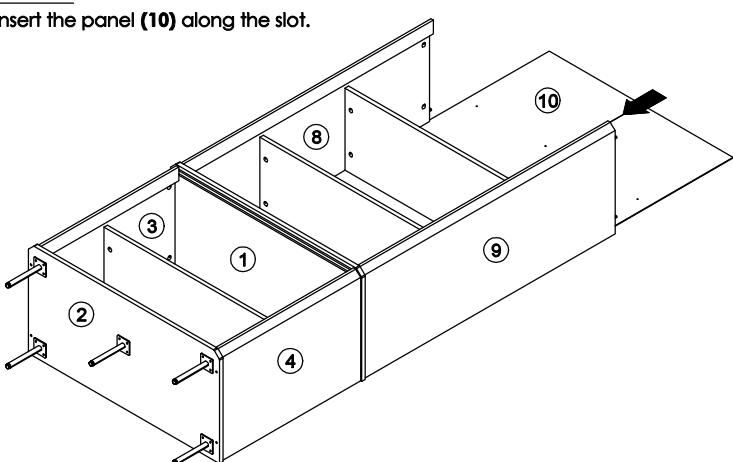


STEP 11

Insert hardware **A1** into panel **(8)** and **(9)**.
(Repeat 4 times.)
- Attach panel **(7)** to panel **(8)** and **(9)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 4 times.)

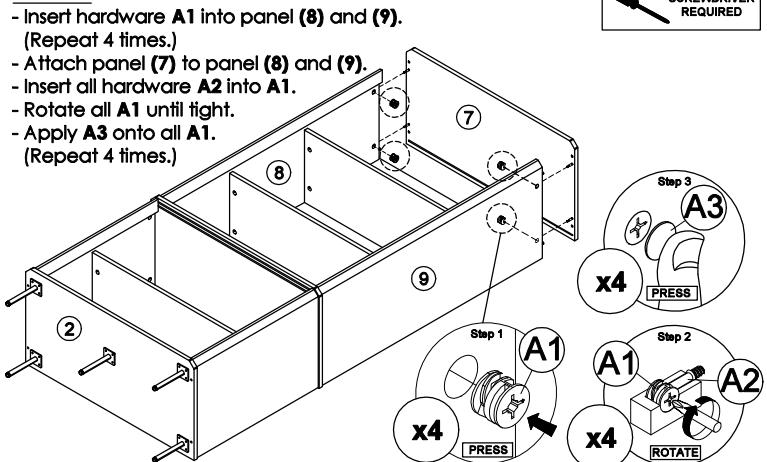

CODING
- 522089

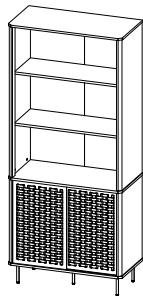


ISO 9001:2015
Reg. No. 000455-1-MT-1-QMS

nuhoom.com

STEP 12

Connect panel (6) and (10) to panel (5)
by using hardware F.
(Repeat 12 times.)

SCREWDRIVER
REQUIRED

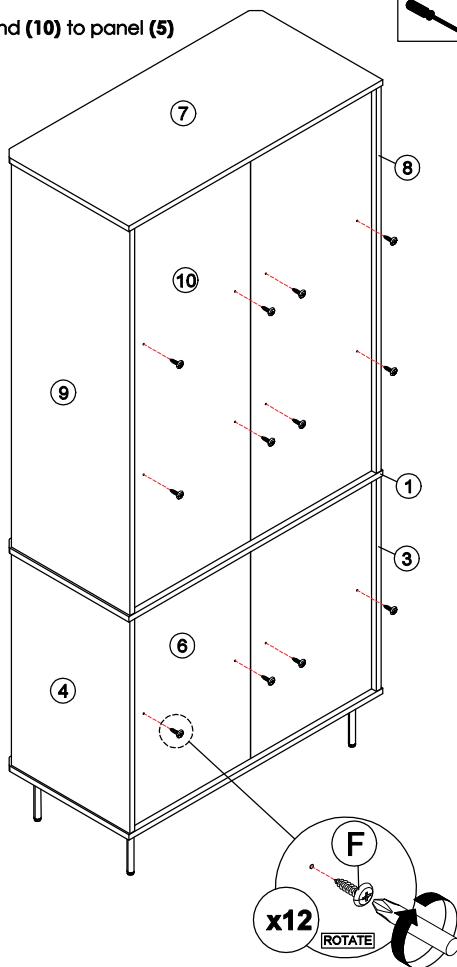

STEP 13

- Insert one door in the back groove & another door into front groove.
- Insert the panel (11) in the top groove first, then enter through
the bottom groove.

