

## CODING

-523022

-523023

-523032


ISO 9001:2015  
Reg. No. 000435-I-MY-I-QMS

nuhoom.com

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

## CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		SCREW M4 X 65	44 PCS
(B)		SCREW M3.5 X 16	36 PCS
(C)		WOOD DOWEL 6 X 25	60 PCS
(D)		L-HOLDER	2 PCS
(E)		WHITE HOLE PLUG (JUST FOR 523032)	20 PCS
(F)		PVC LEG STUD	4 PCS
(G)		PVC LEG STUD	4 PCS

ITEM	PHOTO	PARTS NAME	QTY
(1)		BOTTOM PANEL	1 PC
(2)		CENTER VERTICAL PANEL	8 PCS
(3)		HORIZONTAL SHELF PANEL	3 PCS
(4)		RIGHT SIDE PANEL	1 PC
(5)		FRONT LEG CROSS BAR	1 PC
(6)		BACK LEG CROSS BAR	1 PC
(7)		BACK PANEL	4 PCS
(8)		LEFT SIDE PANEL	1 PC
(9)		TOP PANEL	1 PC

## CODING

-523022

-523023


-523032



ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


### STEP 1

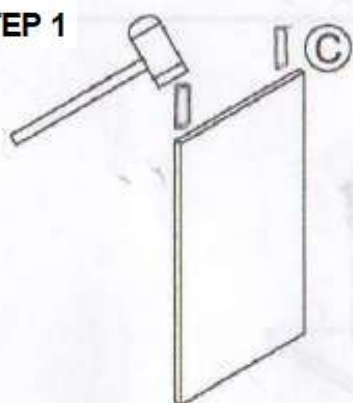

FIX WOOD DOWEL TO PANEL


1. 2. 3. 4. 5. 6. 8

### STEP 2

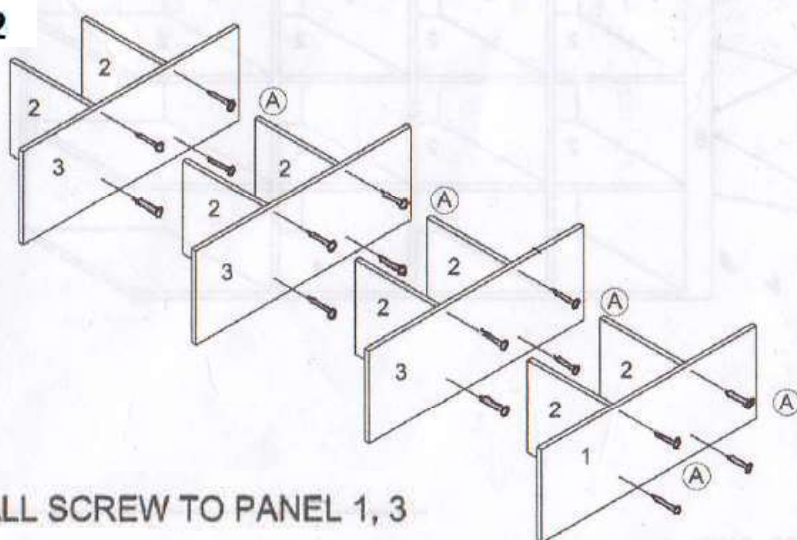

FIX ALL SCREW TO PANEL 1, 3


### STEP 3

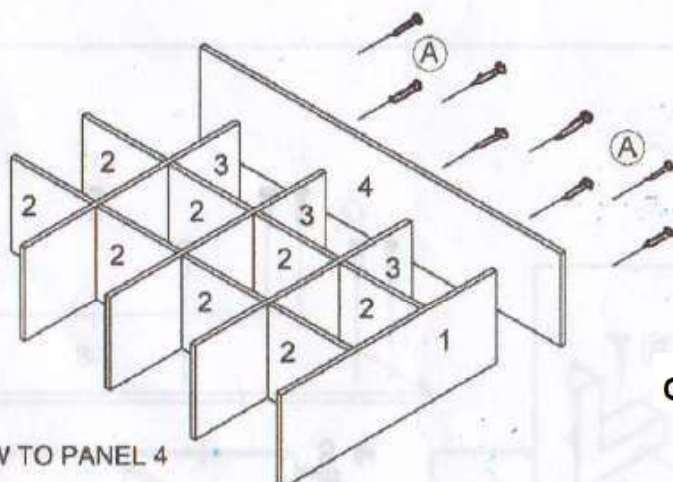

FIXING SCREW TO PANEL 4

COMPLETE

### STEP 4

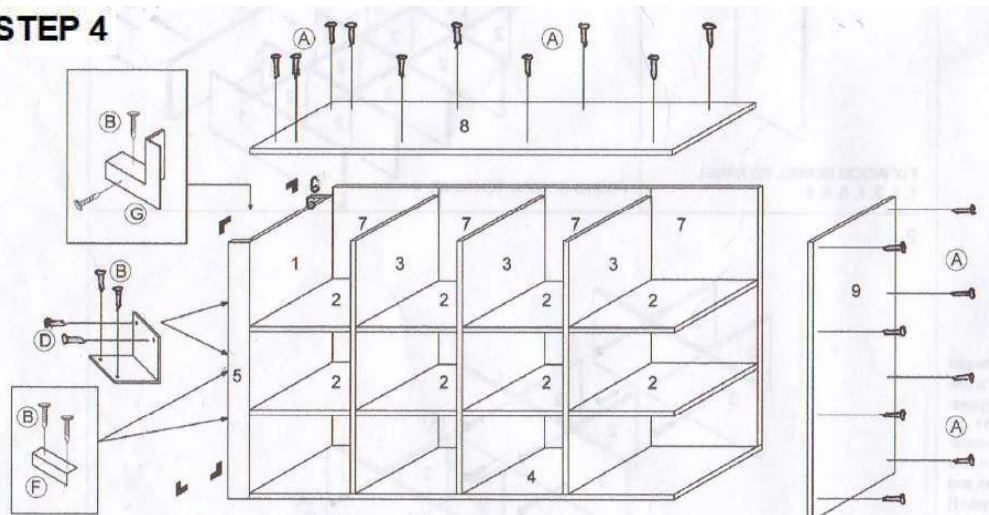

AFTER FIXING ALL SCREWS TO PANEL 4  
TURN OVER TO FIXING SCREWS TO PANEL 8  
\*7 - REAR PANEL