


CODING
-3133001
-523026

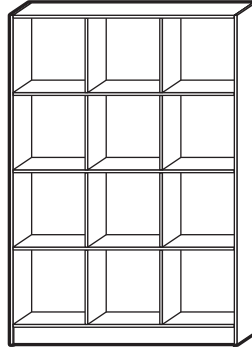









ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS







nuhoom.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST		QTY
①		M5 x 40mm JCBCW Screw	40
②		M3.5 x 16mm Chipboard Screw	12
③		Nail	140
④		Wood Dowel 6 x 25mm	56
⑤		L Bracket	2
⑥		Square Leg	4
⑦		Leg Nail	1
⑧		Allen Key	1

ITEM	PART LIST		QTY
Ⓐ	Side Panel		2
Ⓑ	Top & Bottom Panel		2
Ⓒ	Shelf Panel		3
Ⓓ	Brace Panel		8
Ⓔ	Bottom Brace Panel		1
Ⓕ	Back Panel		1


CODING
-3133001
-523026

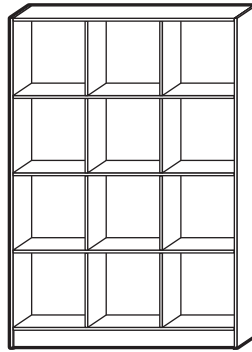


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Step 1

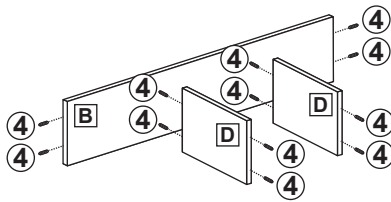


Step 2

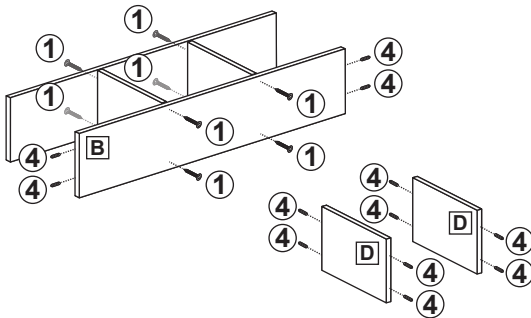


Step 3

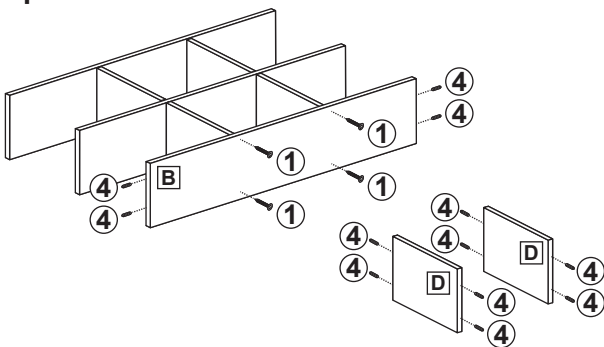


Step 4

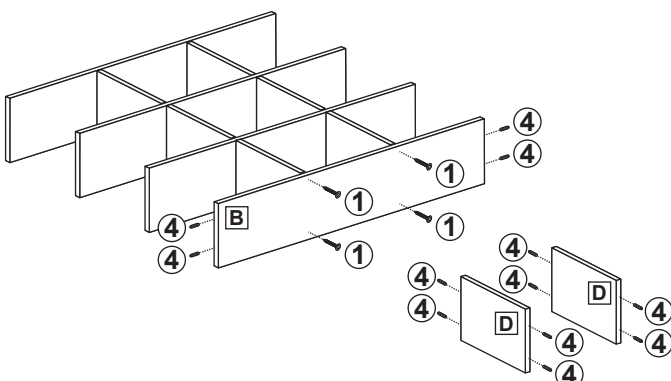


Step 5

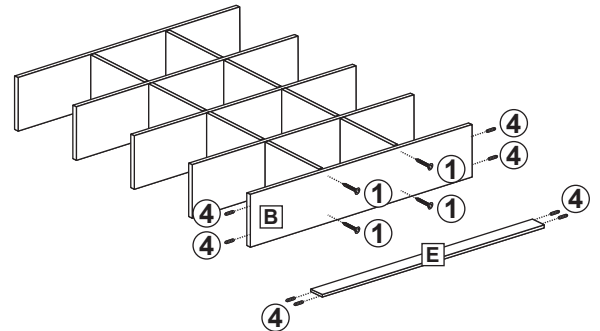

Step 6

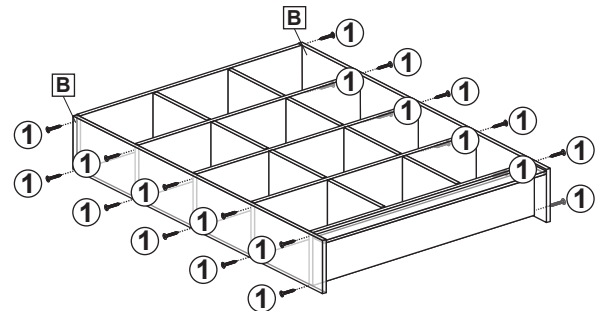

Step 7

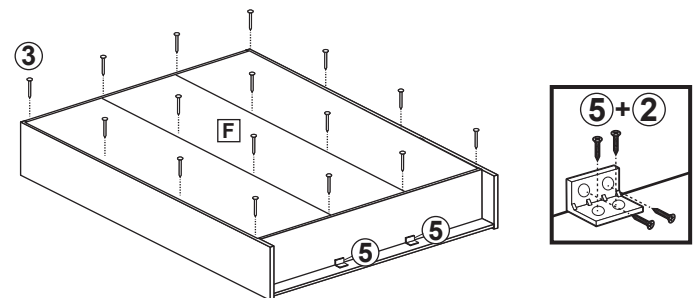

Step 8

