

CODING

-523031




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

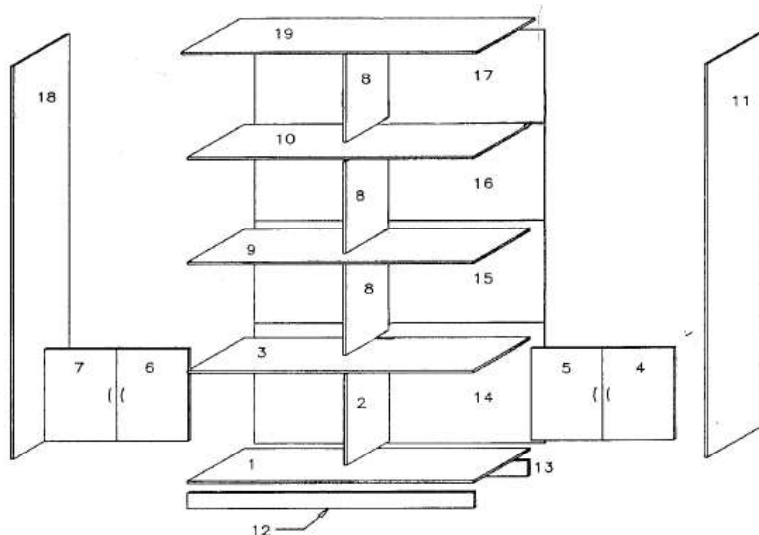

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		SCREW (M4X65)	34 PCS
(B)		WOOD DOWEL (6X25)	40 PCS
(C)		SCREW (M3.5X16)	12 PCS
(D)		NAIL (32MM)	4 PCS
(E)		SCREW (M3X12)	8 PCS
(F)		DOOR STUD	8 PCS
(G)		PLASTIC LEG STUD	4 PCS
(H)		MAGNET WITH LEG	4 PCS
(I)		MAGNET PLATE (2 HOLES)	4 PCS
(J)		GLASS RAIL	6 PCS
(K)		HANDLE	4 PCS
(L)		L-HOLDER	4 PCS

ITEM	PHOTO	PARTS NAME	QTY
(1)		BOTTOM PANEL	1 PC
(2)		VERTICAL PANEL (2)	1 PC
(3)		HORIZONTAL PANEL (3)	1 PC
(4)		RIGHT DOOR (4)	1 PC
(5)		LEFT DOOR (5)	1 PC
(6)		RIGHT DOOR (6)	1 PC
(7)		LEFT DOOR (7)	1 PC
(8)		VERTICAL PANEL (8)	3 PCS
(9)		SHELF PANEL (9)	1 PC
(10)		SHELF PANEL (10)	1 PC
(11)		RIGHT SIDE PANEL	1 PC
(12)		FRONT CROSS BAR	1 PC
(13)		BACK CROSS BAR	1 PC
(14)		BACK PANEL (14)	1 PC
(15)		BACK PANEL (15)	1 PC
(16)		BACK PANEL (16)	1 PC
(17)		BACK PANEL (17)	1 PC
(18)		LEFT SIDE PANEL	1 PC
(19)		TOP PANEL	1 PC

CODING

-523031



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

