

PLEASE FOLLOW

EXAMPLE : STEP ASM. HARDWARE PART

THOSE NUMBERS AS
STATED BELOW FOR
EASY ASSEMBLE.

1

A

12


523020, 523043, 523044

ECO

HARDWARE				PART			
A	JCBC 40mm x40	B	x1	C	16mm x8	D	25mm x56
E	x5	F	x105	G	x2	H	20mm x10
				PART			
1	x1	2	x1	3	x3	4	x1
5	x1	6	x1	7	x1	13	x8
14	x1	15	x1	16	x2	17	x1


1

INSERT THE 4 PCS DOWEL
TO THE 3, 4, 5, 6, 7 PANEL

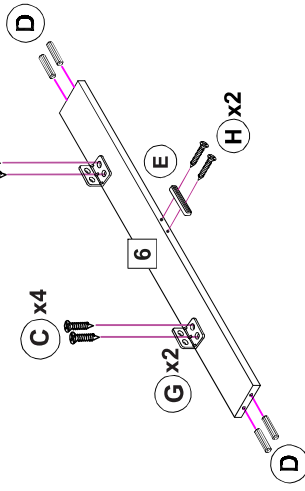


2

3

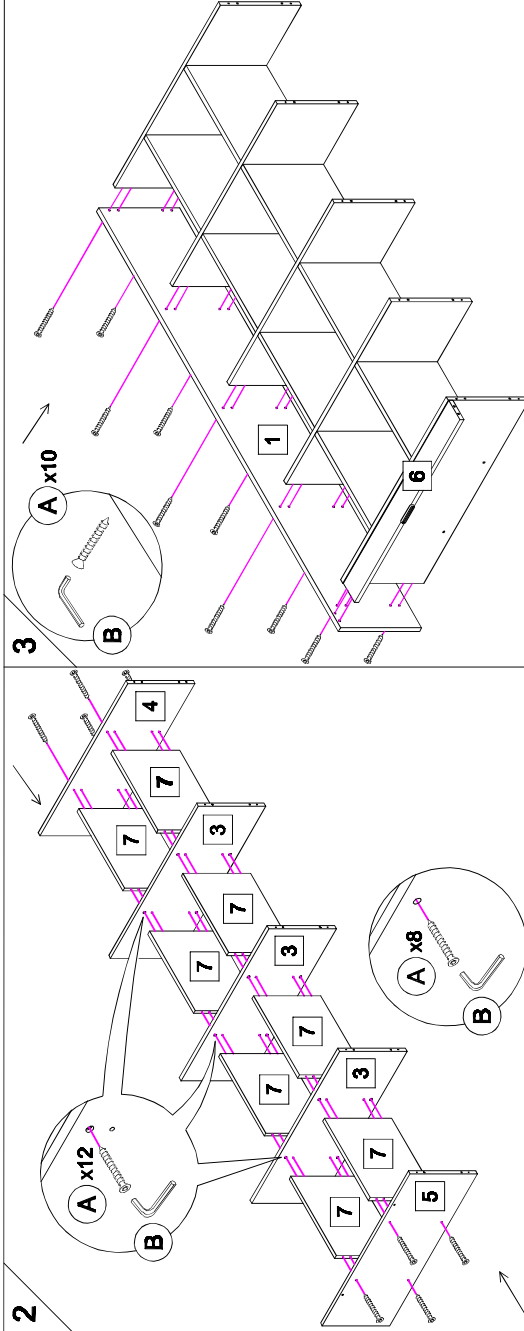

4

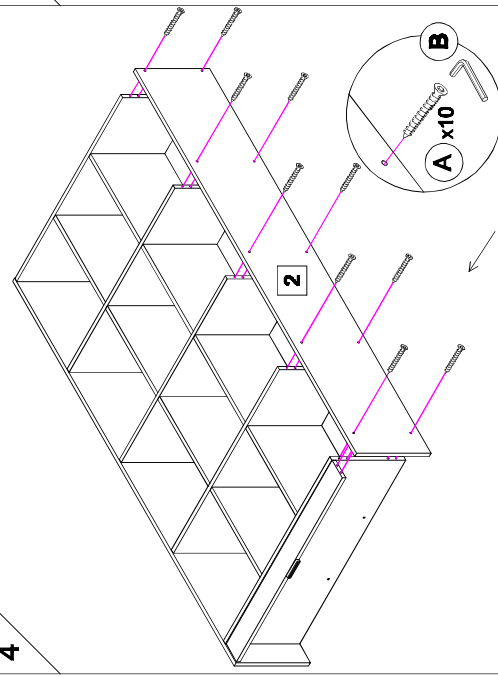

5

6

