

PLEASE FOLLOW
THOSE NUMBERS AS
STATED BELOW FOR
EASY ASSEMBLE.

EXAMPLE : STEP ASM. HARDWARE PART

1

A

12

523021, 523045, 523046

MODEL: ECO

HARDWARE

A



JCBC
40mm
x48

B



x1

C



16mm
x8


D



25mm
x68


PART

1




x1

2




x1

3




x3

4



x1

5



x1

E



x5

F



x120

G




x2

H




20mm
x10

6




x1

7




x10

8




x1

13



x2


14




x1

1


INSERT THE 4 PCS DOWEL TO
THE 3, 4, 5, 6, 7, 8 PANEL

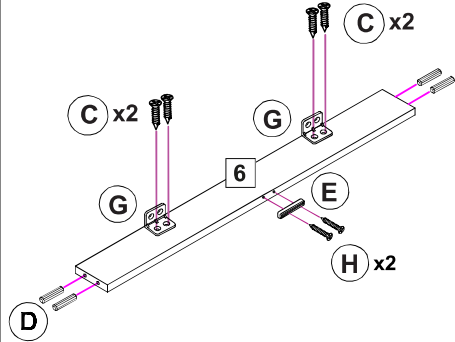


2

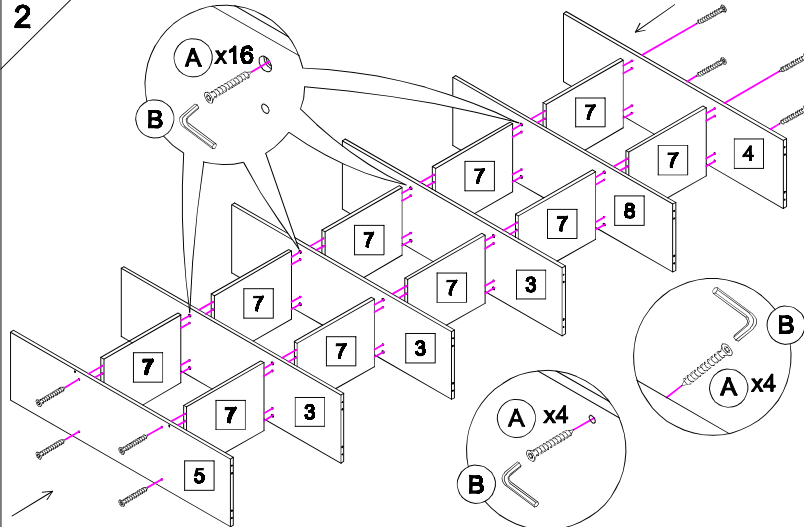


3

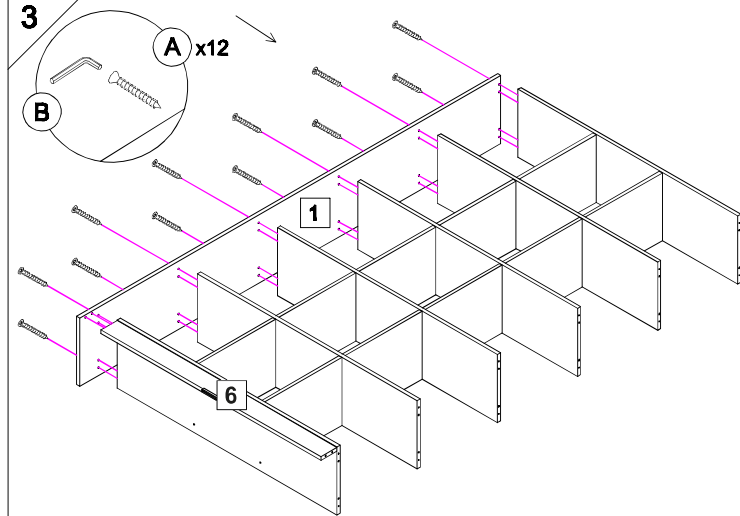

4

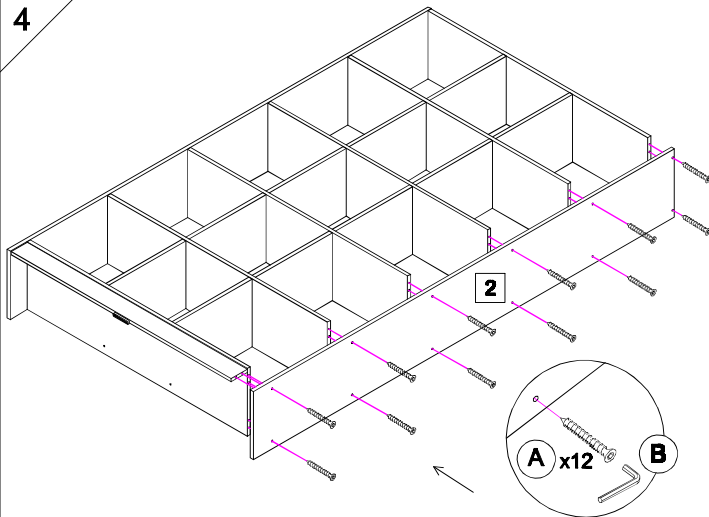

5

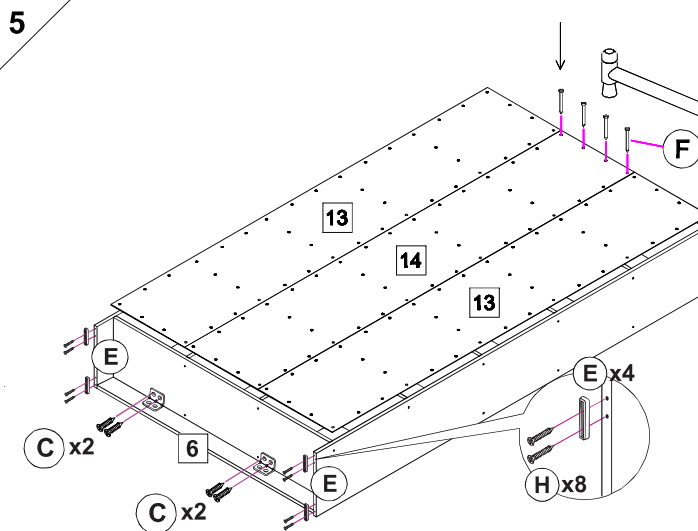

6

