

CODING

-524008

-524009

-524014


ISO 9001:2015
Reg. No. 000435-I-MY-I-QMS

nuhoom.com

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		SCREW M4 X 65	60 PCS
(B)		WOOD DOWEL 6 X 25	92 PCS
(C)		SCREW M3.5 X 16	16 PCS
(D)		NAIL 32MM	4 PCS
(E)		PLASTIC LEG STUD	4 PCS
(F)		L-HOLDER	2 PCS
(G)		WHITE HOLE PLUG (JUST FOR 524014)	2 PCS

ITEM	PHOTO	PARTS NAME	QTY
(1)		BOTTOM PANEL	1 PC
(2)		CENTER VERTICAL PANEL	15 PCS
(3)		HORIZONTAL SHELF PANEL	4 PCS
(4)		LEFT SIDE PANEL	1 PC
(5)		BACK LEG CROSS BAR	1 PC
(6)		FRONT LEG CROSS BAR	1 PC
(7)		BACK PANEL	5 PCS
(8)		RIGHT SIDE PANEL	1 PC
(9)		TOP PANEL	1 PC

CODING

-524008

-524009


-524014



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS


nuhoom.com

STEP 1

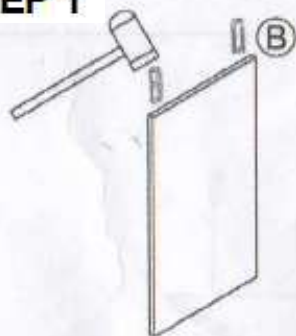


FIX WOOD DOWEL TO PANEL
1, 2, 3, 4, 5, 6, 8

STEP 2


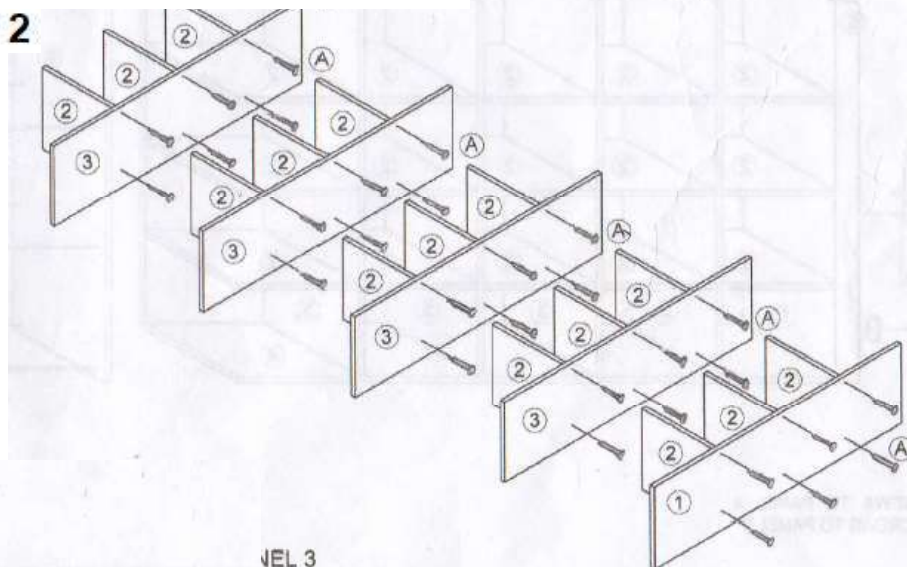


STEP 3

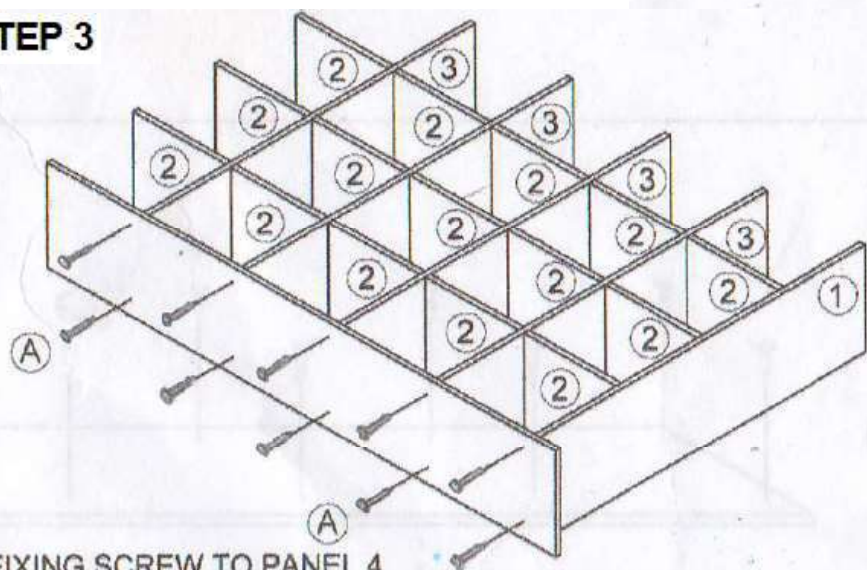

FIXING SCREW TO PANEL 4

STEP 4

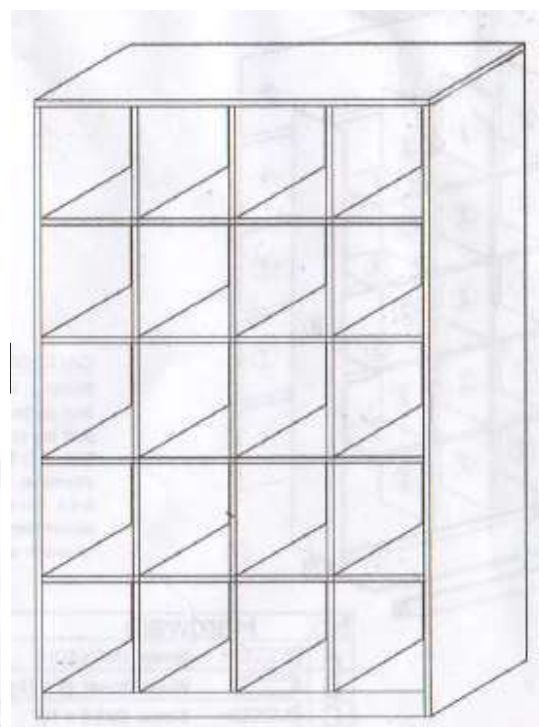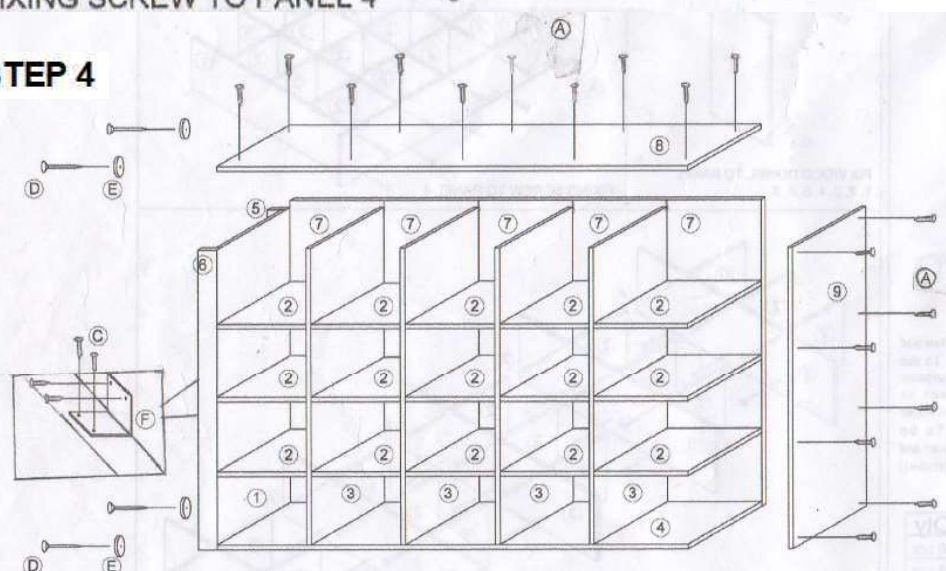

COMPLETE

AFTER FIXING ALL SCREWS TO PANEL 4
TURN OVER TO FIXING SCREWS TO PANEL 8
'7 - REAR PANEL