


## CODING

-524010

-524011

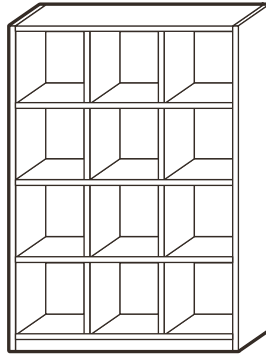






ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS










nuhoom.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


## CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

| ITEM | HARDWARE LIST   |                             | QTY |
|------|---|-----------------------------|-----|
| (A)  |  | M6 x 60mm JCBCW Screw       | 20  |
| (B)  |  | M3.5 x 16mm Chipboard Screw | 4   |
| (C)  |  | Nail                        | 130 |
| (D)  |  | Wood Dowel 6 x 25mm         | 36  |
| (E)  |  | Leg Nail                    | 5   |
| (F)  |  | L Bracket                   | 1   |
| (G)  |  | Allen Key                   | 1   |

| ITEM | PART LIST  |  | QTY |
|------|--|--|-----|
| (1)  | Side Panel                      |  | 2   |
| (2)  | Shelf Panel (Top/Bottom Screw)  |  | 2   |
| (3)  | Shelf Panel (Screw)             |  | 1   |
| (4)  | Shelf Panel                     |  | 2   |
| (5)  | Brace Panel (Top)               |  | 2   |
| (6)  | Brace Panel (Bottom)            |  | 2   |
| (7)  | Brace Panel (Center)            |  | 4   |
| (8)  | Bottom Brace Panel              |  | 1   |
| (9)  | Back Panel                      |  | 1   |


**CODING**  
-524010  
-524011

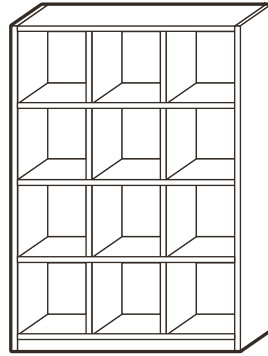


ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


## Step 1

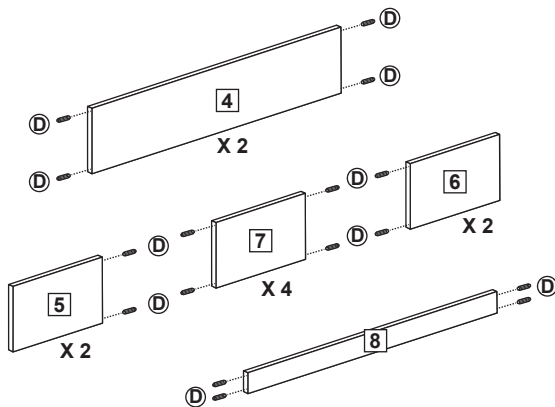


## Step 2

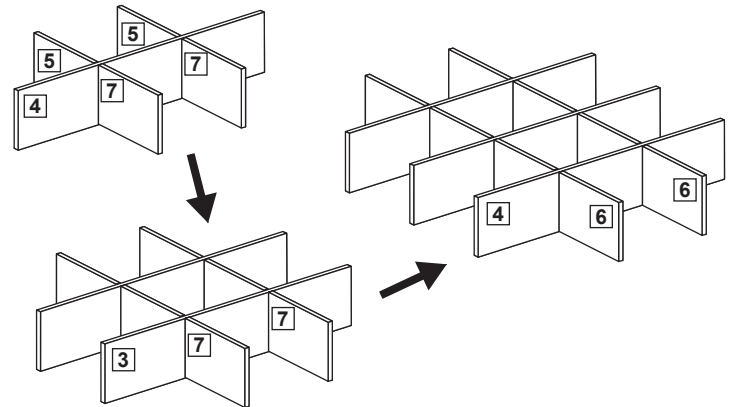


## Step 3

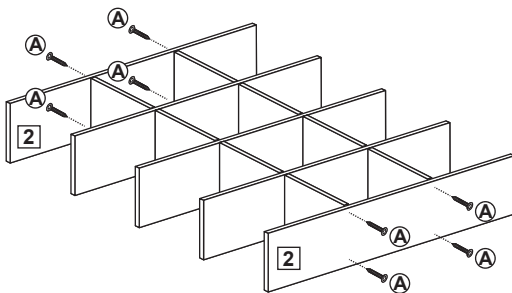

## Step 4

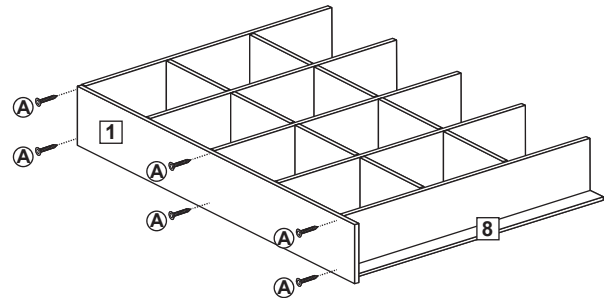

## Step 5

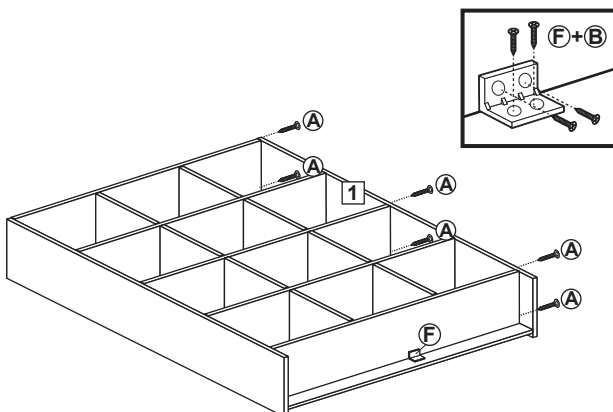

## Step 6

