


## CODING

-524012

-524013

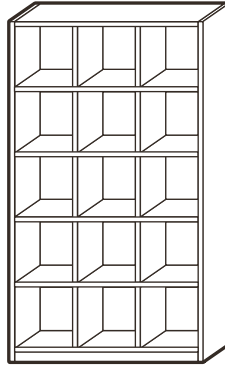



ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS










nuhoom.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


## CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST		QTY
(A)		M6 x 60mm JCBCW Screw	24
(B)		M3.5 x 16mm Chipboard Screw	4
(C)		Nail	150
(D)		Wood Dowel 6 x 25mm	44
(E)		Leg Nail	5
(F)		L Bracket	1
(G)		Allen Key	1

ITEM	PART LIST		QTY
(1)	Side Panel 		2
(2)	Shelf Panel (Top/Bottom Screw) 		2
(3)	Shelf Panel (Screw) 		2
(4)	Shelf Panel 		2
(5)	Brace Panel (Top) 		2
(6)	Brace Panel (Bottom) 		2
(7)	Brace Panel (Center) 		6
(8)	Bottom Brace Panel 		1
(9)	Back Panel 		1


**CODING**  
-524012  
-524013

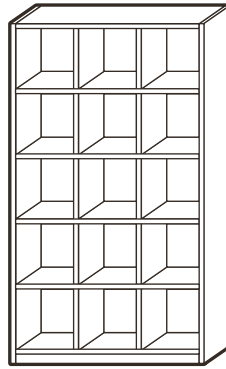


ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


## Step 1

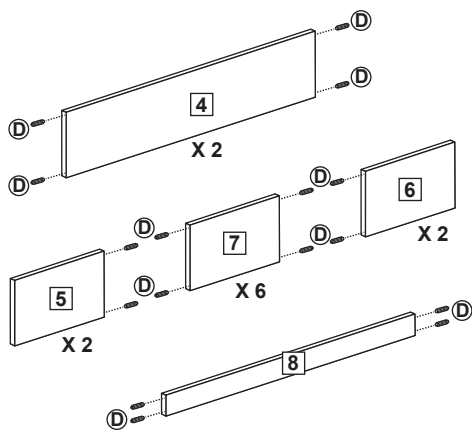


## Step 2

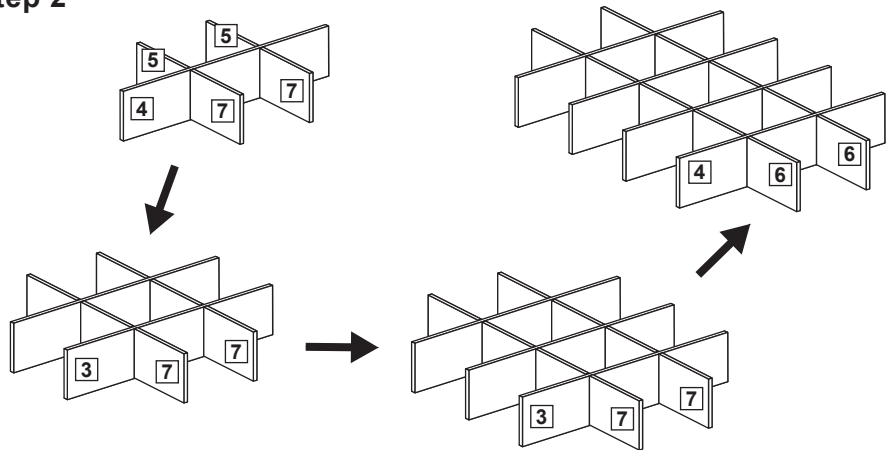


## Step 3

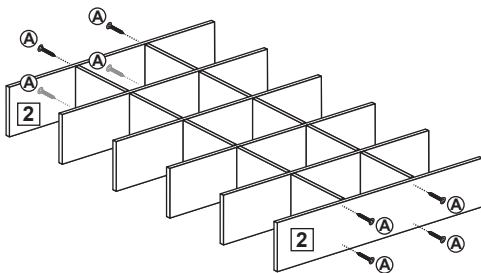

## Step 4

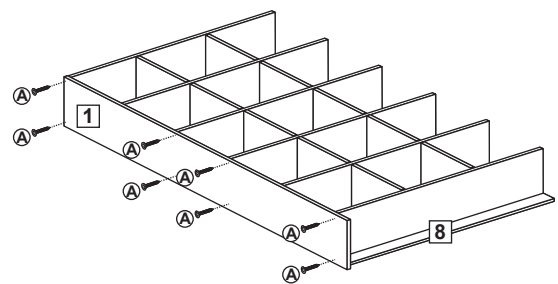

## Step 5

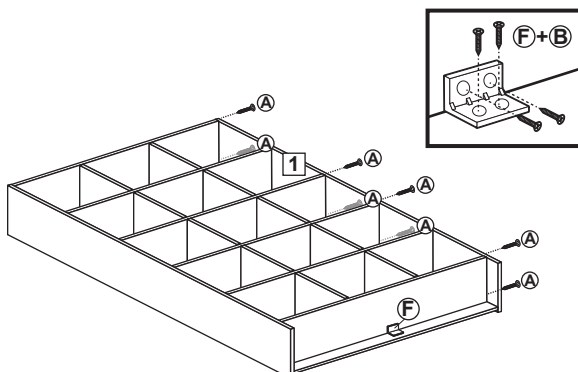

## Step 6

