


CODING
-5509106

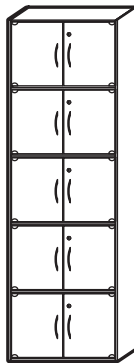











ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST		QTY
①		M5 x 40mm JCBCW Screw	24
②		M4 x 25mm Chipboard Screw	20
③		M3.5 x 12mm Chipboard Screw	40
④		Nail	24
⑤		Wood Dowel 6 x 25mm	24
⑥		Door Support 15mm	20
⑦		Leg Nail	4
⑧		Handle(1009)	10
⑨		Cam Lock 40mm	5
⑩		Door Stopper	5
⑪		Magnet	5
⑫		Magnet Plate	10
⑬		Hanger Plate	5
⑭		Allen Key	1

ITEM	PART LIST		QTY
Ⓐ	Side Panel		2
Ⓑ	Top Panel		1
Ⓒ	Shelf & Bottom Panel		5
Ⓓ	Back Panel		1
Ⓔ	Left Door Panel		5
Ⓕ	Right Door Panel		5


CODING
-5509106

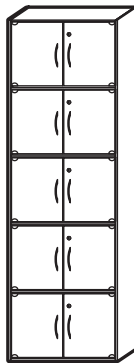


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Step 1

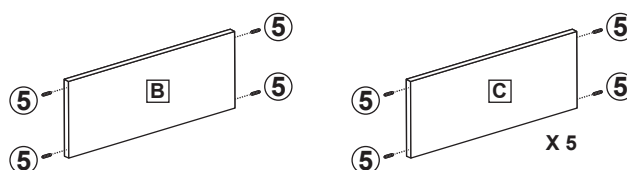

Step 2

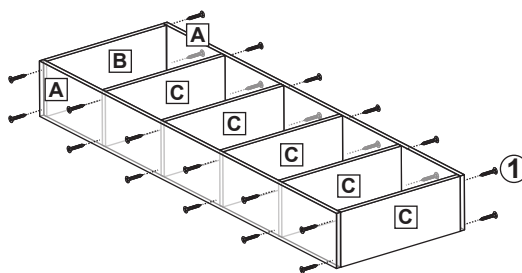

Step 3

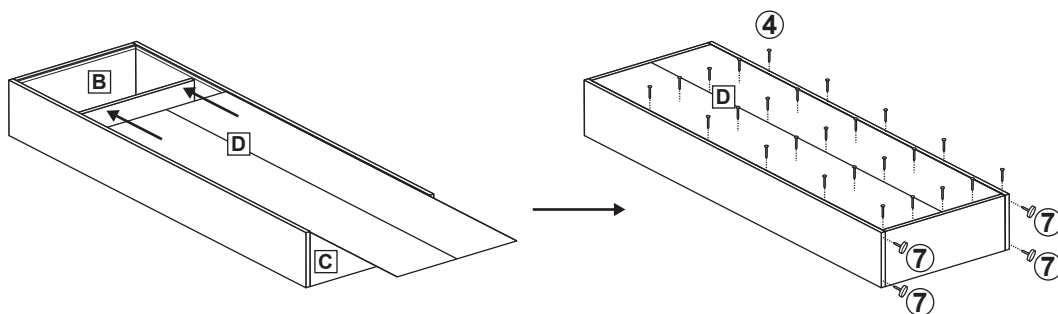

Step 4

