

CODING -5509107



ISO 9001:2015

nuhoom.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM		HARDWARE LIST	QTY
1	© ()	M5 x 40mm JCBCW Screw	20
2	⊕ ()	M4 x 25mm Chipboard Screw	16
3	⊕ (M3.5 x 12mm Chipboard Screw	32
4		Nail	24
(5)		Wood Dowel 6 x 25mm	20
6		Door Support 15mm	16
7		Leg Nail	4
8		Handle(1009)	8
9	6	Cam Lock 40mm	4
10		Door Stopper	4
11)		Magnet	4
12	(<u>©</u>)	Magnet Plate	8
13	<u></u>	Hanger Plate	4
14)		Allen Key	1

ITEM	PART LIST		
A	Side Panel	2	
B	Top Panel	1	
©	Shelf & Bottom Panel	4	
(D)	Back Panel	1	
(E)	Left Door Panel	4	
F	Right Door Panel	4	




CODING -5509107




ISO 9001:2015

nuhoom.com






Step 2

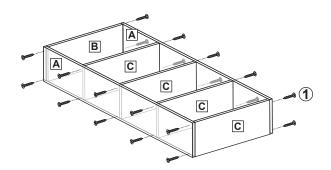

Step 3

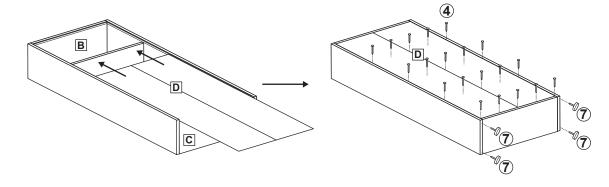

Step 4

