


CODING
-5509109














ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS






nuhoom.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST		QTY
①		M5 x 40mm JCBCW Screw	24
②		M4 x 25mm Chipboard Screw	10
③		M3.5 x 12mm Chipboard Screw	10
④		Nail	50
⑤		Wood Dowel 6 x 25mm	24
⑥		Door Support 15mm	10
⑦		Leg Nail	4
⑧		Handle(1009)	5
⑨		Cam Lock 40mm	5
⑩		Door Stopper	5
⑪		Allen Key	1

ITEM	PART LIST		QTY
Ⓐ	Side Panel		2
Ⓑ	Top Panel		1
Ⓒ	Shelf & Bottom Panel		5
Ⓓ	Back Panel		1
Ⓔ	Door Panel		5


CODING
-5509109




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Step 1

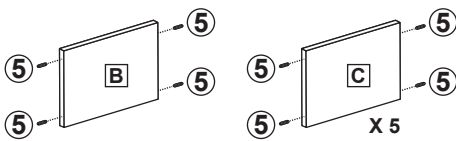

Step 2

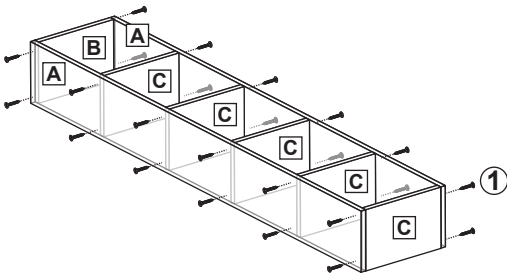

Step 3

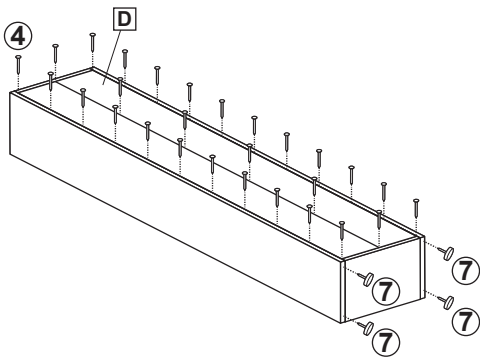

Step 4

