

CODING -5509127



ISO 9001:2015

nuhoom.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST		QTY
1	(4)	M4 x 38mm Chipboard Screw	24
2	*	M4 x 25mm Chipboard Screw	5
3	⊕ \$===>	M3.5 x 12mm Chipboard Screw	15
4	<u></u>	Nail	50
(5)		Door Support 15mm	10
6		Leg Nail	4
7	0	Handle	5
8	(<u>©</u>)	Magnet Plate	5
9		Magnet	5

ITEM		PART LIST	QTY
A	Side Panel		2
B	Top Panel		1
(C)	Shelf Panel		4
(D)	Bottom Panel		1
E	Back Panel		1
F	Door Panel		5




CODING -5509127




ISO 9001:2015 Reg. No. 000435-1-MY-1-QMS

nuhoom.com

Step 1

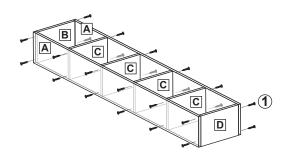

Step 2

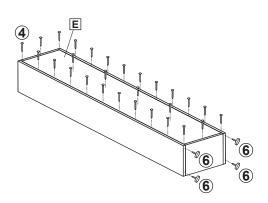

Step 3

