


CODING
-5513010

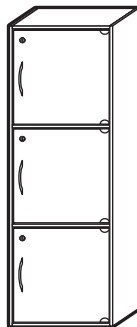


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST		QTY
①		M5 x 40mm JCBCW Screw	16
②		M4 x 25mm Chipboard Screw	6
③		M3.5 x 12mm Chipboard Screw	6
④		Nail	30
⑤		Wood Dowel 6 x 25mm	16
⑥		Door Support 15mm	6
⑦		Leg Nail	4
⑧		Handle(1009)	3
⑨		Cam Lock 40mm	3
⑩		Door Stopper	3
⑪		Allen Key	1

ITEM	PART LIST		QTY
Ⓐ	Side Panel		2
Ⓑ	Top Panel		1
Ⓒ	Shelf & Bottom Panel		3
Ⓓ	Back Panel		1
Ⓔ	Door Panel (Azure Blue)		1
Ⓕ	Door Panel (Pink)		1
Ⓖ	Door Panel (Apple Green)		1


CODING
-5513010

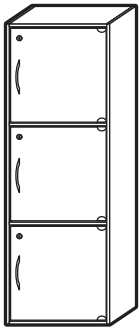


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Step 1

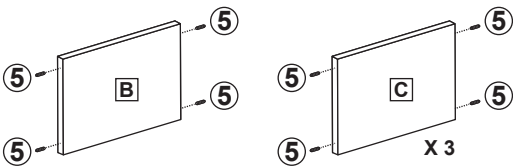

Step 2

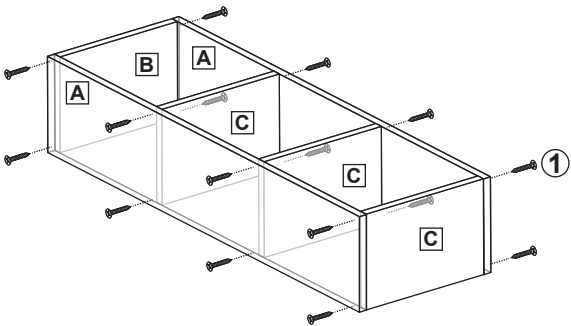

Step 3

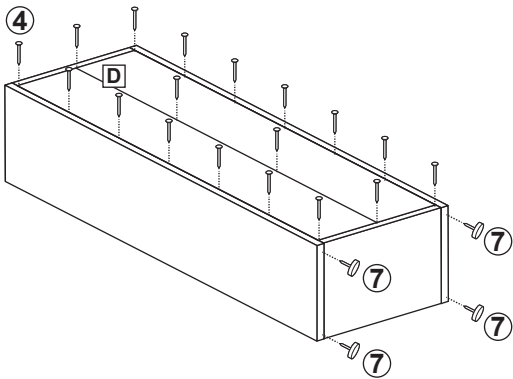

Step 4

