


**CODING**

-5509126  
 -5523001  
 -5523002  
 -5523006  
 -5523007

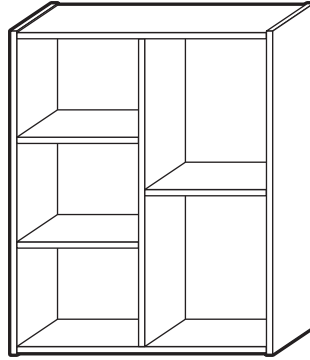

ISO 9001:2015  
 Reg. No. 000435-1-MY-1-QMS






nuhoom.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

**CAUTION**


**KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.**

ITEM	HARDWARE LIST		QTY
①		M4 x 32mm Chipboard Screw	24
②		Nail	6

ITEM	PART LIST		QTY
Ⓐ	Side Panel		2
Ⓑ	Centre Panel		1
Ⓒ	Top & Bottom Panel		2
Ⓓ	Shelf Panel		3
Ⓔ	Back Panel		1

## CODING


-5509126  
-5523001  
-5523002  
-5523006  
-5523007

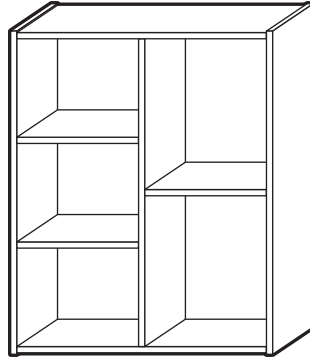


ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


### Step 1

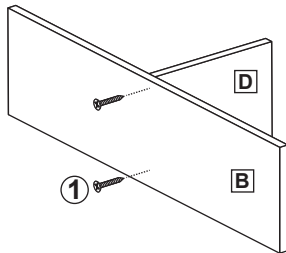


### Step 2

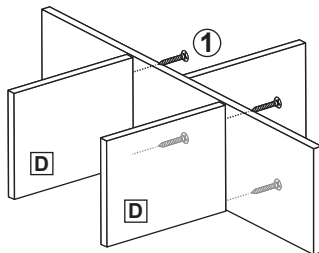


### Step 3

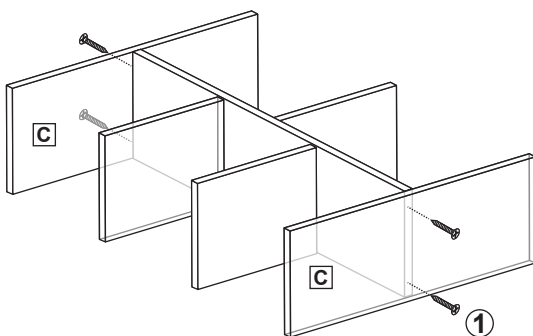


### Step 4

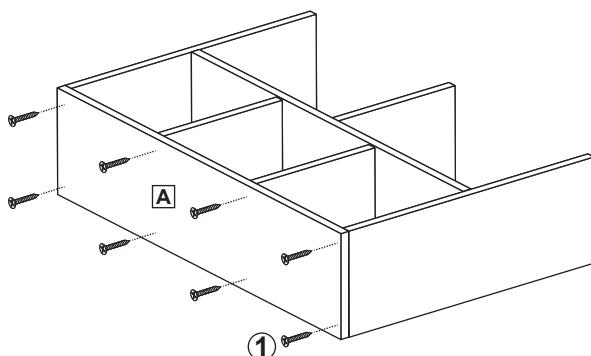

### Step 5

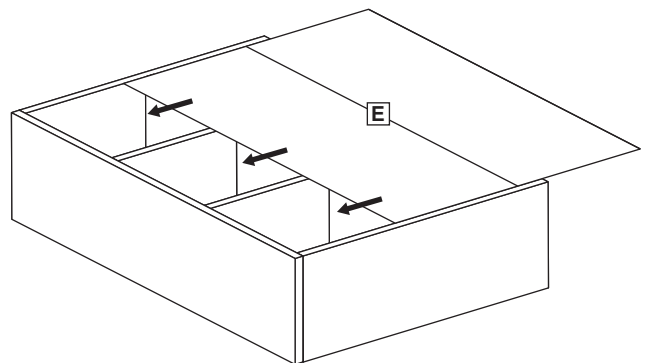

### Step 6

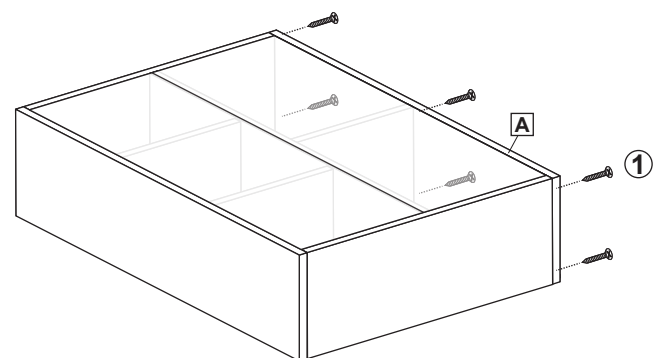

### Step 7

