

**CODING**  
-572006



**ISO 9001:2015**  
Reg.No. 000435-1-MY-1-QMS

**LUOMA.COM**

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

**CAUTION**  
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

| ITEM | PHOTO                                                                               | HARDWARE NAME  | QTY |
|------|-------------------------------------------------------------------------------------|----------------|-----|
| (A)  |  | Bolt M6x12     | 12  |
| (B)  |  | Allen key 4 mm | 1   |
| (C)  |  | Foot cap Ø12x5 | 6   |

| ITEM | PHOTO                                                                                | PARTS NAME        | QTY |
|------|--------------------------------------------------------------------------------------|-------------------|-----|
| ①    |  | Shelf             | 2   |
| ②    |  | Side frame        | 2   |
| ③    |  | Rail<br>(L=670mm) | 2   |



CODING  
-572006





ISO 9001:2015  
Reg.No. 000435-1-MY-1-QMS

LUooma.com

1

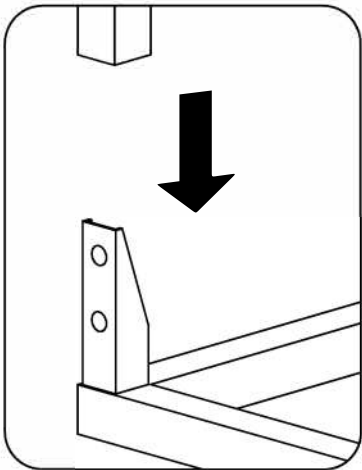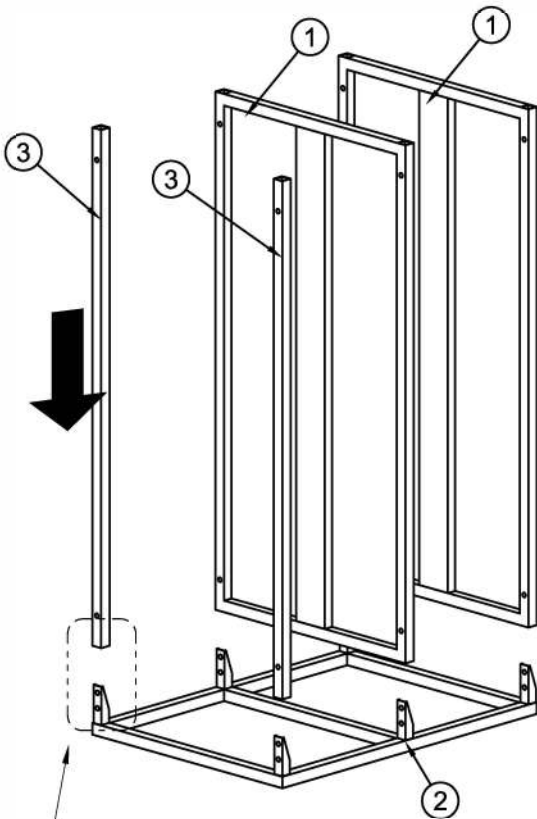

2

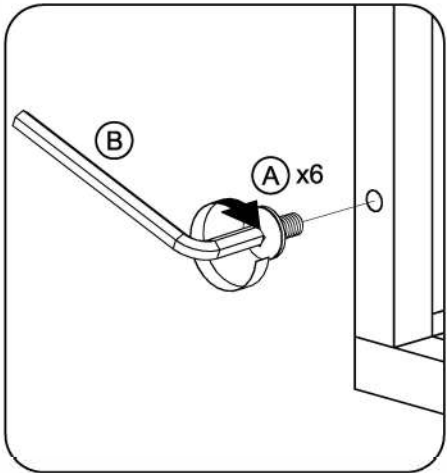
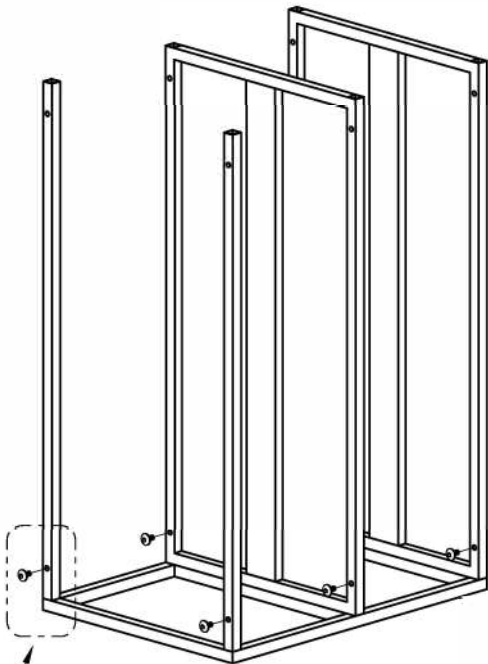


CODING  
-572006



ISO 9001:2015  
Reg.No. 000435-1-MY-1-QMS

LUooma.com

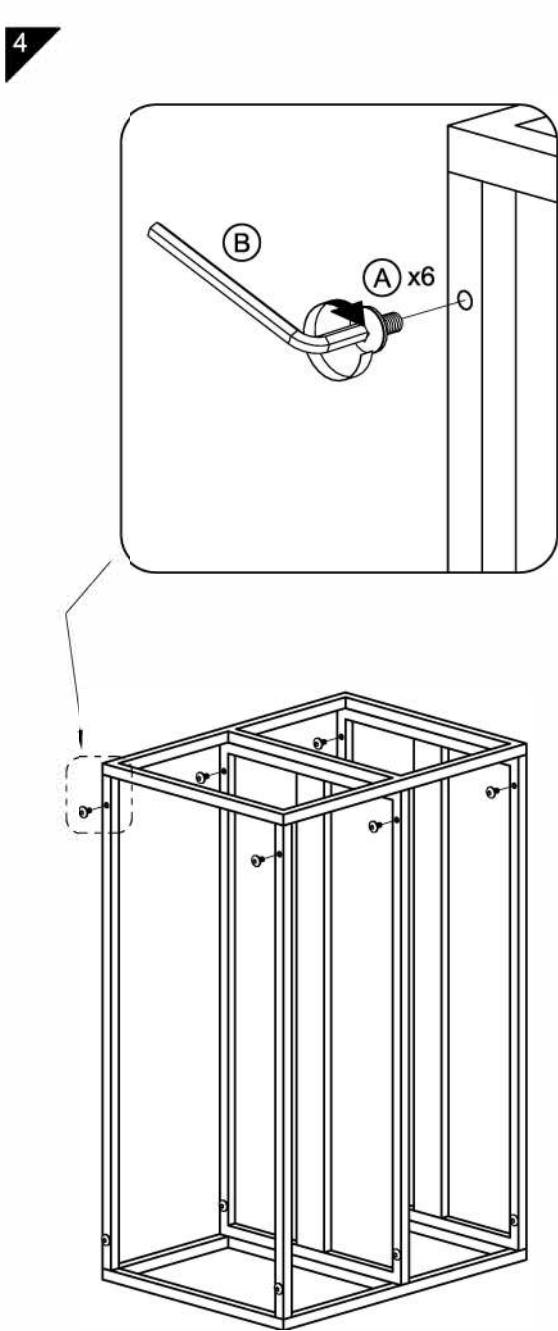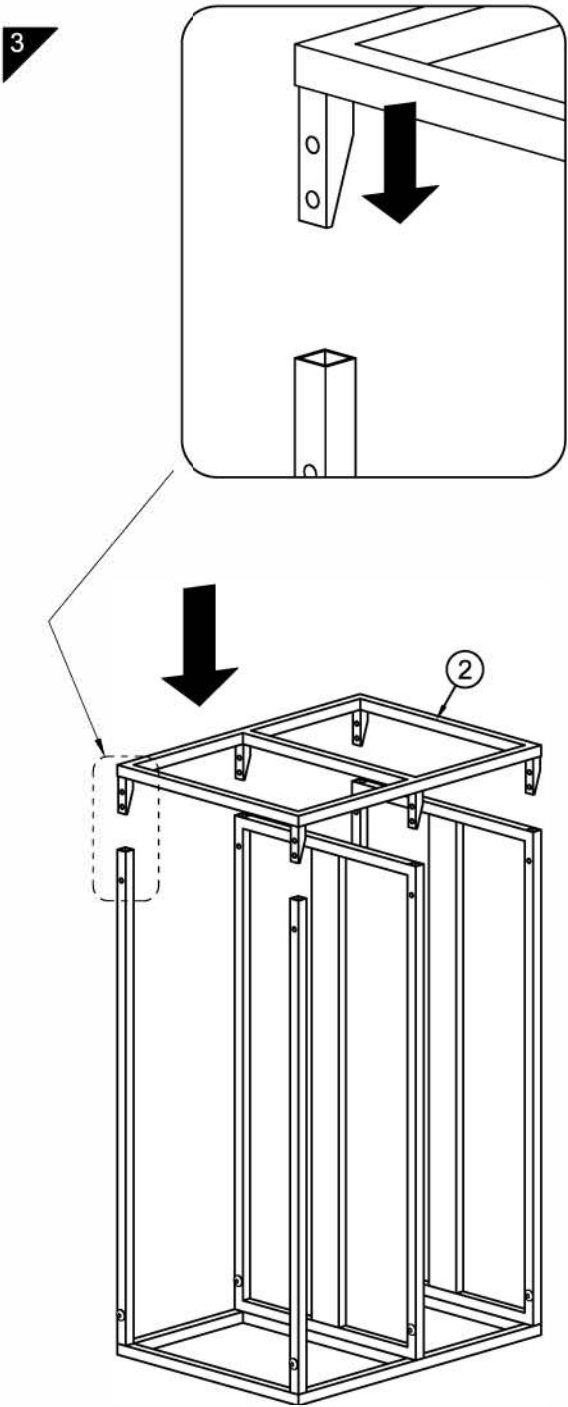


CODING  
-572006



ISO 9001:2015  
Reg.No. 000435-1-MY-1-QMS

LUOMA.COM

5

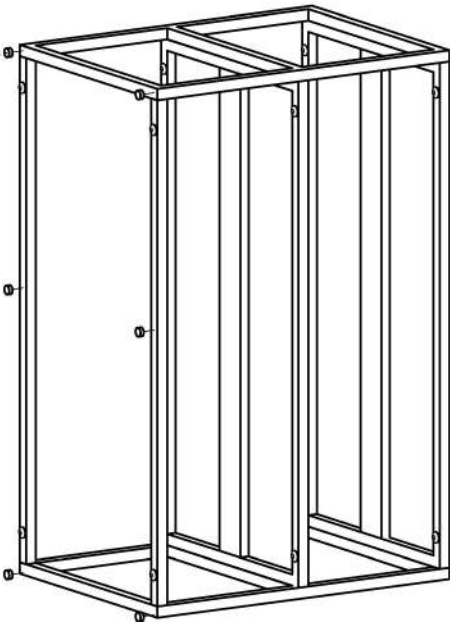

6

