

CODING

-653017

-653018



ISO 9001:2015
Reg. No. 000435-1-MEY-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HAREWARE NAME	QTY
①		JCBC SCREW M6 x 60MM	8
②		BARREL NUT M6	8
③		CSK SCREW M3.5 x 16MM	16
④		CSK SCREW M4 x 32MM	8
⑤		WOOD DOWEL M10 X 30MM	4
⑥		M4 ALLEN KEY	1

ITEM	PARTS NAME	QTY
Ⓐ	HEAD BOARD	1
Ⓑ	FOOT BOARD	1
Ⓒ	SIDE PANEL	2
Ⓓ	BED SLAT	12
Ⓔ	WHEEL	4

PULL OUT BED

ASSEMBLY GUIDE

CODING

-653017


-653018




ISO 9001:2015
Reg. No. 000435-1-MEY-1-QM&S

nuhoom.com

1

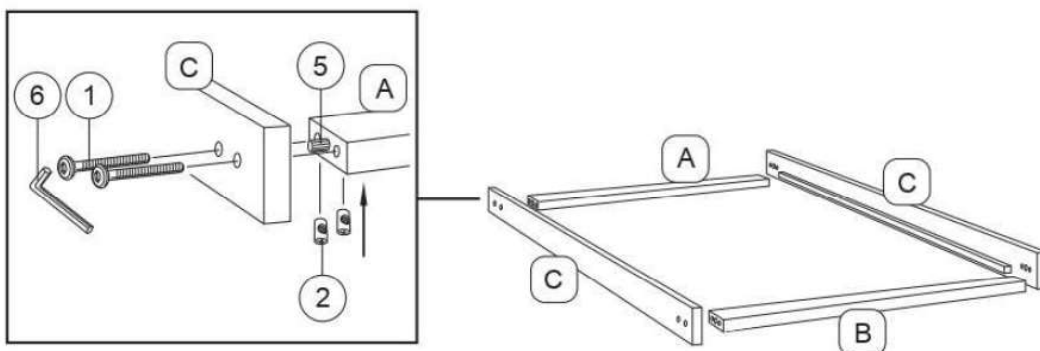

2

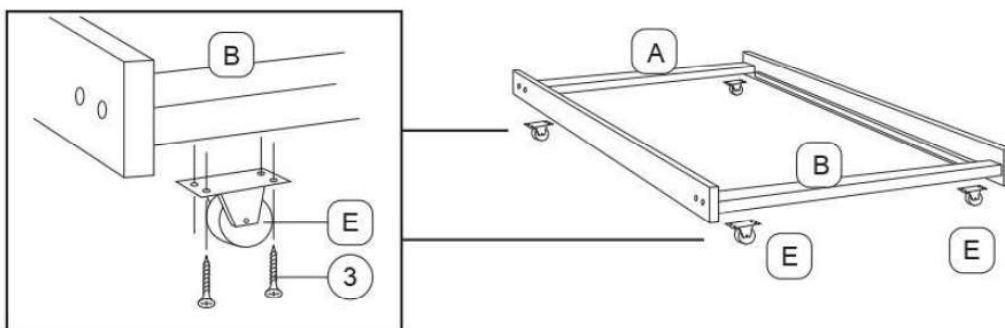

3

