

### CODING

-655030

-655029










ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS








nesthouz.com

Read the instruction carefully. Remove all the wrapping material. Staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches

### CAUTION

KEEP ALL THE PARTS OUT REACH OF CHILDREN

ITEM	HARDWARE LIST		QTY	SPARE QTY
1	Plastic Bracket		28	
2	Plastic Bracket Center		14	
3	Csk M4 x 32mm		8	
4	M5 Allen Key		1	
5	M4 Allen Key		1	
6	Jebe M6 x 50mm		3	
7	Jebe M6 x 25mm		4	

ITEM	PART LIST		SPARE QTY 1900
A	Headboard		1
B	Footboard		1
C	Side rail		2
D	Wooden foot		2
E	Center rail		1
F	Center Support with Leveller		3
G	Slat		28

## CODING

-655030


-655029




ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

nesthouz.com


1

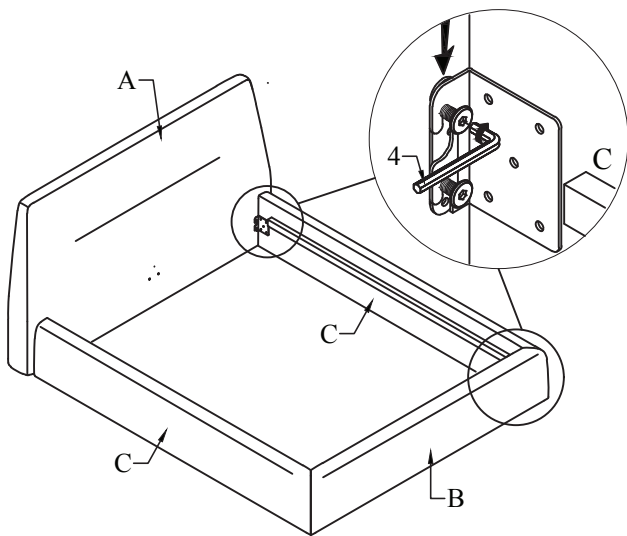

2

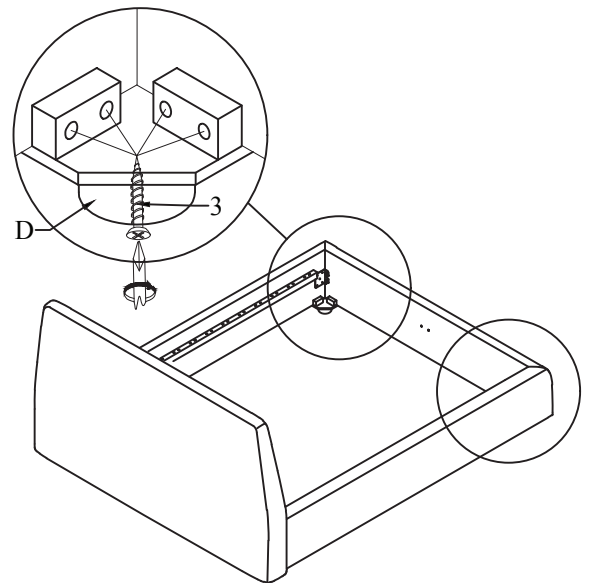

3

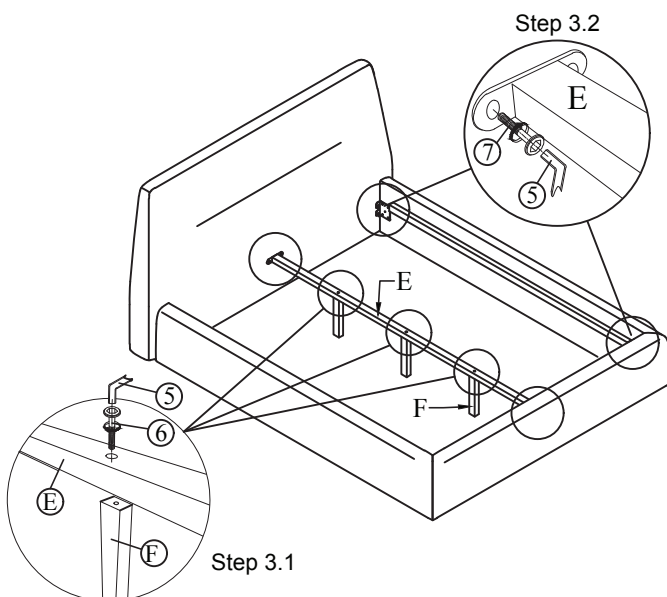

4

