

CODING

-655048
-655051
-656054
-656055



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

fynd.
FURNITURE

Read the instruction carefully. Remove all the wrapping material. Staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches

CAUTION

KEEP ALL THE PARTS OUT REACH OF CHILDREN

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		Bolts M6x40	16
(B)		Washers M6 x 22	16
(C)		Lock washer M6 x 11	16
(D)		Allen key K4	1
(E)		Allen key K5	1
(F)		Bolts M6x12	8
(G)		SCREW M4 x 30	2

ITEM	PHOTO	PARTS NAME	QTY
(1)		Headboard	1
(2)		Footboard	1
(3)		Side rail L+R	2
(4)		Center rail	1
(5)		Slat	14
(6)		Latch	4





CODING

-655048
-655051
-656054
-656055



ISO 9001:2015
Reg. No. 000435-1-MY-1-QM3

fynd.
FURNITURE

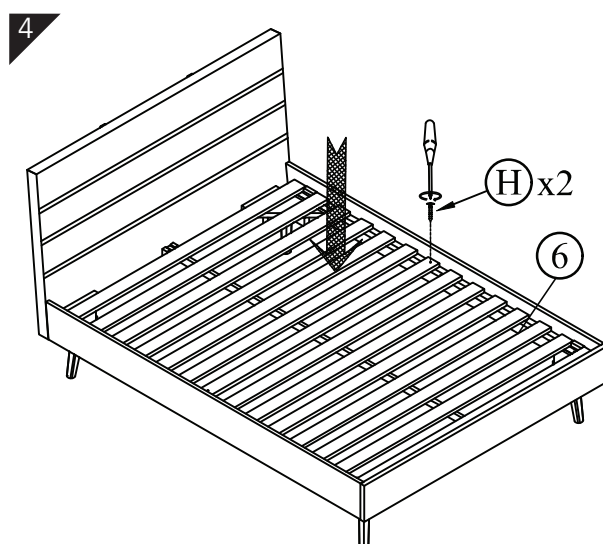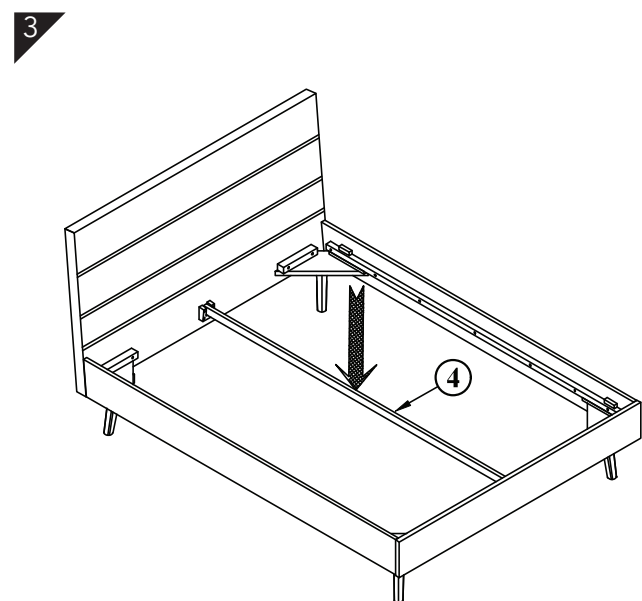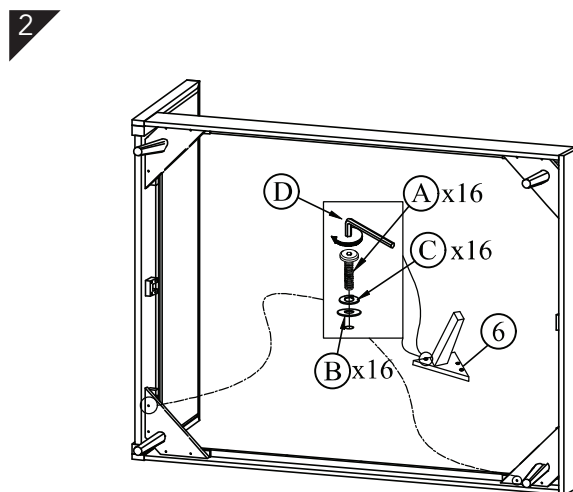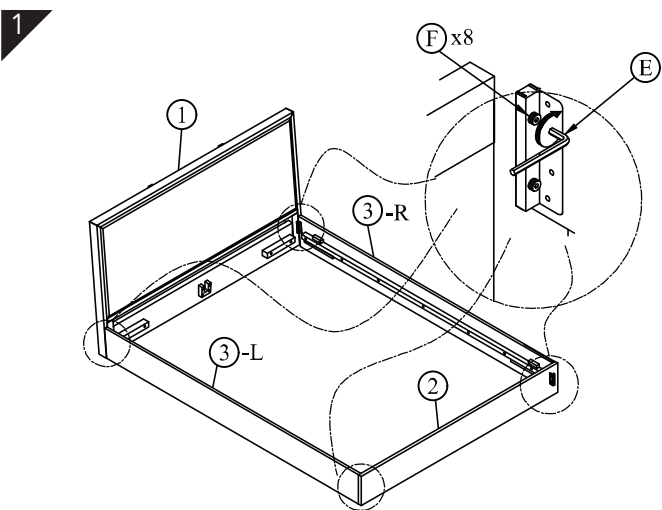

CODING

-655048
-655051
-656054
-656055



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

fynd.
FURNITURE

5

