


CODING

- 655086 / 655090

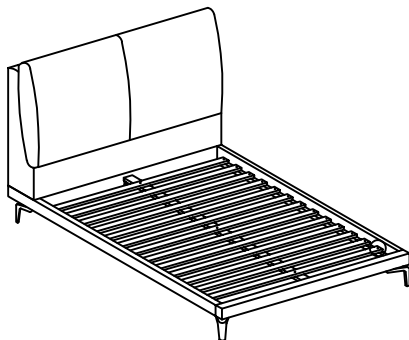

ISO 9001:2015
Reg.No. 000435-1-MY-QMS

LUOMA.COM

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		JCBC M6 x 20mm	16
(B)		JCBC M6 x 35mm	35
(C)		ALLEN KEY M4 x 65mm	1
(D)		FLAT WASHER	32
(E)		HEX NUT	16
(F)		CSK M4 x 32mm	27
(G)		ADJUSTER	3



ITEM	PHOTO	PARTS NAME	QTY
①		HEADBOARD	1
②		FOOTBOARD	1
③		SIDE RAIL	2
④		SLAT (12 PCS)	1
⑤		SUPPORT LEGS	3
⑥		CENTER RAIL	1
⑦		LEGS	4
⑧		L-SHAPED BRACKET	4

CODING
- 655086 / 655090

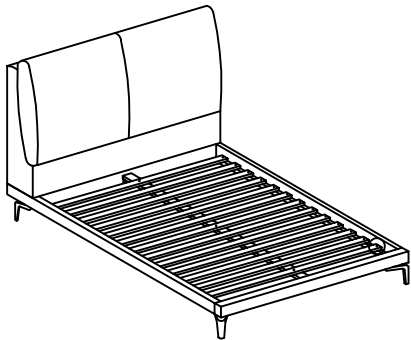

ISO 9001:2015
Reg.No. 000435-1-MY-QMS


LUOMA.COM

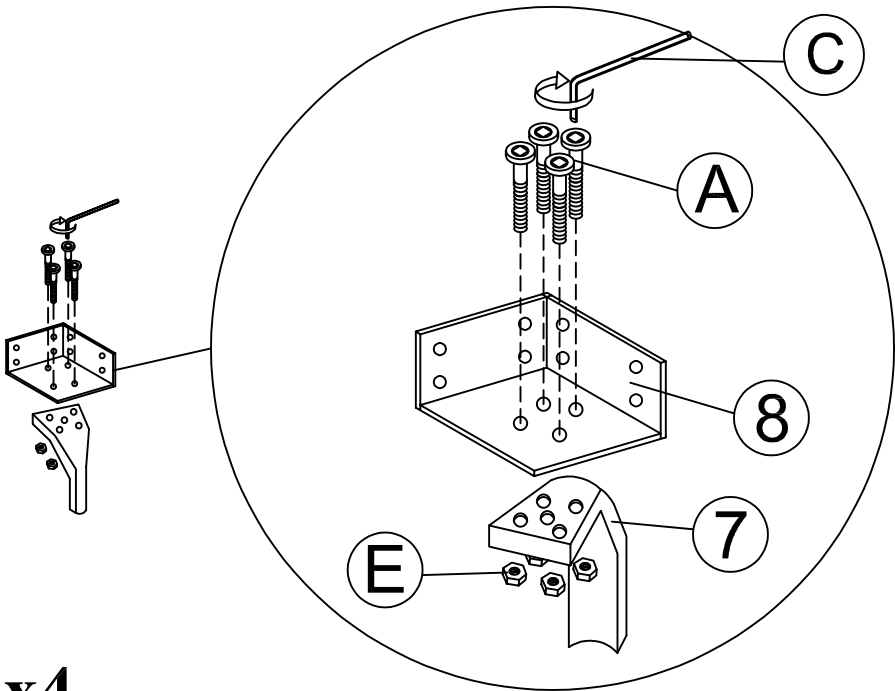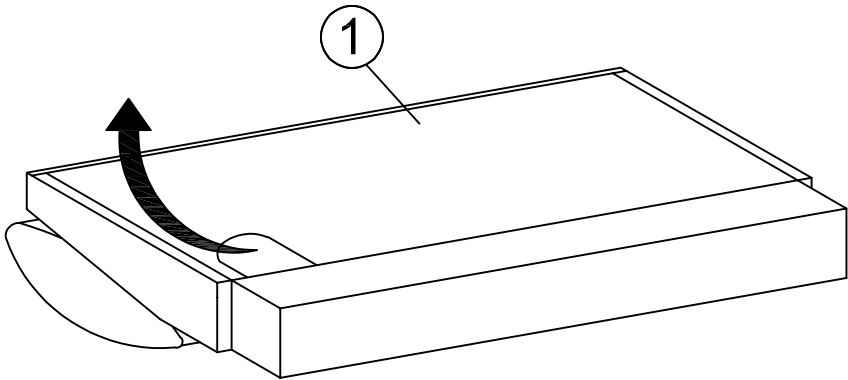

x4



CODING

- 655086 / 655090

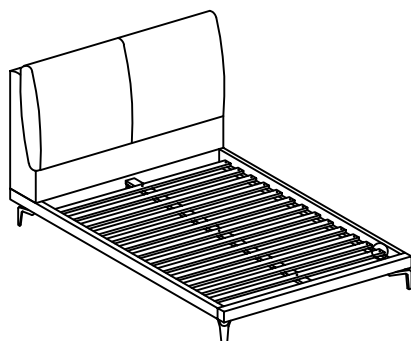

ISO 9001:2015
Reg.No. 000435-1-MY-QMS


LUOMA.COM

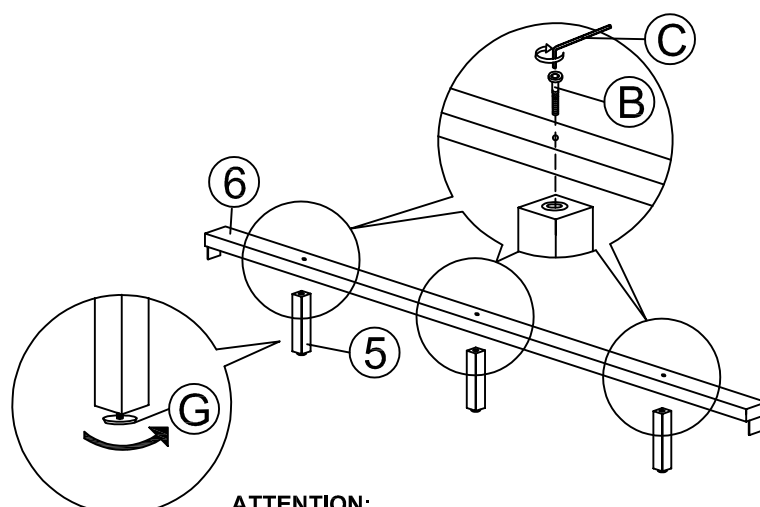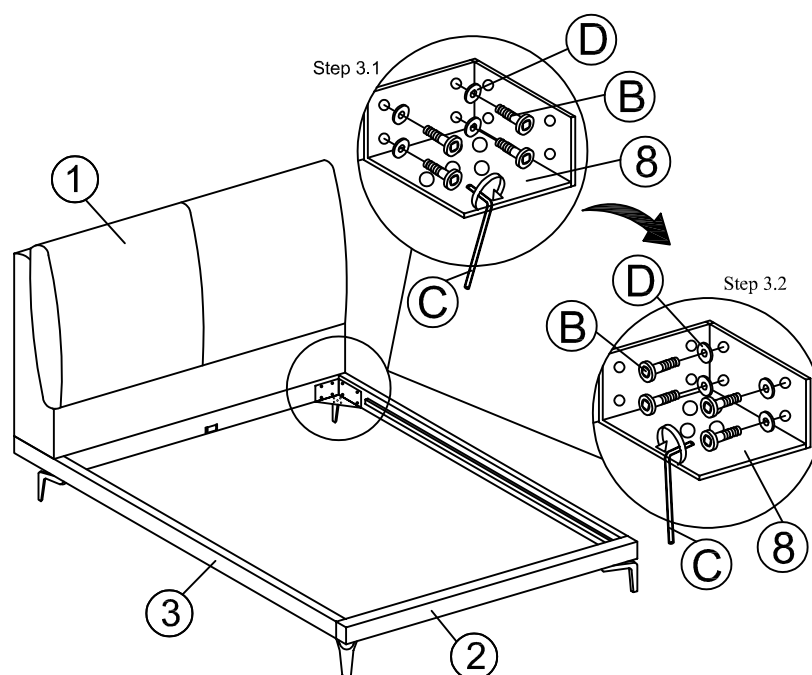

ATTENTION:
Please keep the adjuster around 5 to 8 mm distant away from the floor.

CODING

- 655086 / 655090

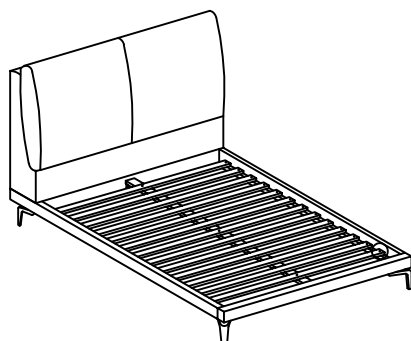

ISO 9001:2015
Reg.No. 000435-1-MY-QMS

LUOMA.COM

