


CODING

- 655116
- 655096

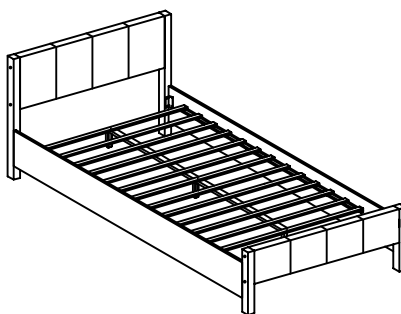

ISO 9001:2015
Reg.No. 000435-1-MY-QMS

nesthouz.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION


KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		JCBC M6 x 30mm	8
(B)		JCBC M6 x 40mm	8
(C)		JCBC M6 x 60mm	3
(D)		ALLEN KEY M4 x 100mm	1
(E)		FLAT WASHER	8
(F)		CSK M4 x 32mm	29
(G)		ADJUSTER	3

ITEM	PHOTO	PARTS NAME	QTY
①		HEADBOARD	1
②		FOOTBOARD	1
③		SIDE RAIL	2
④		SLAT (13 PCS)	1
⑤		SUPPORT LEGS	3
⑥		CENTER RAIL	1
⑦		HEADBOARD LEGS	2
⑧		FOOTBOARD LEGS	2

CODING

- 655116
- 655096

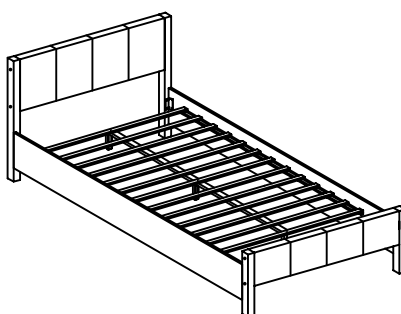


ISO 9001:2015
Reg.No. 000435-1-MY-QMS


nesthouz.com

1

Match the label!

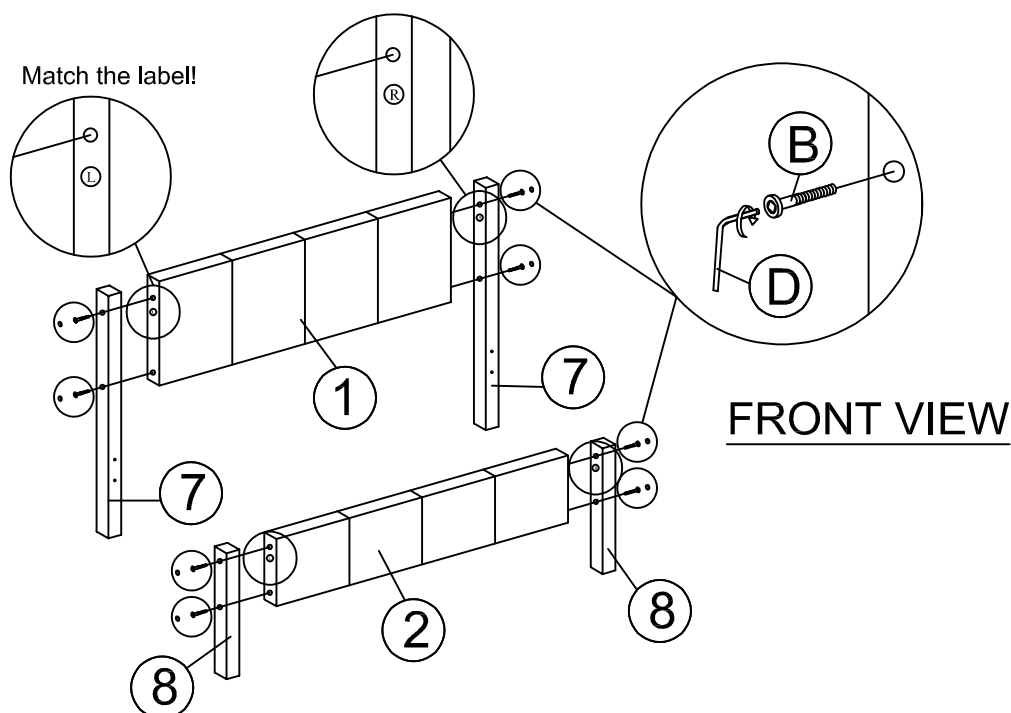


2

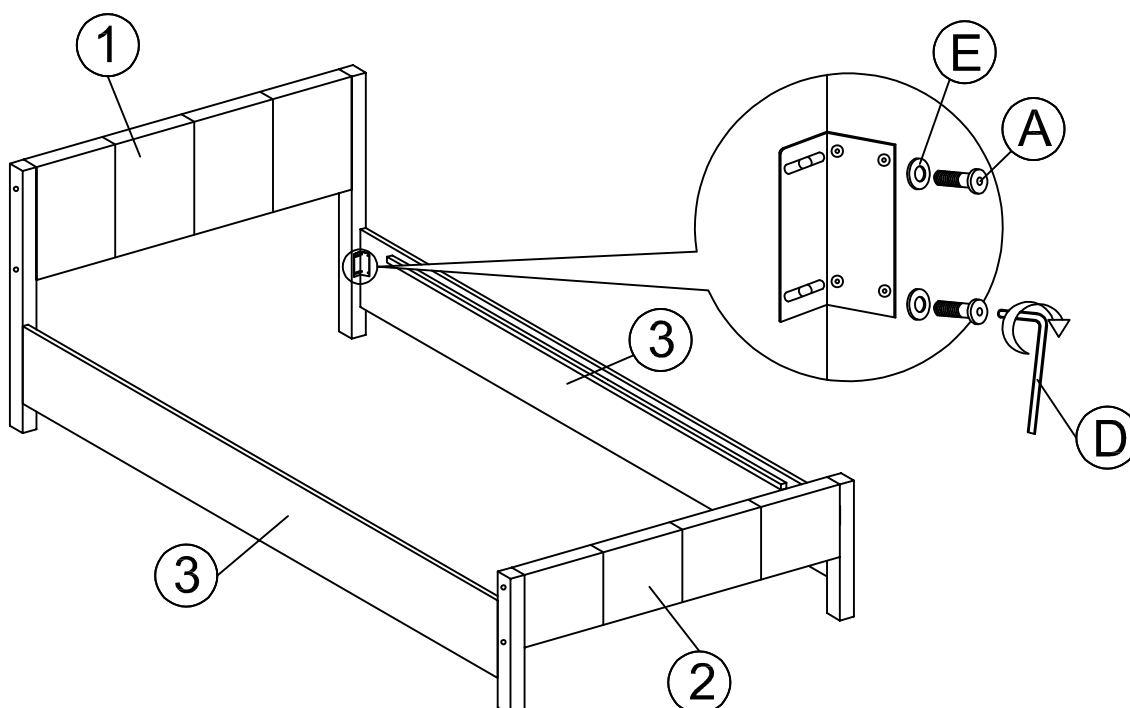

CODING


- 655116
- 655096

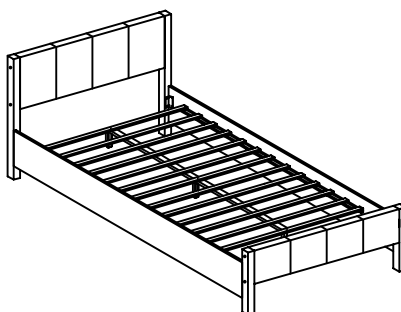

ISO 9001:2015
Reg.No. 000435-1-MY-QMS

nesthouz.com

3

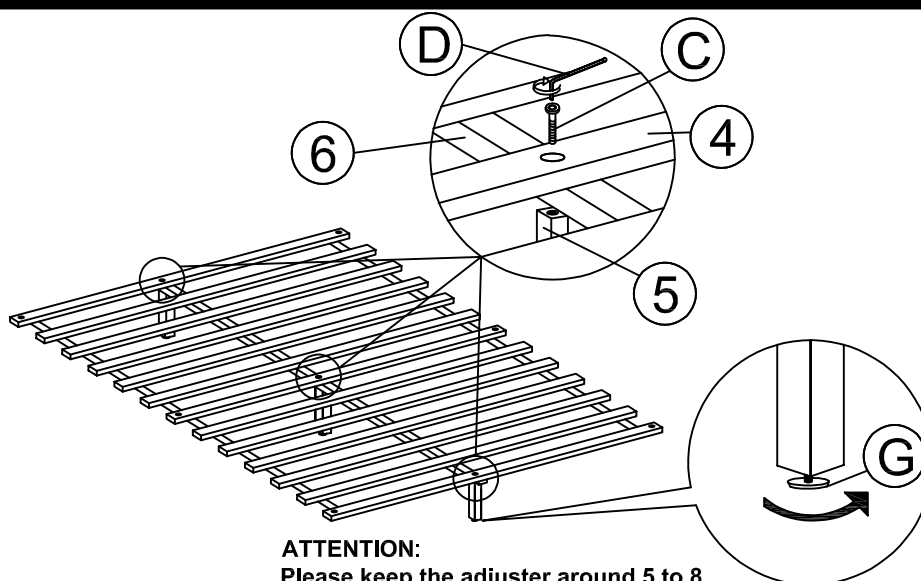

ATTENTION:
Please keep the adjuster around 5 to 8 mm distant away from the floor.

4

