

LOADING

-655104
-655105



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

LUooma.com

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean, flat and soft surface, such as a carpet or rubbermat to prevent from scratches.

CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN .

ITEM	PHOTO	PART NAME	QTY
A		FOOTBOARD	2
B		SIDE RAIL	2
C		CENTER RAIL	2
D		CENTER LEG	4
E		HEADBOARD	1
F		BOARD	3

ITEM	PHOTO	HARDWARE NAME	QTY
1		JCBC SCREW M6x30MM	4
2		JCBB SCREW M8x30MM	4
3		JCBB SCREW M8x40MM	4
4		SPRING WASHER M8	8
5		SPRING WASHER M6	2
6		CHIPBOARD SCREW M4x25MM	24
7		HEX NUT M8	4
8		HALF MOON M8	4
9		STUD SCREW M8x80MM	4
10		STUD SCREW M8x40MM	8
11		ALLEN KEY M4	1
12		ALLEN KEY M5	1
13		SPANNER	1
14		RUBBER ADJUSTER	4

LOADING

-655104



-655105




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

LUOMA.COM

1

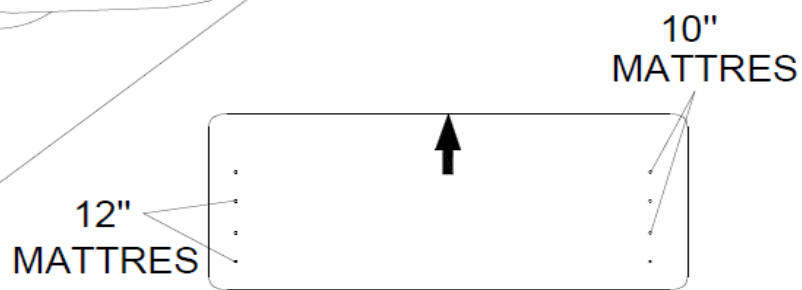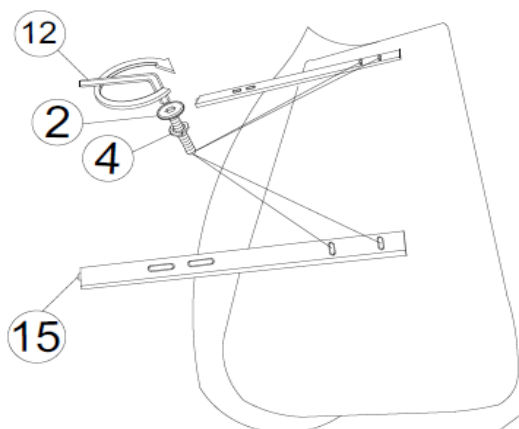


2

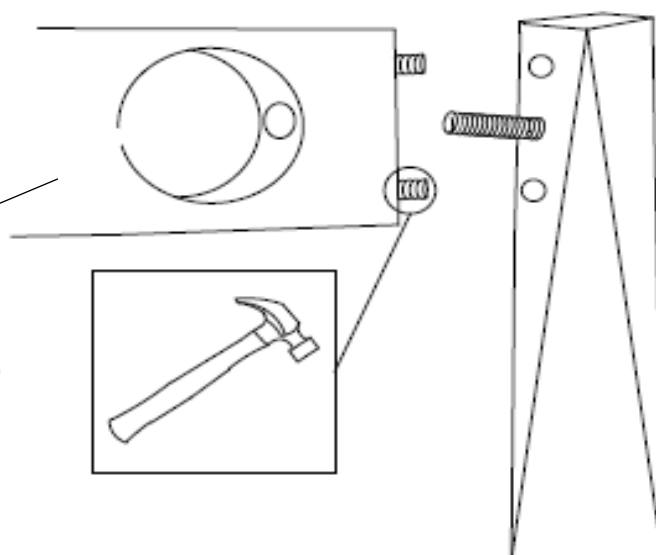


REMARK:
KNOCK IN THE STUD SCREW 10 AND
CROP IN THE LEG.

3

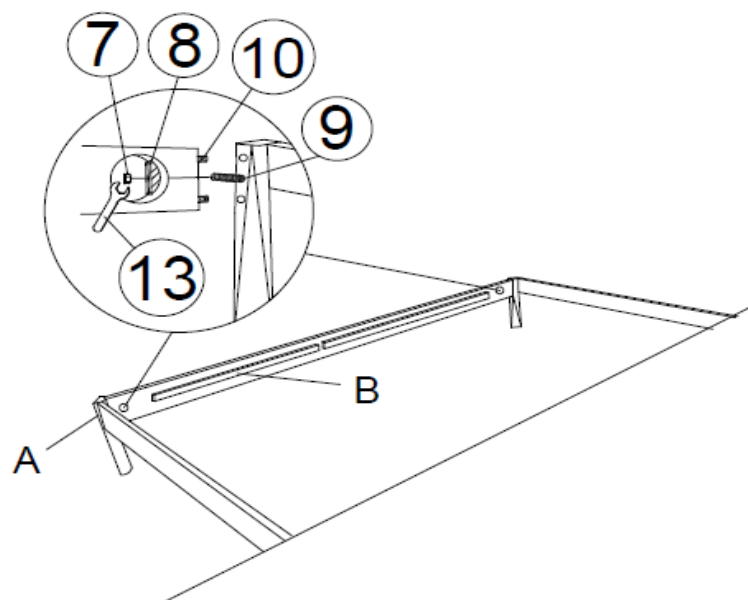

4

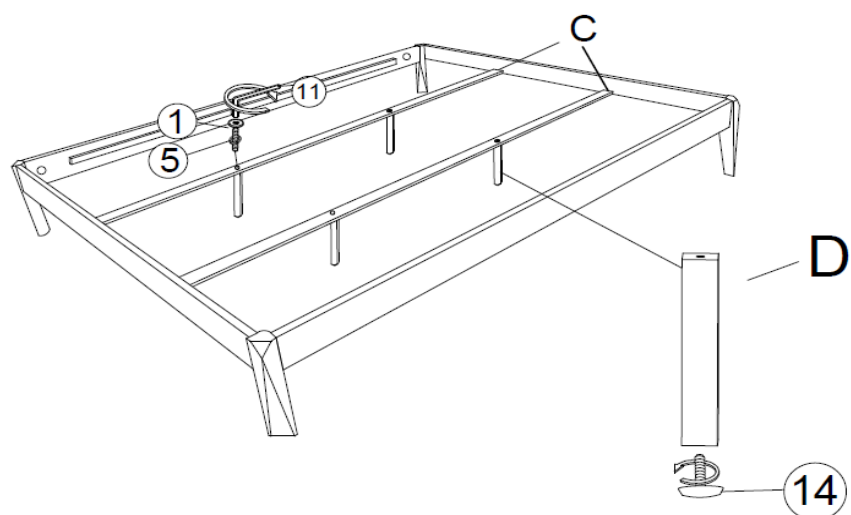

5

