

CODING

- 655127
- 655130
- 655137
- 655140

















ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS

[nesthouz.com](https://www.nesthouz.com)

Read the instruction carefully . Remove all the wrapping material staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure you have all part before you start assembling. Place all the wooden furniture part on a clean and flat surface, such as carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		JCBC M6 x 60 mm	10
(B)		JCBC M6 x 30 mm	32
(C)		JCBC M6 x 16 mm	2
(D)		JCN M6 x 15MM	2
(E)		FLAT WASHER M6	26
(F)		METAL L BRACKET	2
(G)		CSK M4 x 25mm	24
(H)		CSK M4 x 32mm	48
(I)		ALLEN KEY M4	2

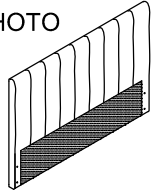
ITEM	PHOTO	PARTS NAME	QTY
(1)		HEADBOARD	1
(2)		SIDE RAIL	2
(3)		FOOTBOARD TOP RAIL	1
(4)		FOOTBOARD CENTER LEG	1
(5)		SIDE RAIL DRAWER FRONT PANEL	2
(6)		FOOTBOARD DRAWER FRONT PANEL	2
(7)		DRAWER SIDE PANEL	8
(8)		DRAWER FRONT PANEL	4
(9)		DRAWER BACK PANEL	4
(10)		DRAWER BOTTOM PANEL	4
(11)		DRAWER BOTTOM RAIL	4
(12)		SLAT	4
(13)		CENTER RAIL	2
(14)		SUPPORT LEG	6
(15)		MDF BOARD	3

CODING
- 655127
- 655130
- 655137
- 655140



ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS

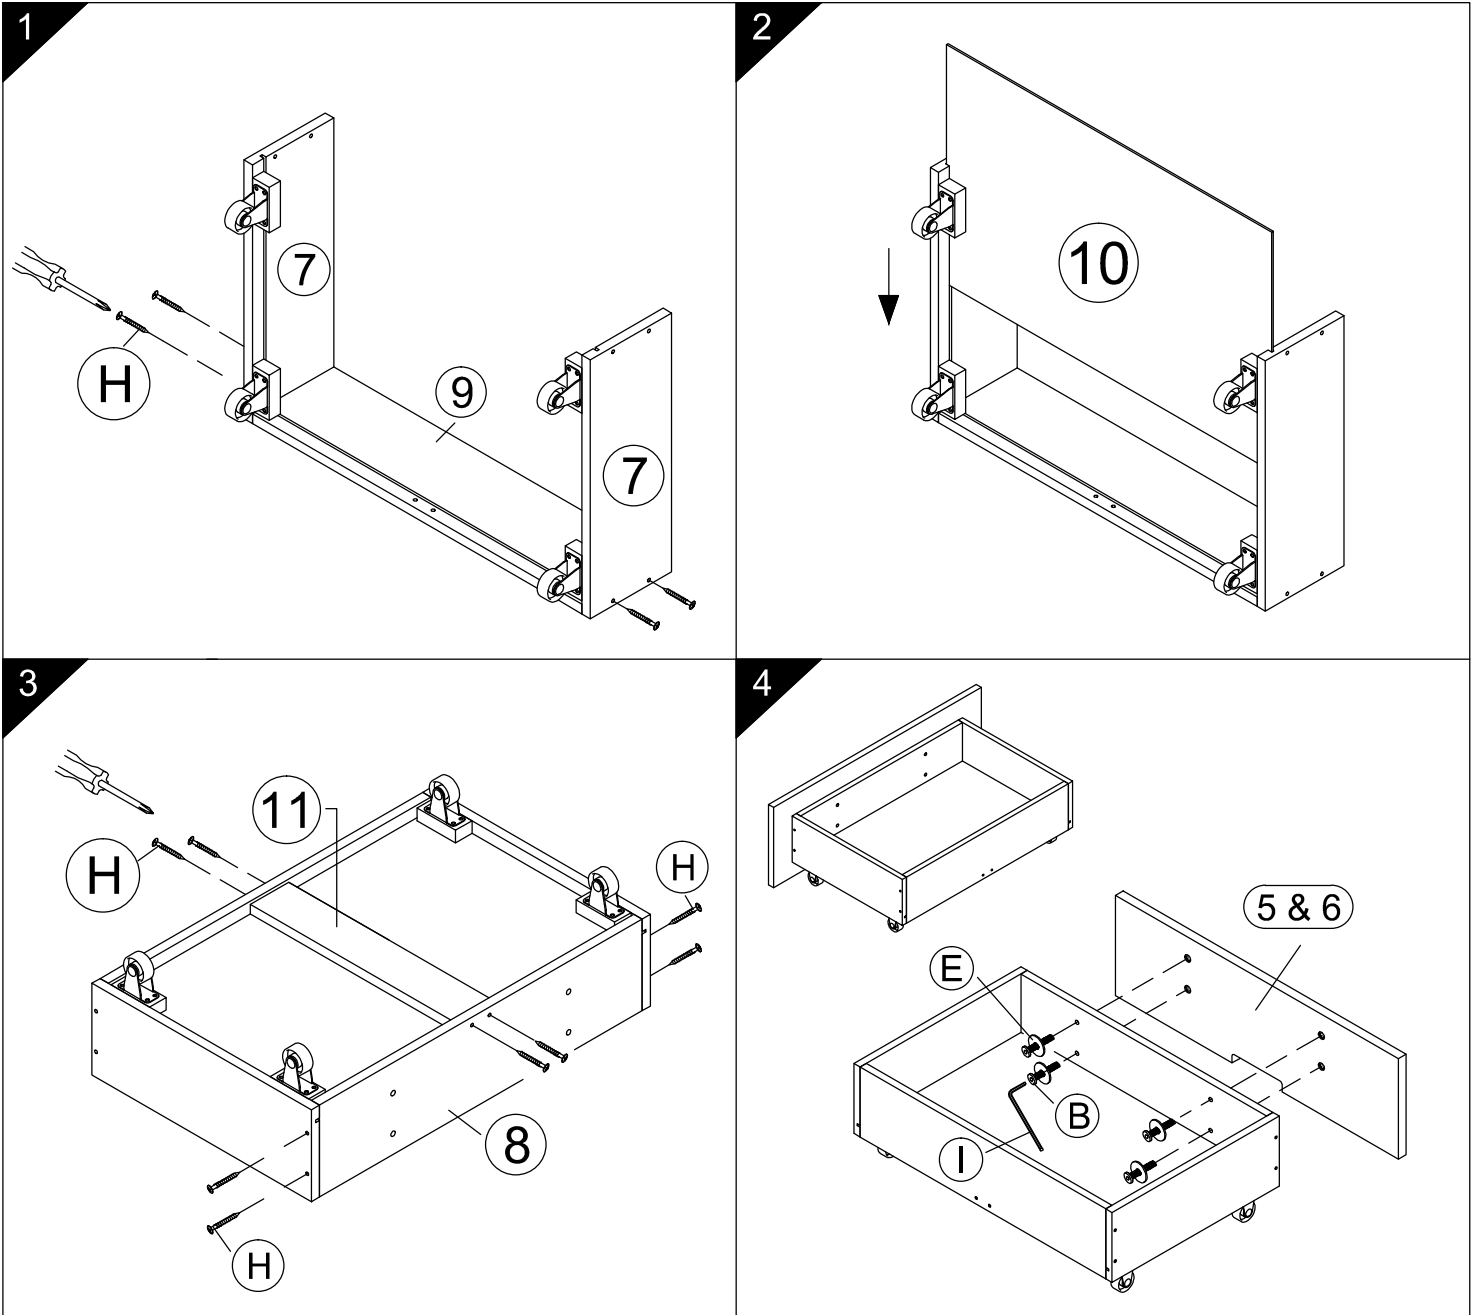nesthouz.com




CODING

- 655127
- 655130
- 655137
- 655140



ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS

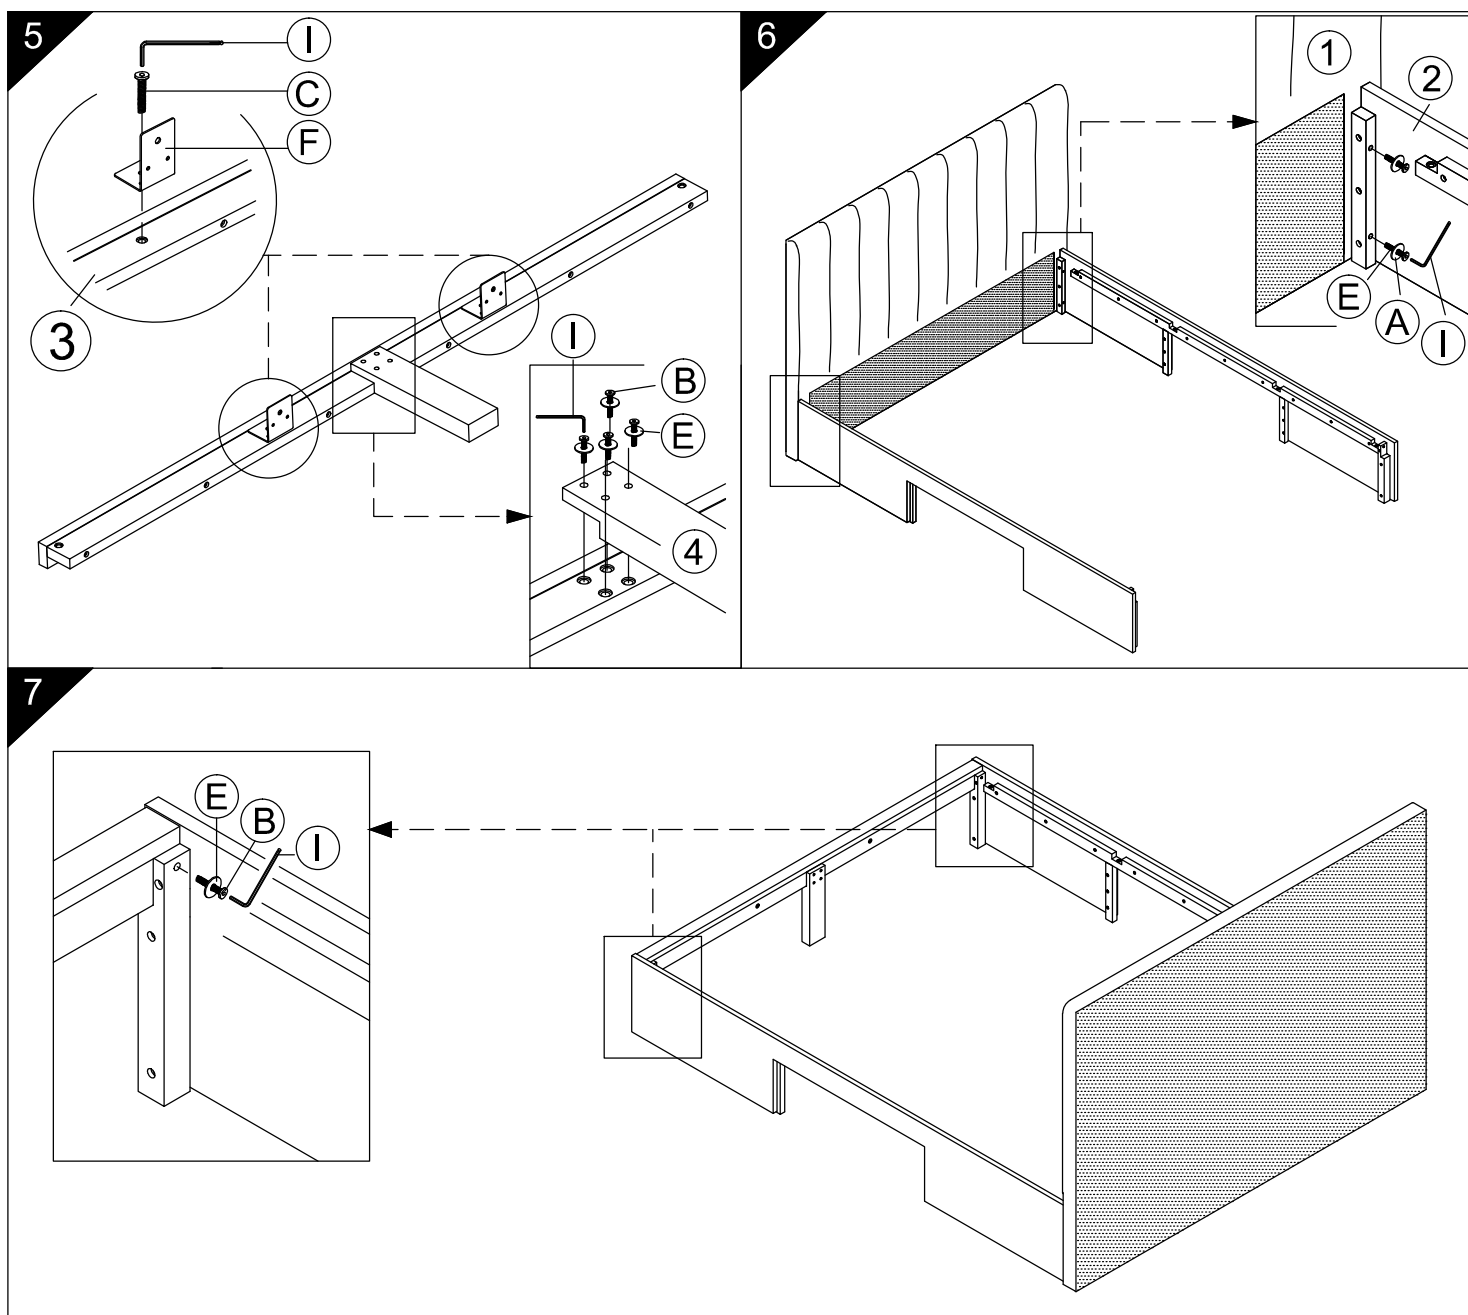nesthouz.com




CODING
- 655127
- 655130
- 655137
- 655140




ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS

nesthouz.com

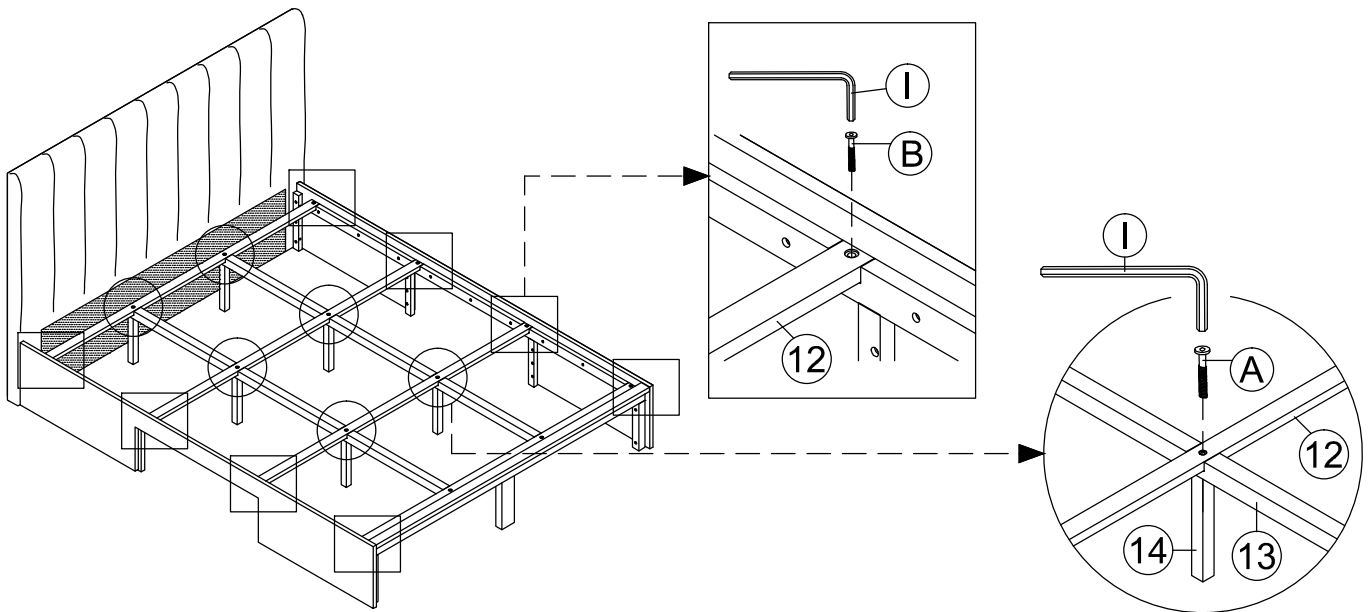8



9

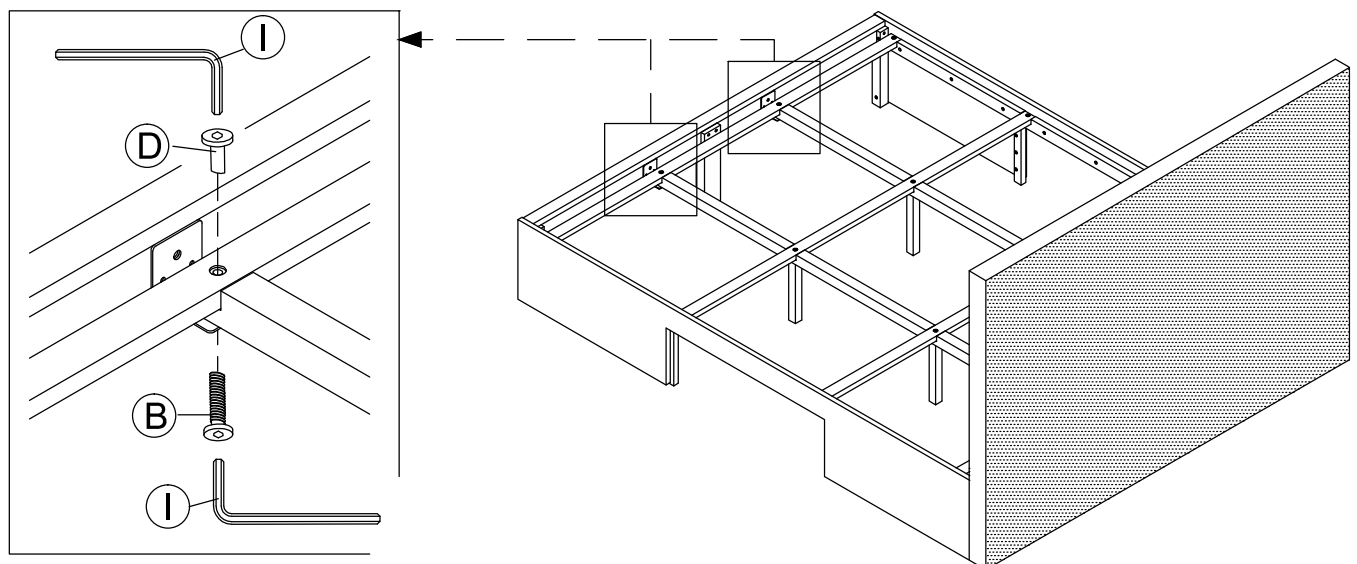

CODING


- 655127
- 655130
- 655137
- 655140




ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS

nesthouz.com

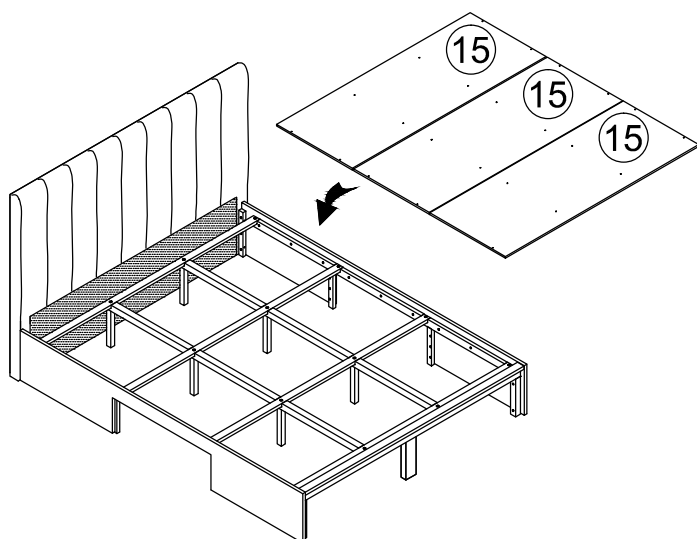
10



11

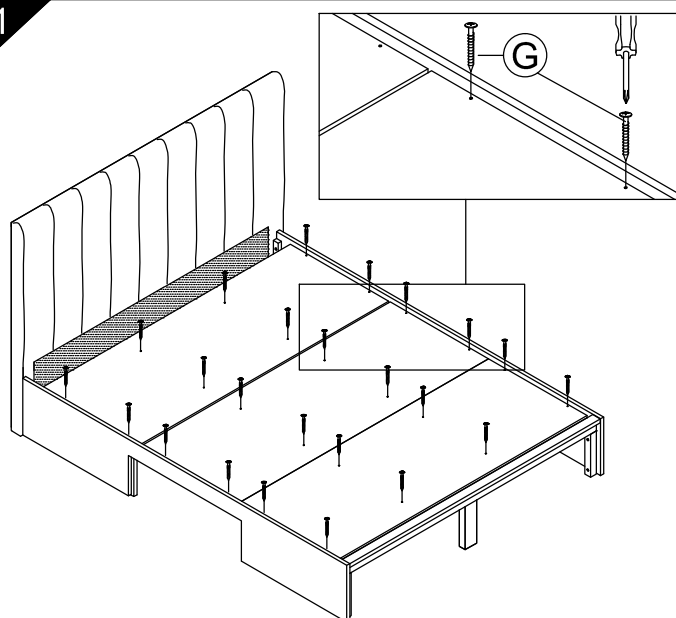

12

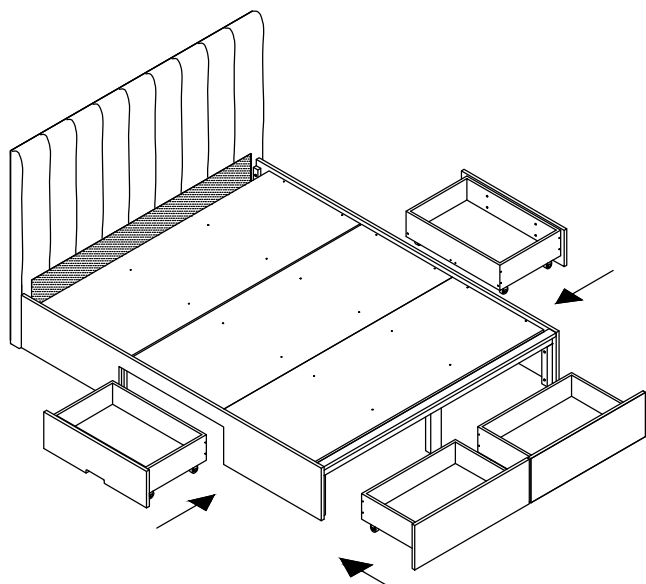

13

COMPLETED
ASSEMBLY

