

CODING
- 655144
- 655145

















ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS

[nesthouz.com](https://www.nesthouz.com)

Read the instruction carefully . Remove all the wrapping material staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure you have all part before you start assembling. Place all the wooden furniture part on a clean and flat surface, such as carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		JCBC M6 x 35 mm	6
(B)		WOOD DOWEL M10 X 30mm	10
(C)		METAL HOLE	4
(D)		SPRING WASHER M6	4
(E)		JCBC M6 x 70 mm	16
(F)		JCBC M6 x 60 mm	6
(G)		JCBC M6 x 50 mm	10
(H)		FLAT WASHER M6	16
(I)		BARREL NUT	6
(J)		METAL PAD	2
(K)		JCBC M6 x 15 mm	4
(L)		ADJUSTER SCREW	14
(M)		CSK M4 x 25 mm	12
(N)		ALLEN KEY M4	1


ITEM	PHOTO	PARTS NAME	QTY
(1)		HEADBOARD RAISE PANEL	1
(2)		HEADBOARD POST	2
(3)		HEADBOARD BTM RAIL	1
(4)		HEADBOARD SIDE PANEL	2
(5)		HEADBOARD SIDE PANEL (S)	2
(6)		SIDE RAIL	2
(7)		FOOTBOARD RAIL	1
(8)		FOOTBOARD LEG	2
(9)		SIDE RAIL LEG	2
(10)		MDF BOARD	3
(11)		CENTER RAIL	6
(12)		SUPPORT LEG	12

CODING
- 655144
- 655145



ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS

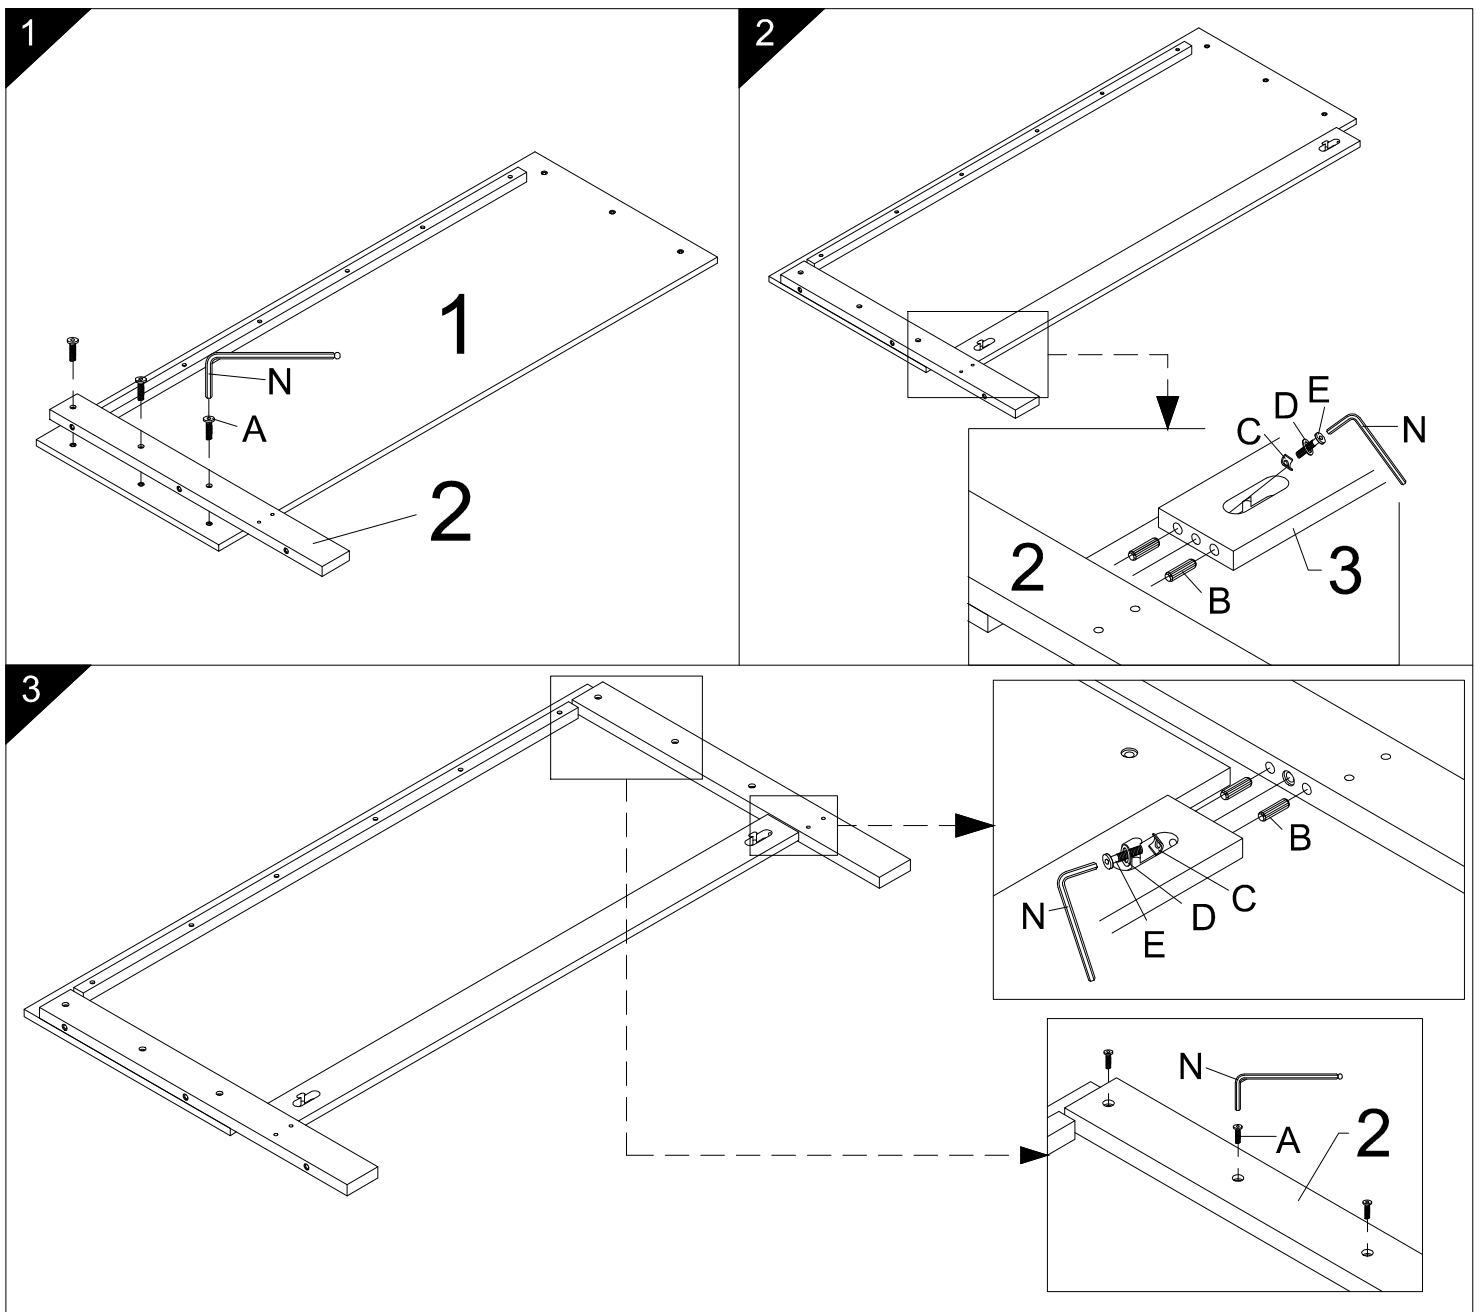nesthouz.com




CODING
- 655144
- 655145



ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS

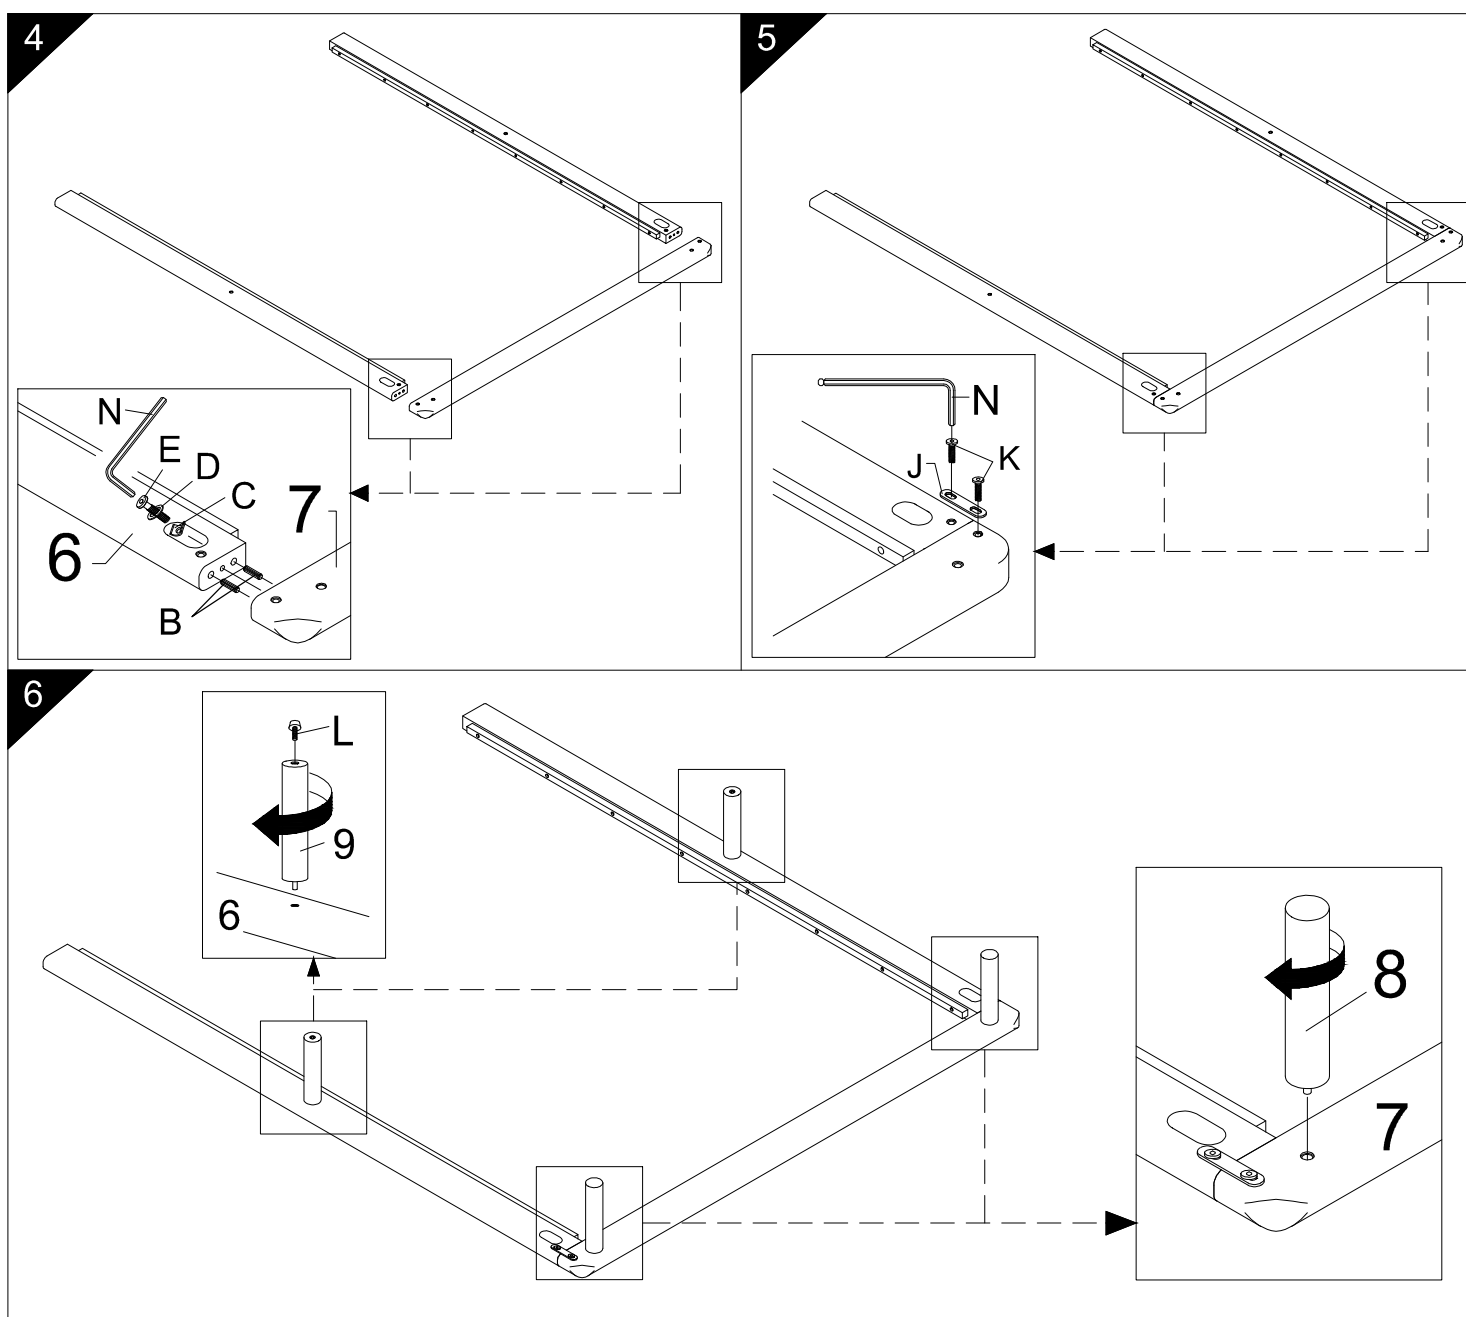nesthouz.com



CODING


- 655144

- 655145



ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS

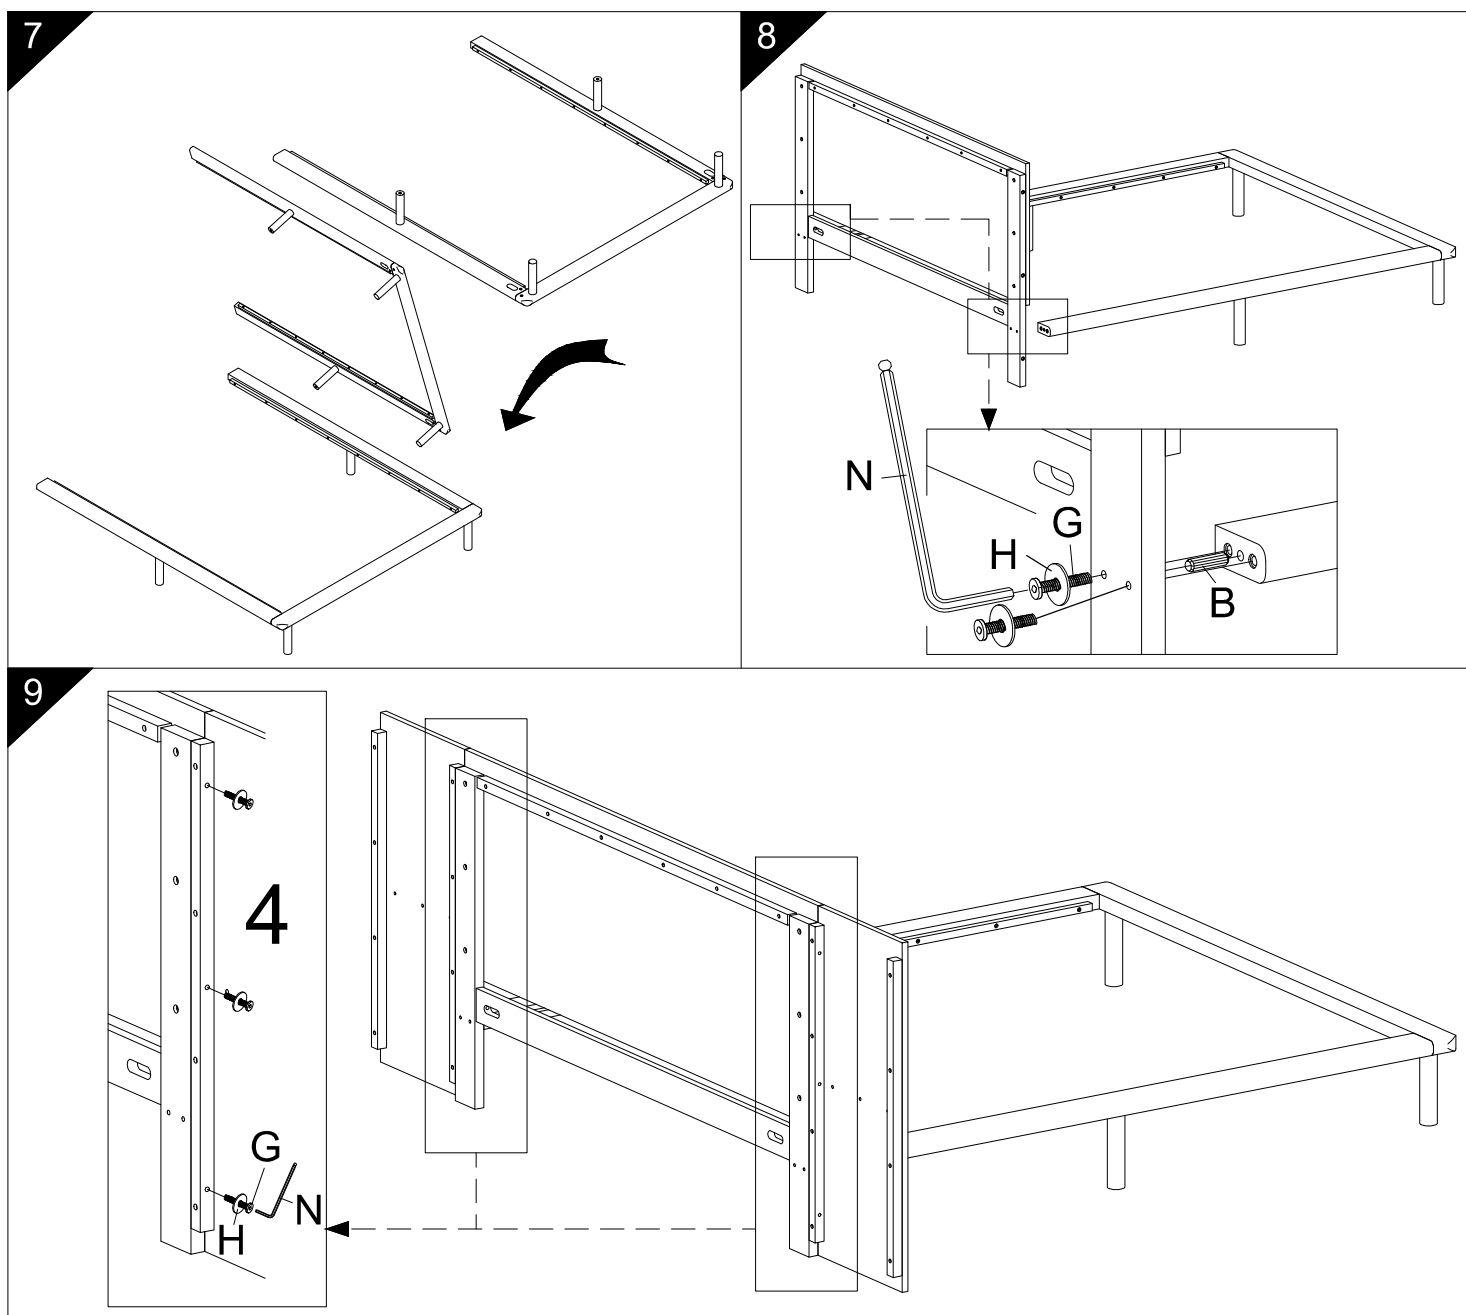nesthouz.com



CODING

- 655144


- 655145




ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS

nesthouz.com

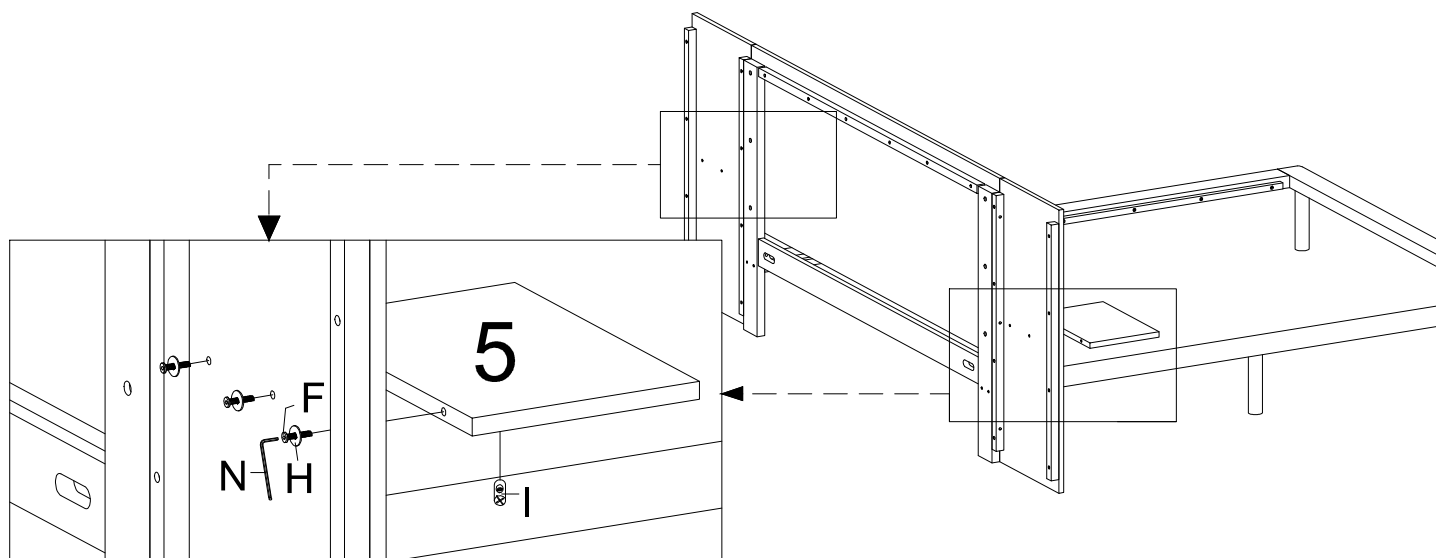10



11

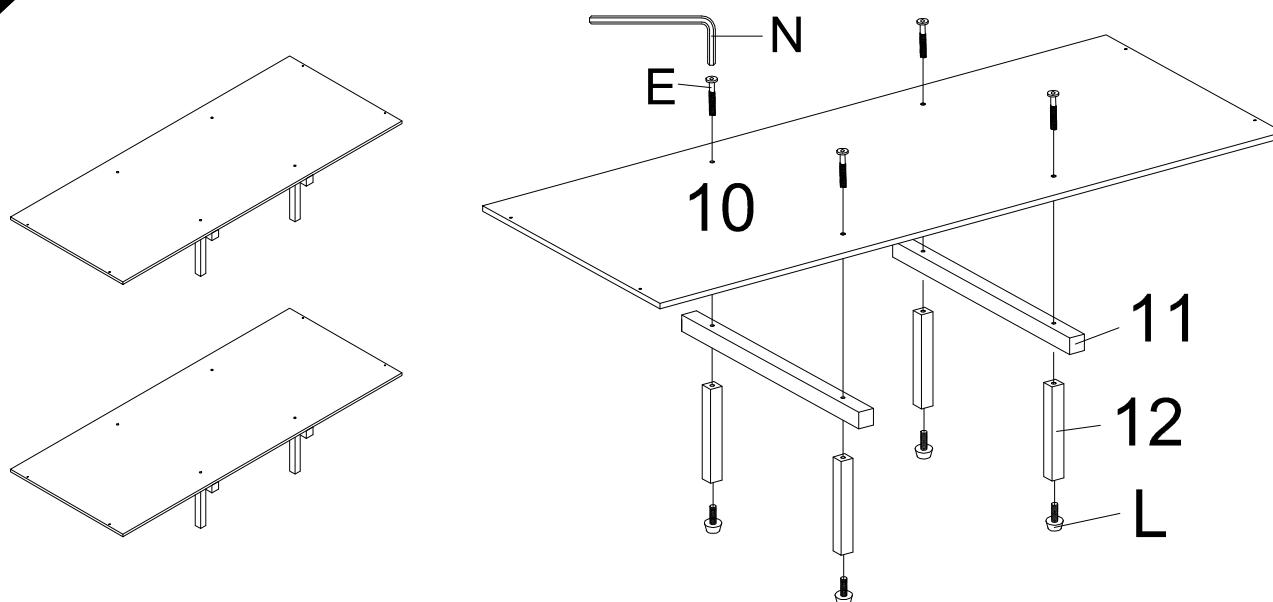

CODING
- 655144
- 655145



ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS

nesthouz.com

