

CODING
-655148




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

fyndfurniture.com

Read the instruction carefully. Remove all the wrapping material , staples and straps from the carton . Refer to the hardware and furniture part list for guidance . Be sure that you have all the parts before you start assembling . Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches .

Caution
KEEP ALL PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST	QTY
Ⓐ	JCBC SCREW M8 X 45MM 	24
Ⓑ	JCBC SCREW M6 X 15MM 	4
Ⓒ	SPRING WASHER 5/16" 	28
Ⓓ	FLAT WASHER 5/16" 	28
Ⓔ	ALLEN KEY M8 	1
Ⓕ	ALLEN KEY M6 	1
Ⓖ	SCREW 4X25MM 	18
Ⓗ	JCBC SCREW M8 X 16MM 	8




ITEM	PART LIST	QTY
①	HEADBOARD 	1
②	FOOTBOARD 	1
③	SIDE RAIL (R) 	1
④	SIDE RAIL (L) 	1
⑤	LEG 	4
⑥	METAL CENTER 	1
⑦	CENTER SUPPORT PANEL 	3
⑧	WOOD BAR CONNECT TO LEG 	4
⑨	SUPPORT LEG 	2

CODING
-655148



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

fyndfurniture.com

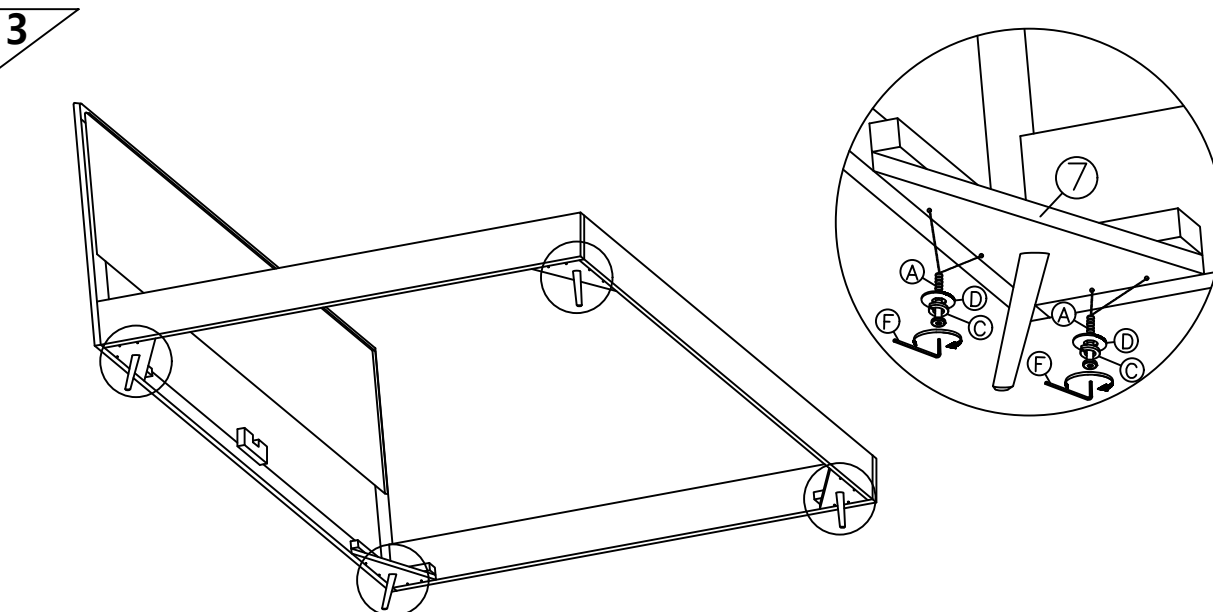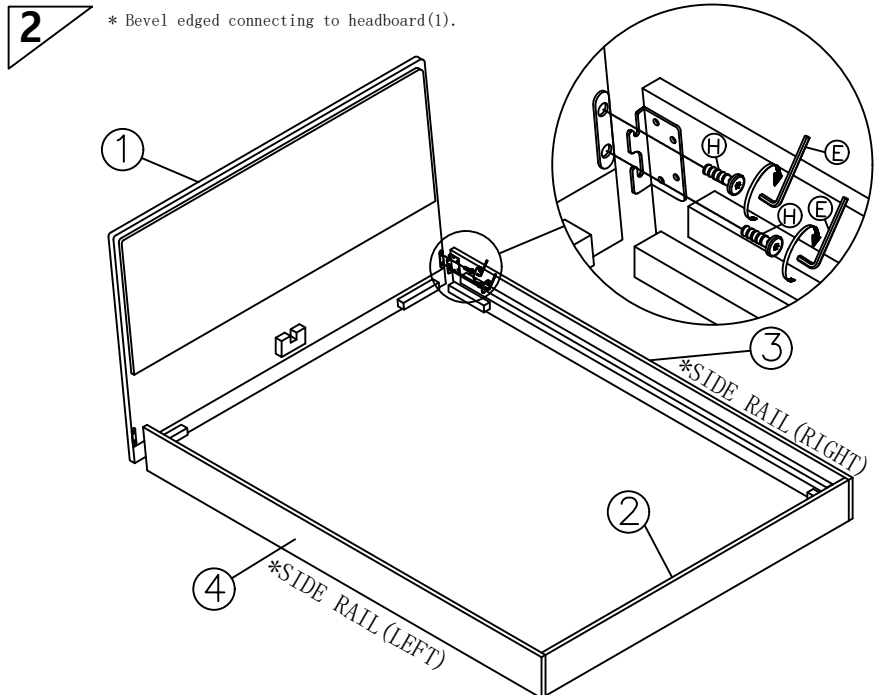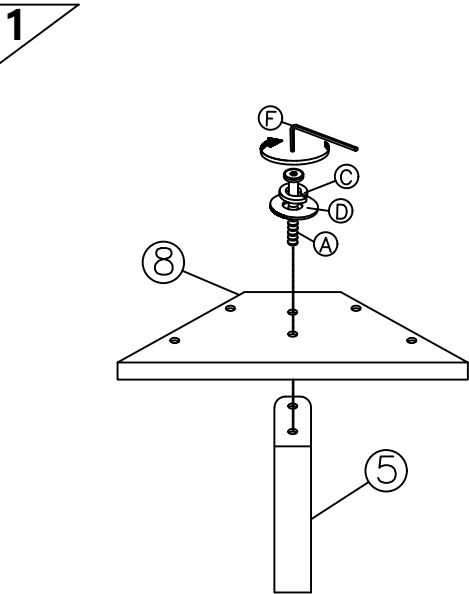


CODING
-655148




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

fyndfurniture.com

4

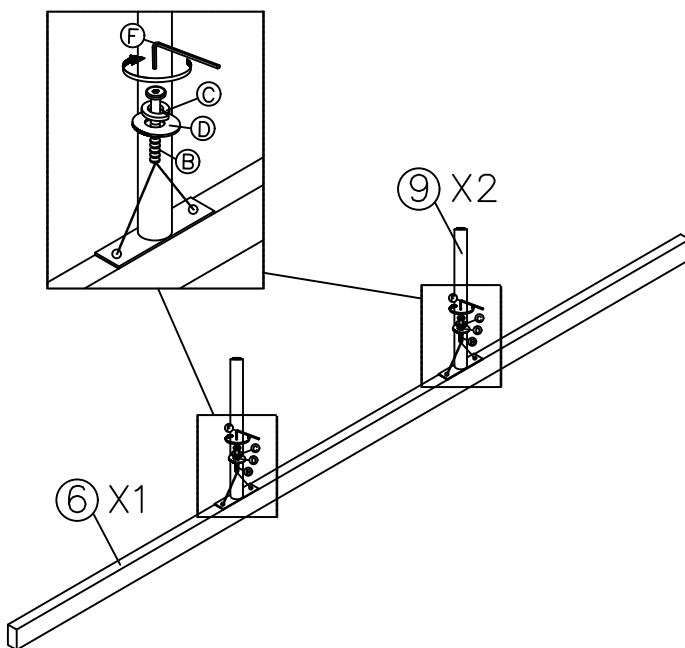

5

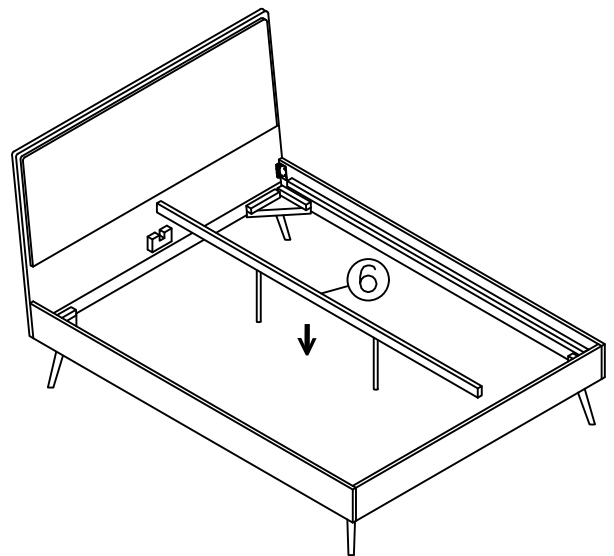

5

