

CODING
- 655164
- 655165



nesthouz.com

Read the instruction carefully . Remove all the wrapping material staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure you have all part before you start assembling. Place all the wooden furniture part on a clean and flat surface, such as carpet or rubbermat to prevent scratches.


ITEM	PHOTO	HARDWARE NAME	QTY
(A)		JCBC M6 X 35MM	8
(B)		JCBC M6 X 60MM	14
(C)		JCBC M6 X 70MM	8
(D)		SPRING WASHER M6	8
(E)		BEND WASHER 3014	8
(F)		BARREL NUT M6	8
(G)		ADJUSTER SCREW	8
(H)		CSK SCREW M4 X 25MM	24
(I)		ALLEN KEY M4 X 100MM WITH BALL	1

ITEM	PHOTO	PARTS NAME	QTY
(1)		HEADBOARD	1
(2)		HB LEG	2
(3)		FOOTBOARD	1
(4)		SIDE RAIL	2
(5)		SLAT	4
(6)		CENTER RAIL	2
(7)		SUPPORT LEG	8
(8)		MDF BOARD	3

CODING
- 655164
- 655165



nesthouz.com


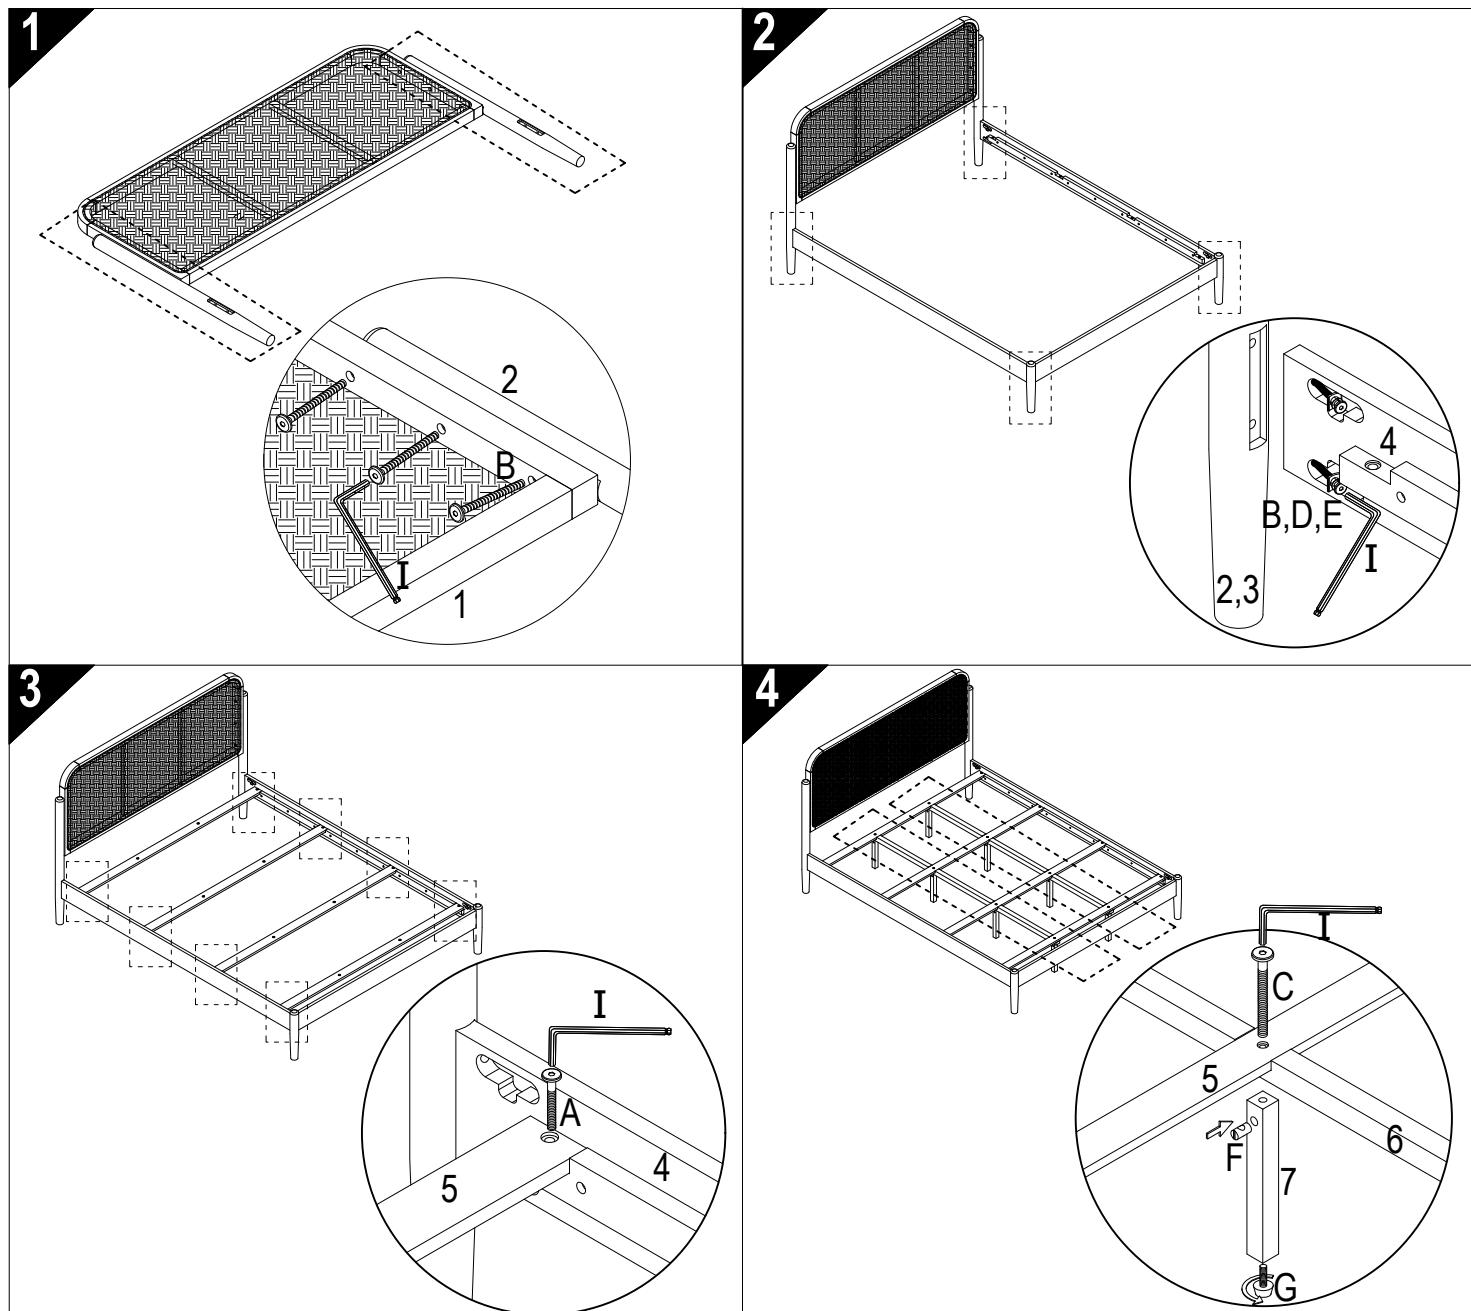


CODING
- 655164
- 655165




nesthouz.com

5

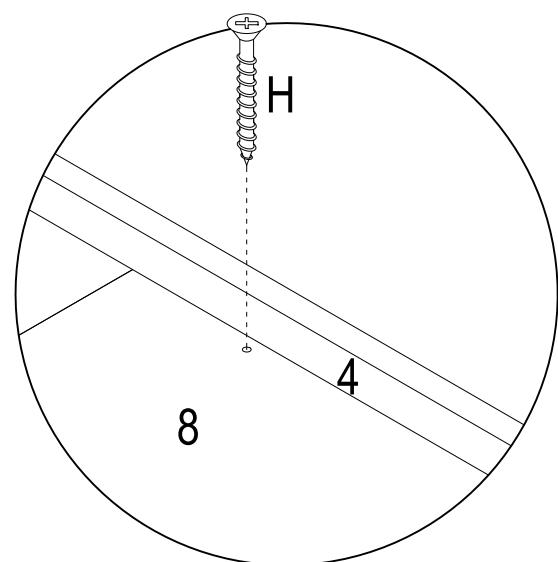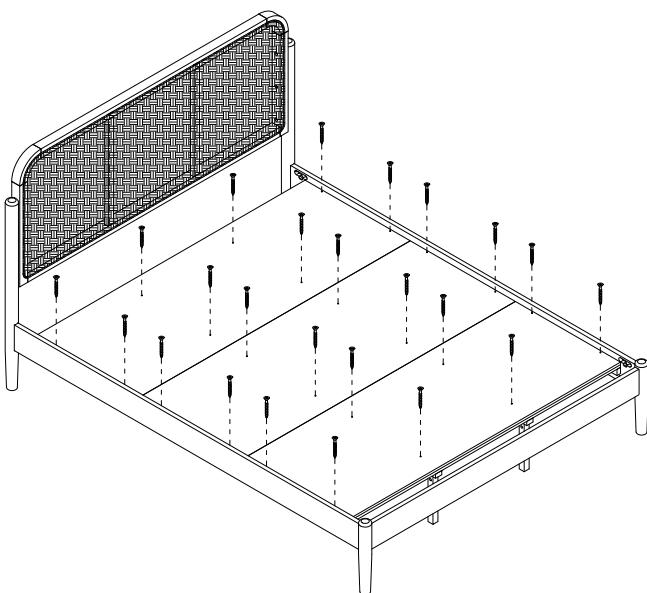

8

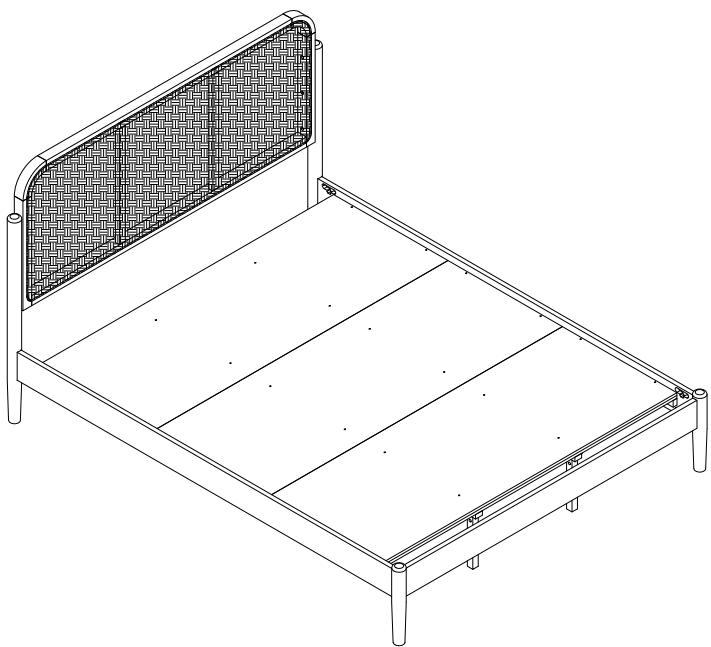

COMPLETED
ASSEMBLY